

WSM101 WIRELESS SERIAL MODULE



INSTALLATION GUIDE

IG_DINR_WSM101_E02A

WSM101 WIRELESS SERIAL

INSTALLATION GUIDE

Table of contents

step
01

CONFIGURE WSM101 DEVICE

Pages 3 to 8

step


01

CONFIGURE WSM101 DEVICE

DOWNLOAD AND INSTALL "TEKON CONFIGURATOR" FREE SOFTWARE FROM TEKON ELECTRONICS WEBSITE


01

Connect the *WSM101* to the *Micro-USB* cable.

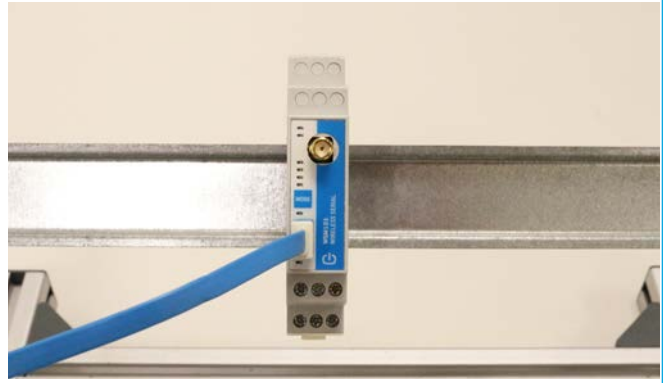


02

Connect the *Micro-USB* cable to the computer.

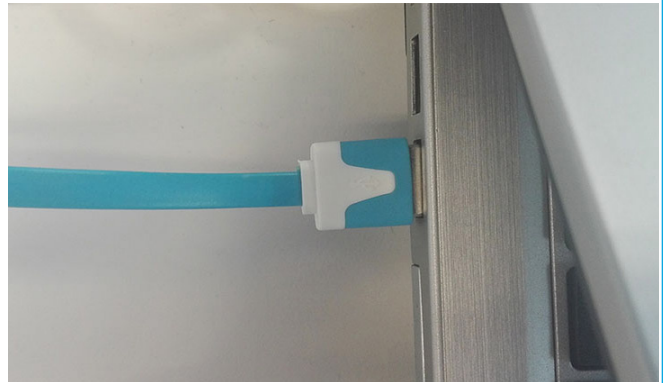

03

Open *Tekon Configurator Software*

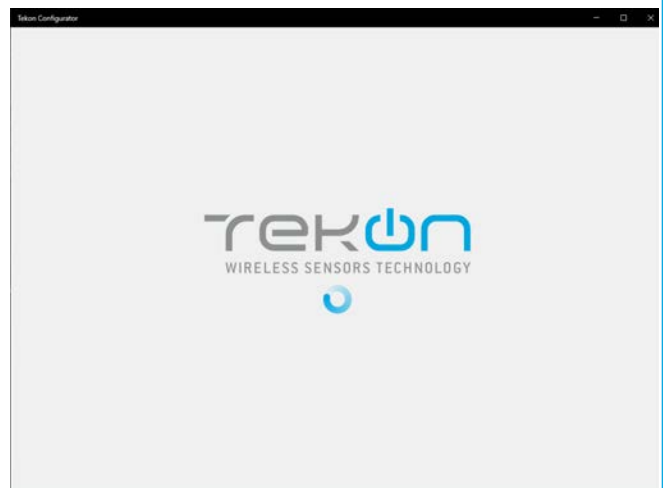

step

01


CONFIGURE WSM101 DEVICE

04


Open the PLUS WSM101 device page.

You can enter the device's page in the following ways:

1st option: Click on "SMART TRANSMITTERS" in the left menu and then click on the device.

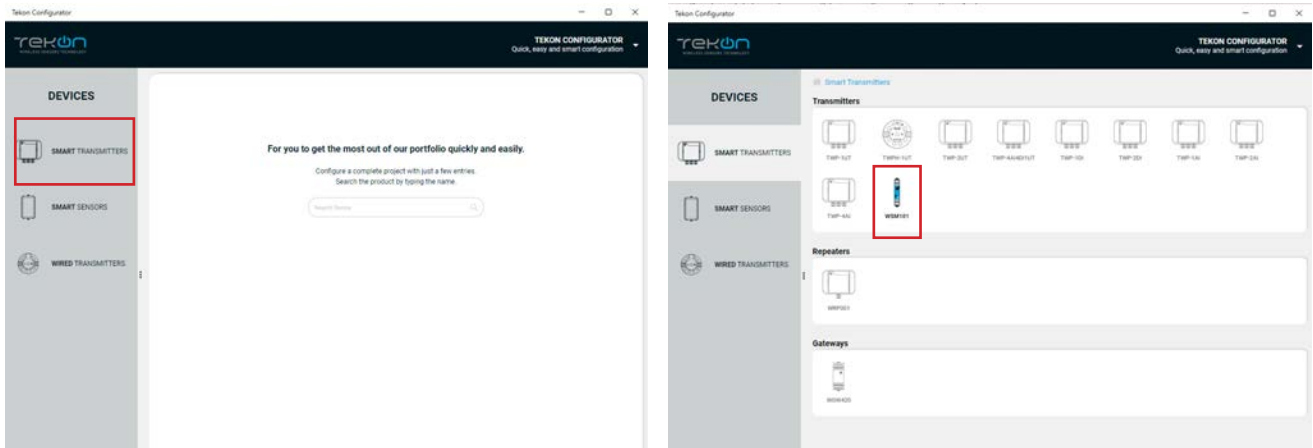

2nd option: Type the name of the device in the "Search Device" field on the home page and select.

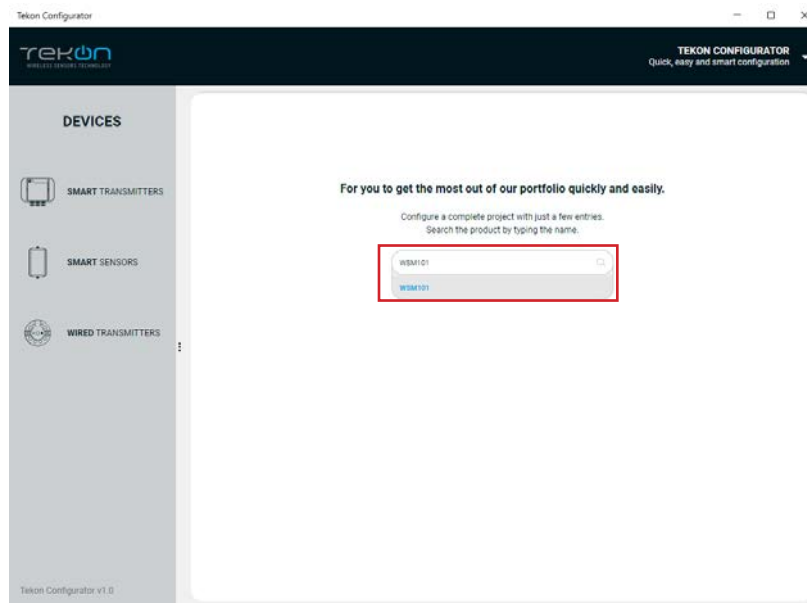


step
01

CONFIGURE WSM101 DEVICE

05

Load the "Port COM" corresponding to the WSM101

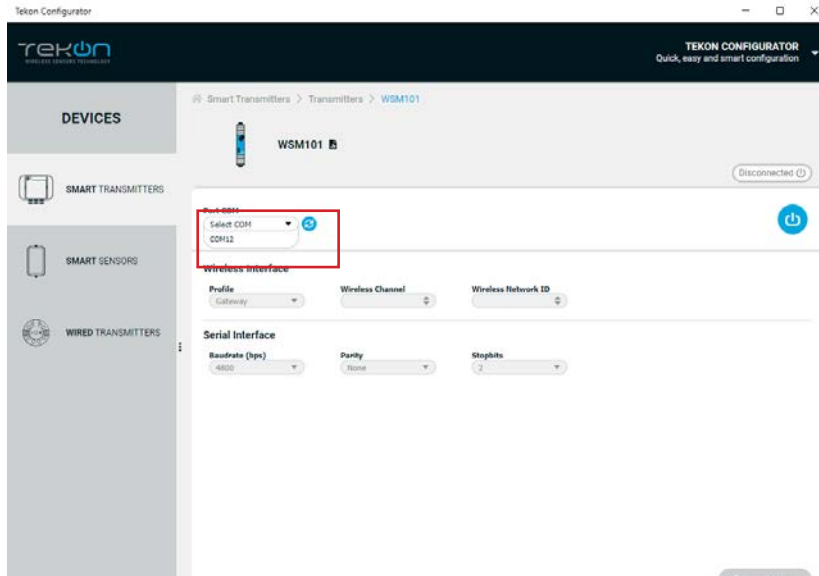


NOTE:

If the USB cable has already been connected before opening the device page, "Port COM" will appear in the list, otherwise you need to click on the "🔌" button.

06

Select corresponding *Port COM*².

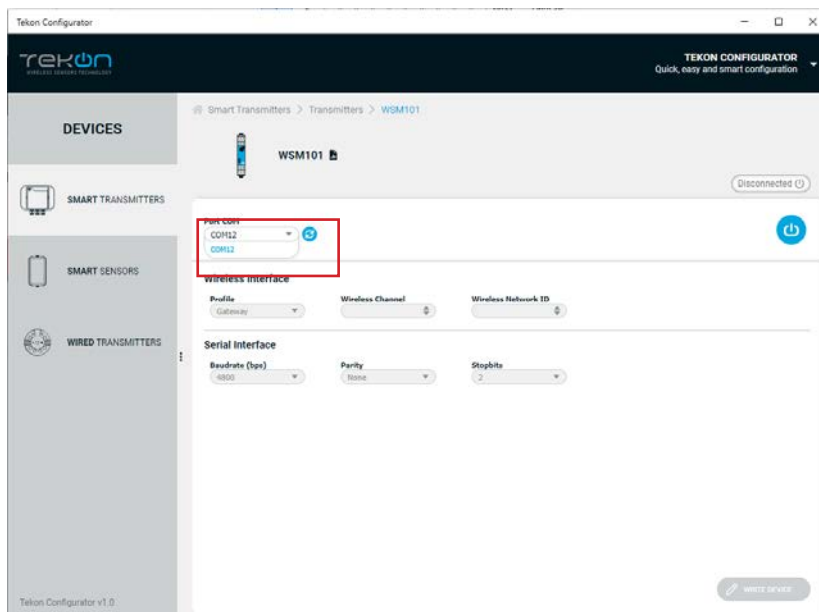


² You can check device's serial port name in "Device Manager" on Microsoft® Windows® operating system.

step
01 | CONFIGURE WSM101 DEVICE


07

Click on the “Connect” button () to enter *Configuration Mode*.

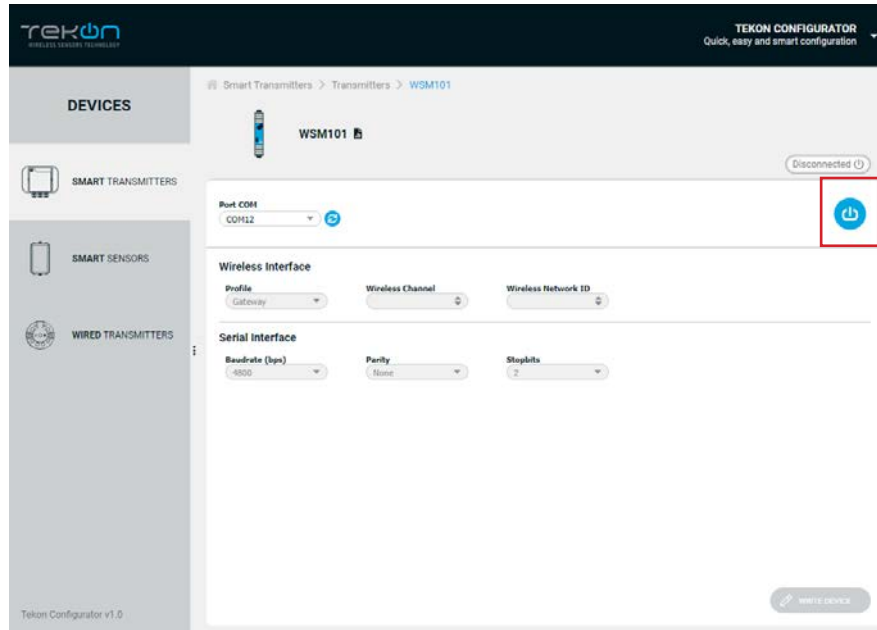


08

The software will connect to the device.

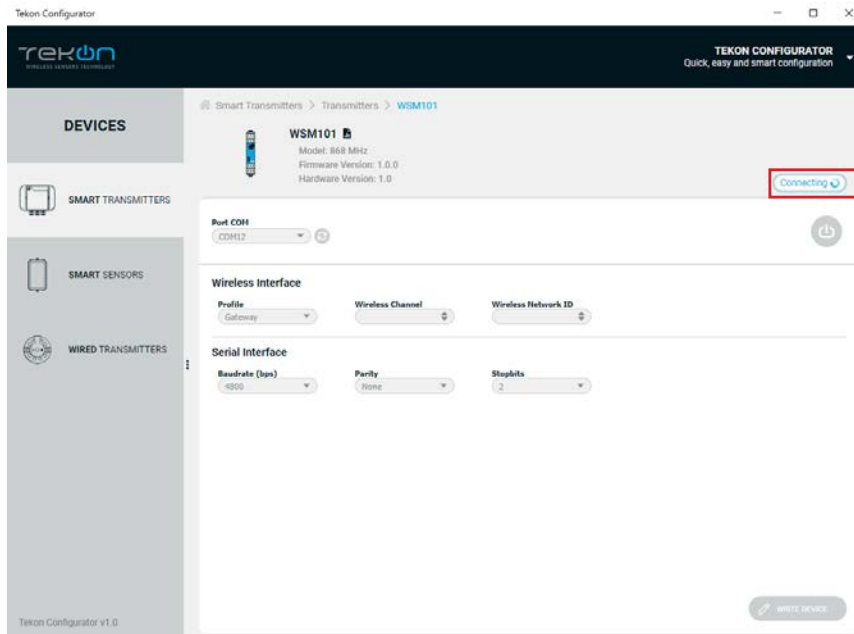

NOTE:




If the software is unable to connect to the device, the  status is displayed. If it hasn't connected, go back to the previous steps and check the port COM.

step
01

CONFIGURE WSM101 DEVICE


09

When the software connects to the device, the “Connected” message will be displayed.

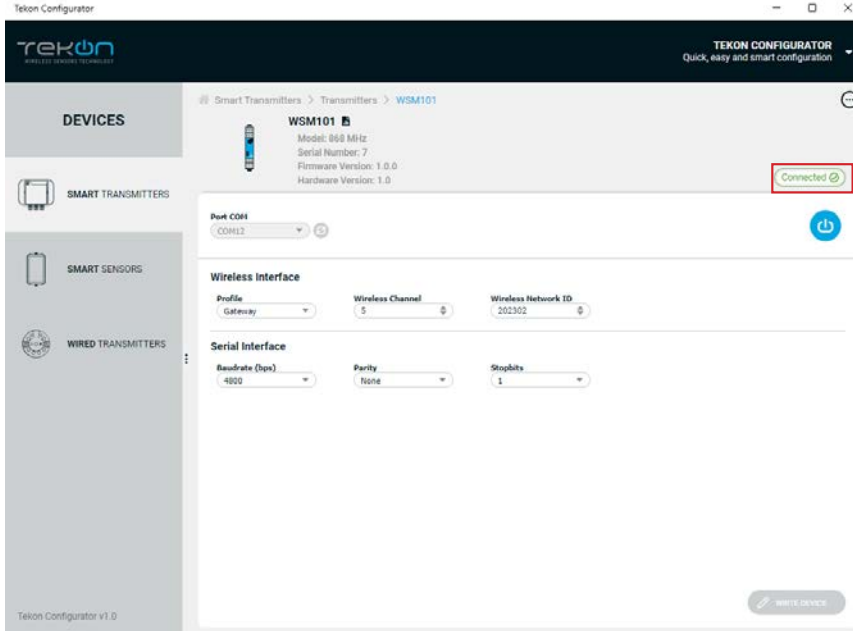

10


Tekon Configurator will recognize the default configuration. To set a gateway profile, choose the device profile *Gateway*.

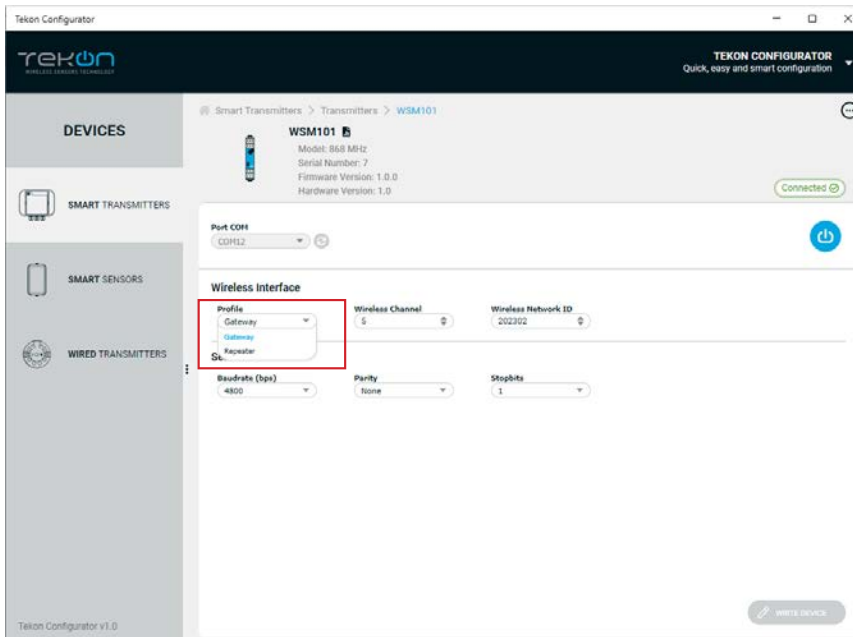

step
01 | CONFIGURE WSM101 DEVICE

11

Choose the *Wireless Channel*, *Wireless Network ID*, *Baudrate (bps)*, *Parity* and *Stopbits*.
Click on "*WRITE DEVICE*" to save the changes.

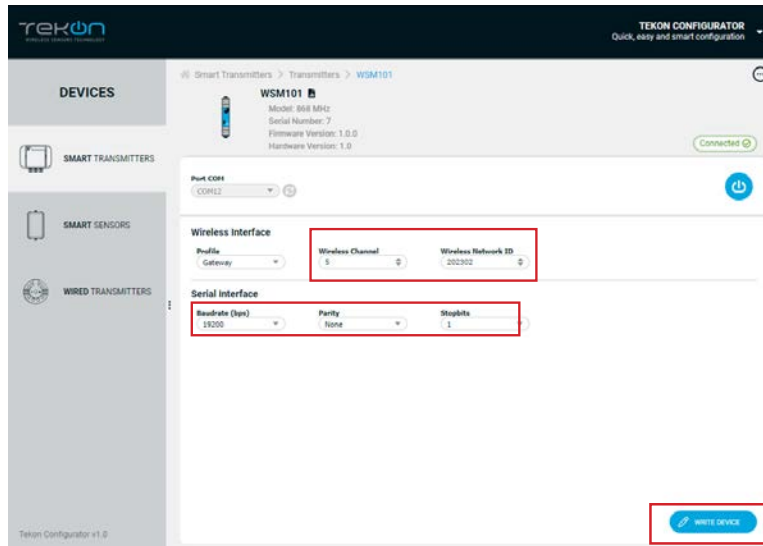

If the changes to the device have been written, the following symbol will appear (✓)

If not, the following symbol will appear (✘), try again and check that the device is connected correctly.




NOTE:

The wireless network connection between devices is ensured by setting the same Wireless Network ID and Wireless Channel parameters.

12


Click on the button (⏻) to exit *configuration mode* and return the device to normal operating mode.

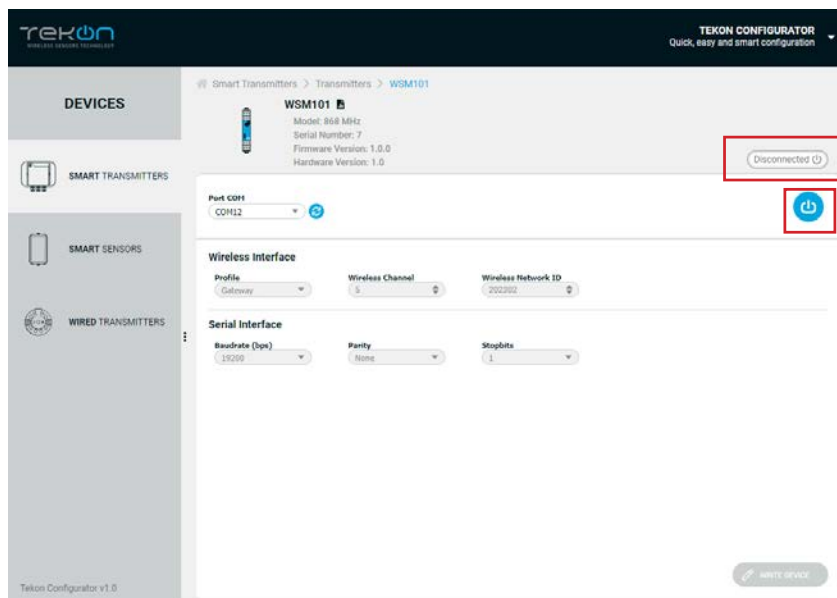

TEKON ELECTRONICS
a brand of Bresimar Automação S.A.

Avenida Europa, 460
Quinta do Simão
3800-230 Aveiro
PORTUGAL

 P.: +351 234 303 320
M.: +351 933 033 250
E.: sales@tekonelectronics.com



Cofinanciado por:



UNIÃO EUROPEIA
Fundo Europeu
de Desenvolvimento Regional