



# PLUS TWP-4AI INSTALLATION GUIDE

IG\_PLUS\_TWP-4AI\_E01A

# PLUS TWP-4AI WIRELESS SYSTEM INSTALLATION GUIDE

## Table of contents

step  
**01** **WG420 PLUS WIRELESS GATEWAY CONFIGURATION**  
Pages 4 to 12

---

step  
**02** **TWP4AI PLUS WIRELESS TRANSMITTER CONFIGURATION**  
Pages 13 to 19

---

step  
**03** **TWP4AI TRANSMITTER ANALOG INPUT CONFIGURATION**  
Pages 20 to 23

---

step  
**04** **TWP4AI TRANSMITTER DIGITAL INPUT CONFIGURATION**  
Pages 24 to 26

---

step  
**05** **TWP4AI TRANSMITTER DIGITAL OUTPUTS CONFIGURATION**  
Pages 27 to 32

# PLUS TWP-4AI WIRELESS SYSTEM INSTALLATION GUIDE

## Table of contents

### **5.1 LINK LOST OUTPUT**

Page 28

### **5.2 REMOTE CONTROL OUTPUT**

Page 30

### **5.3 EXTERNAL POWER CONTROL OUTPUT**

Page 31

---

## step **06**

### **WG420 GATEWAY ANALOG OUTPUTS CONFIGURATION**

Pages 33 to 35

---

## step **07**

### **WRP001 PLUS WIRELESS REPEATER CONFIGURATION**

Pages 36 to 41

---

## step **08**

### **SITE SURVEY MODE**

Pages 42 and 43

---

step  
**01**

**WGW420 PLUS WIRELESS GATEWAY CONFIGURATION**

WG420 PLUS WIRELESS GATEWAY CONFIGURATION | step **01**

TEKON CONFIGURATOR SOFTWARE is only compatible with the Microsoft® Windows® Operating System.

**01** Connect the antenna to the Gateway.



**02** **Wiring**  
Connect the power supply and then the RS485-USB cable to the Gateway.



Wire Indication:  
Blue - GND; Brown - +24 VDC; Orange - Data+ (A); Black - GND; Yellow - Data- (B)

**03** Power ON the device.




step

**01**

WG420 PLUS WIRELESS GATEWAY CONFIGURATION


**04**

Check device connection state by LED indication.

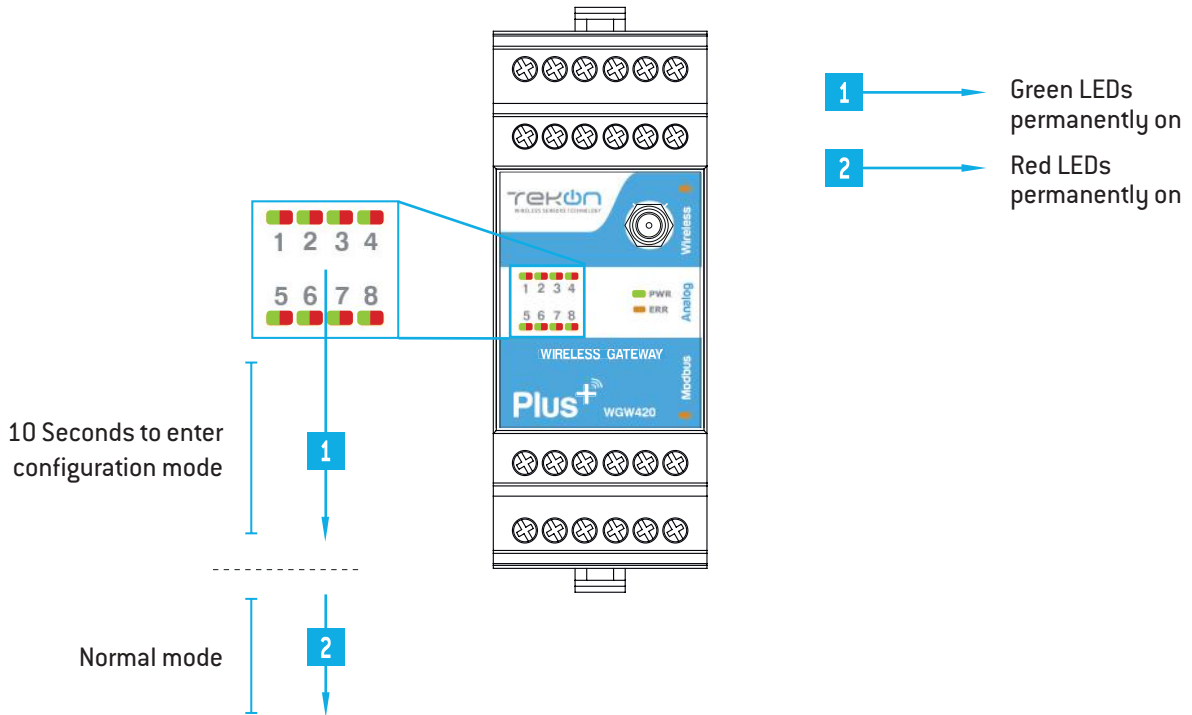

**05**


Open *Tekon Configurator Software*<sup>1</sup> and select *PLUS* >> *Gateway* >> *Configuration*

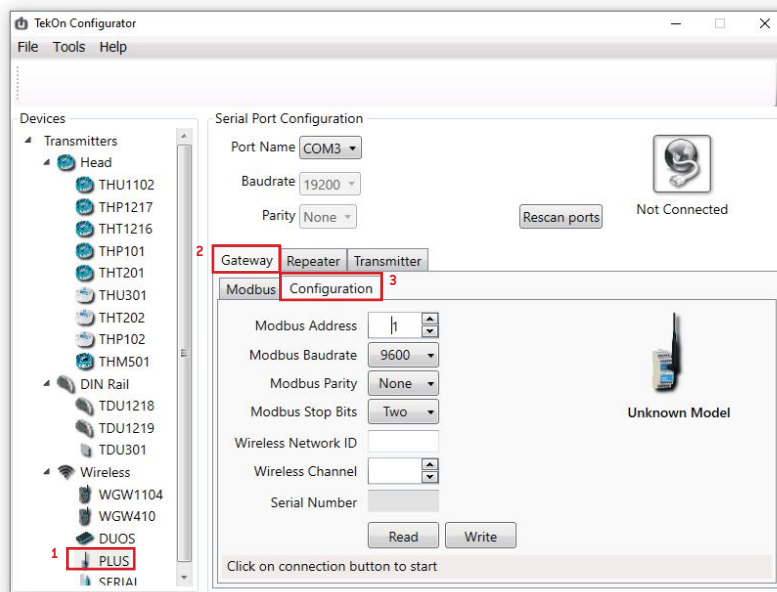

<sup>1</sup> Tekon Configurator software is free of charge and available at [www.tekonelectronics.com](http://www.tekonelectronics.com)


**06**

Select serial port corresponding to WG420 PLUS Wireless Gateway  
Click on the *Rescan Ports* button.

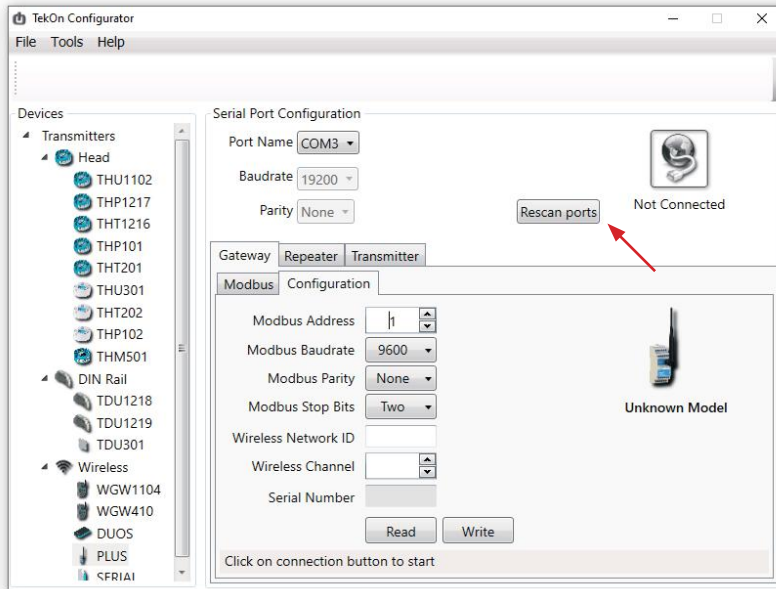

**07**

Select corresponding *Port name*<sup>2</sup>.

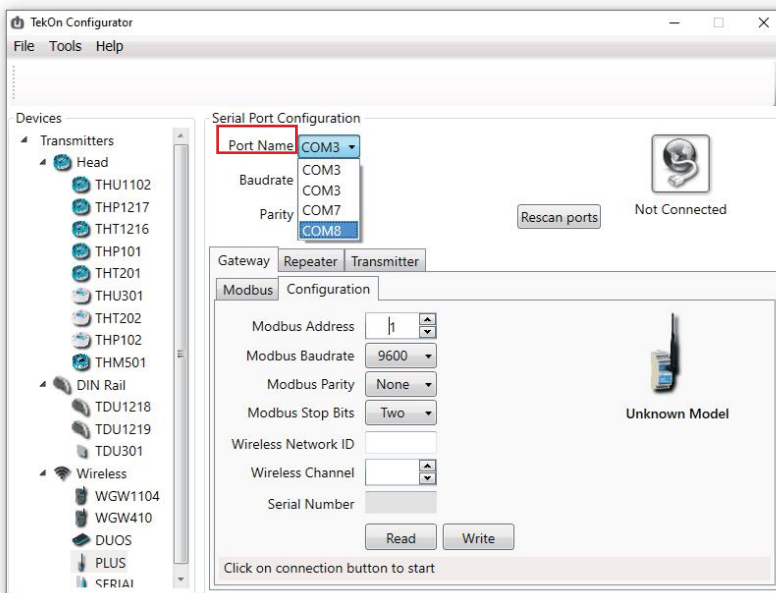

<sup>2</sup> You can check device's serial port name in "Device Manager" on Microsoft® Windows® operating system.

step

# 01

## WGW420 PLUS WIRELESS GATEWAY CONFIGURATION

08

Perform a power cycle on the *Gateway*.




**NOTE:**




After power up, you have 10 seconds to enter configuration mode by clicking on Connect button (  ) (while green LEDs are permanently on).

In this mode, you can manage device parameters: *Modbus Address*, *Modbus Baudrate*, *Modbus Parity*, *Wireless Network ID* and *Wireless Channel*.

09

Click on *Connect* (  ) button to enter configuration mode.

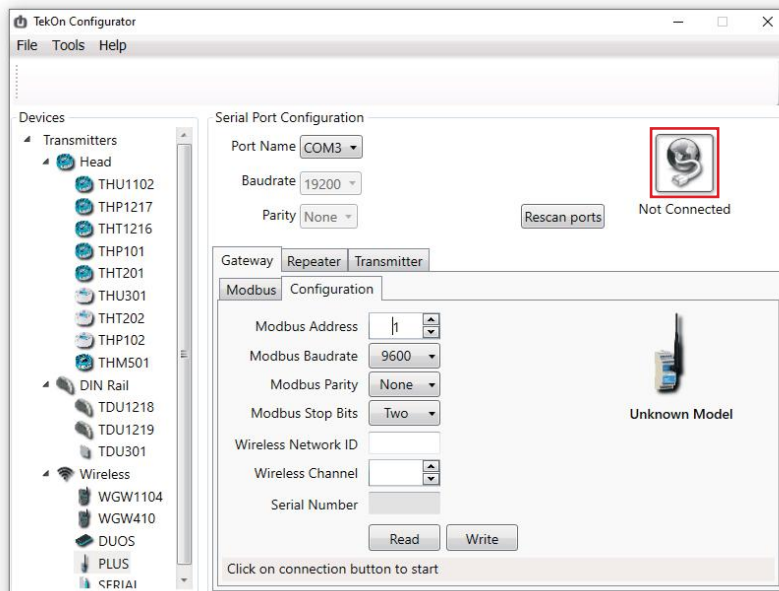





WG420 PLUS WIRELESS GATEWAY CONFIGURATION

**10**

The status string at the bottom of the software window provides feedback on ongoing operations.

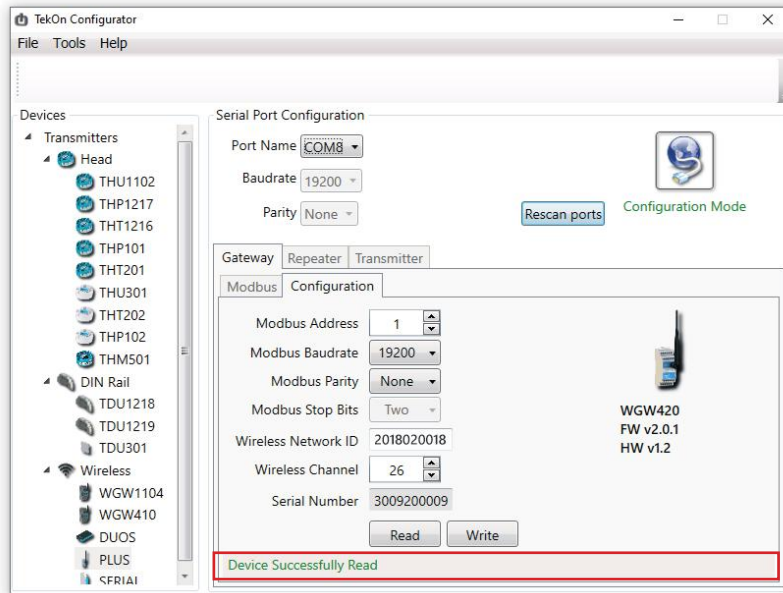

You can also verify configuration mode activation by checking LEDs on the gateway.

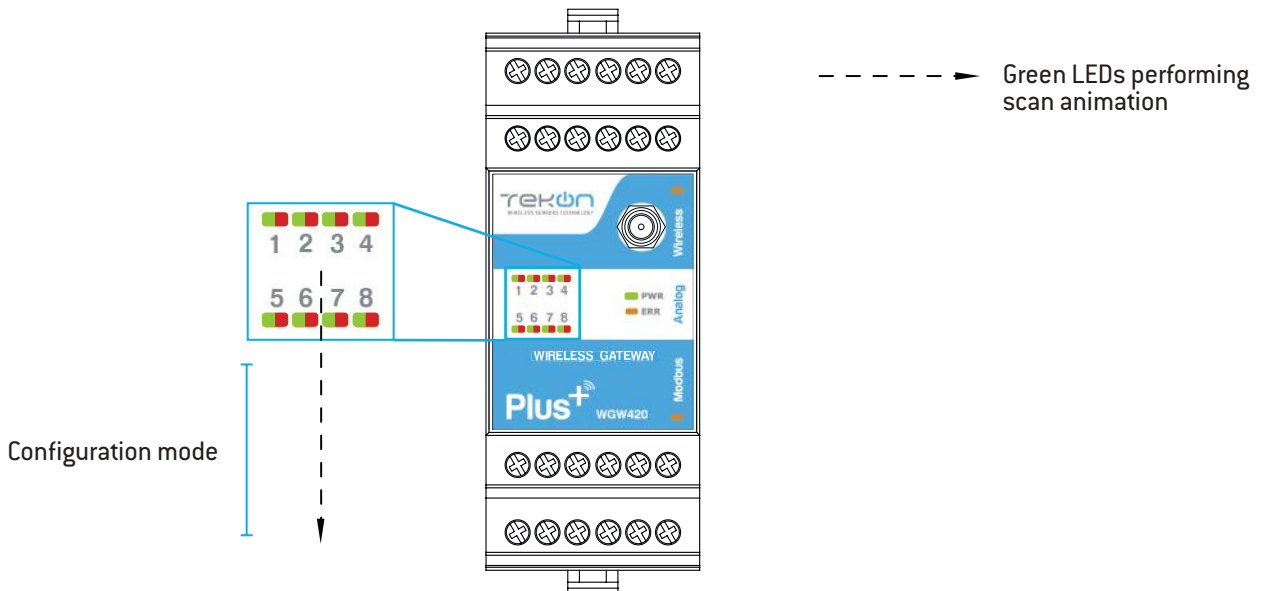


**NOTE:** When the 10-second time frame to enter configuration mode is exceeded, the LEDs will turn permanently red and the gateway will enter normal operation mode. To get back in configuration mode, you need to perform a power cycle - step 8.

step  
**01**

WGW420 PLUS WIRELESS GATEWAY CONFIGURATION

**11**

Take note of device configuration data available, namely: *Modbus Address*, *Modbus Baudrate*, *Modbus Parity*, *Wireless Network ID* and *Wireless Channel*.

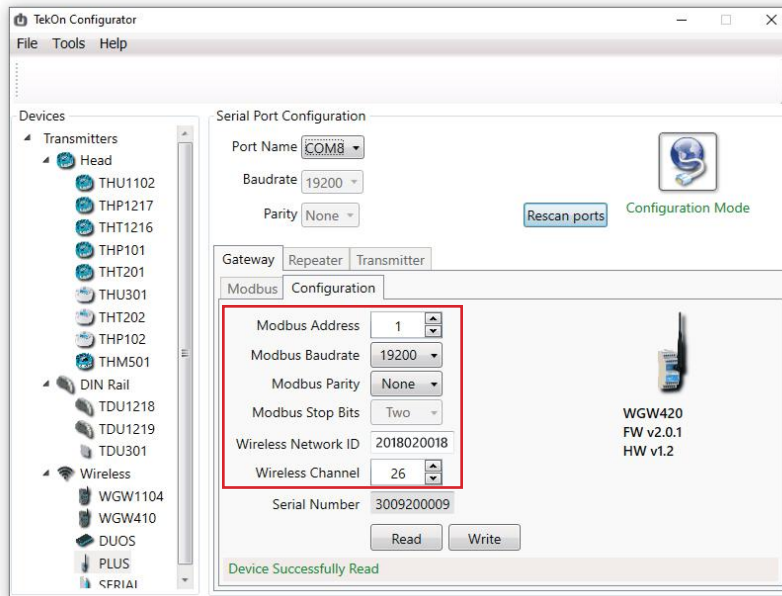


**NOTE:**

The wireless network connection between devices is ensured by setting the same *Wireless Network ID* and *Wireless Channel* parameters.

**12**


Click on *Disconnect* (🌐) button.

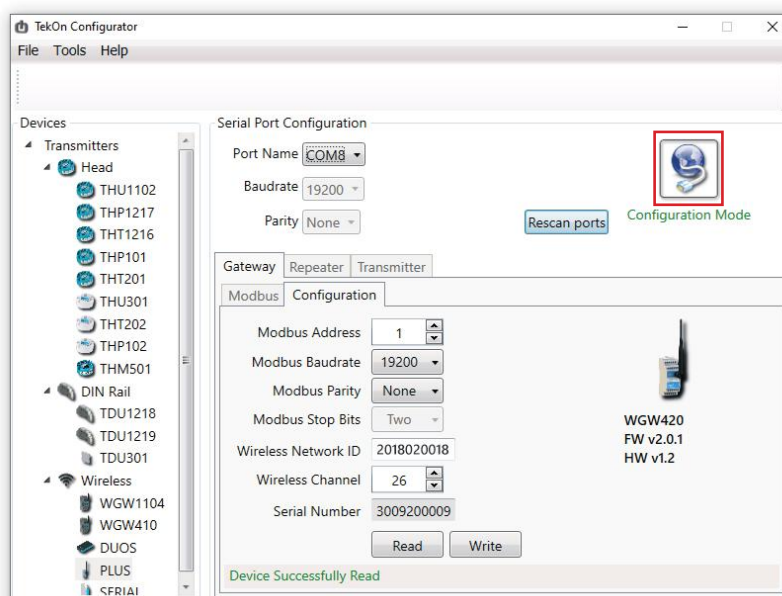

**13**

**Modbus Communication**


Select *Modbus* tab of the *Gateway* and set the previously saved configurations.

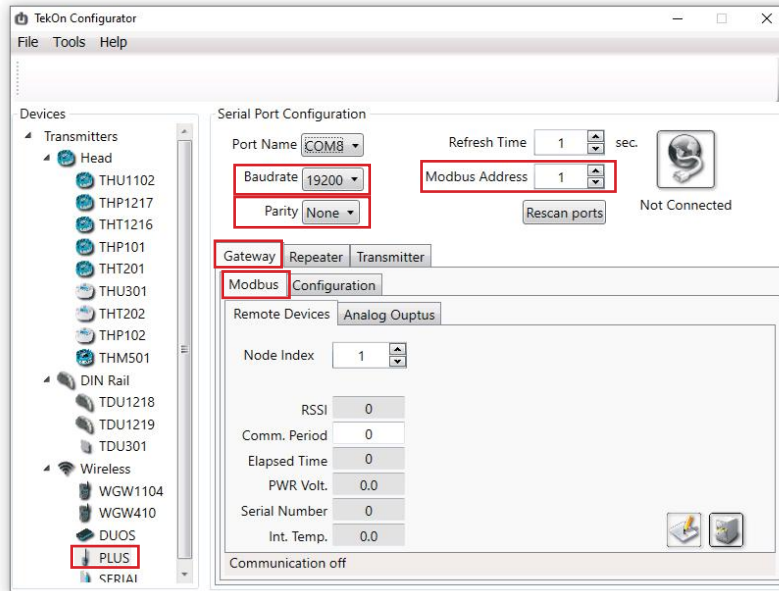

Ensure that *Port name*, *Baudrate*, *Parity* and *Modbus Address* fields are the same as those obtained in configuration mode.

**14**

Click on *Connect* (📶) button and check operation status at the bottom of the window.

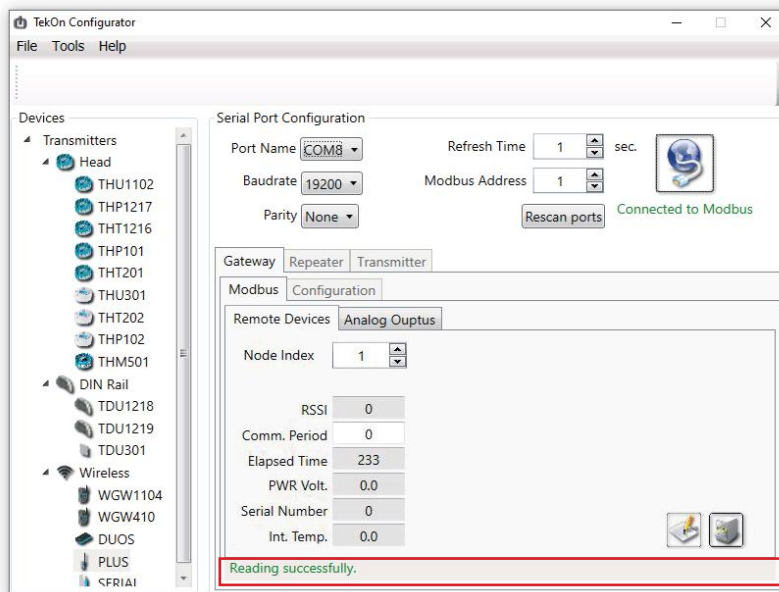

The messages *Connected to Modbus* and *Reading successfully* will appear if *Serial Port* configuration parameters are correct and the Modbus connection is established.

step


**01**

WG420 PLUS WIRELESS GATEWAY CONFIGURATION



**NOTE:**

See WG420 Datasheet to access LED indication information - page 4.

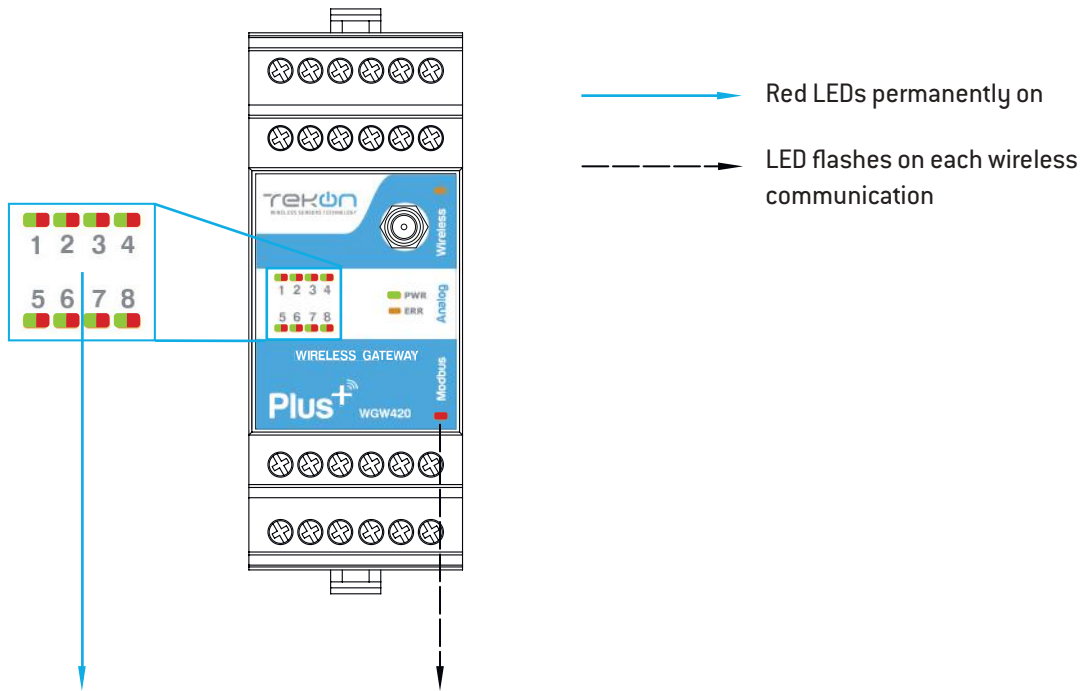

step  
**02**

**TWP-4AI PLUS WIRELESS TRANSMITTER CONFIGURATION**

step

# 02

## TWP4AI PLUS WIRELESS TRANSMITTER CONFIGURATION

**01**

Loosen the 4 screws of the case and open it.




**02**

Connect a micro USB cable to the computer and then to *TWP4AI PLUS Wireless Transmitter*.



**03**

Open a new window of *Tekon Configurator Software* and select *PLUS >> Transmitter* menu.

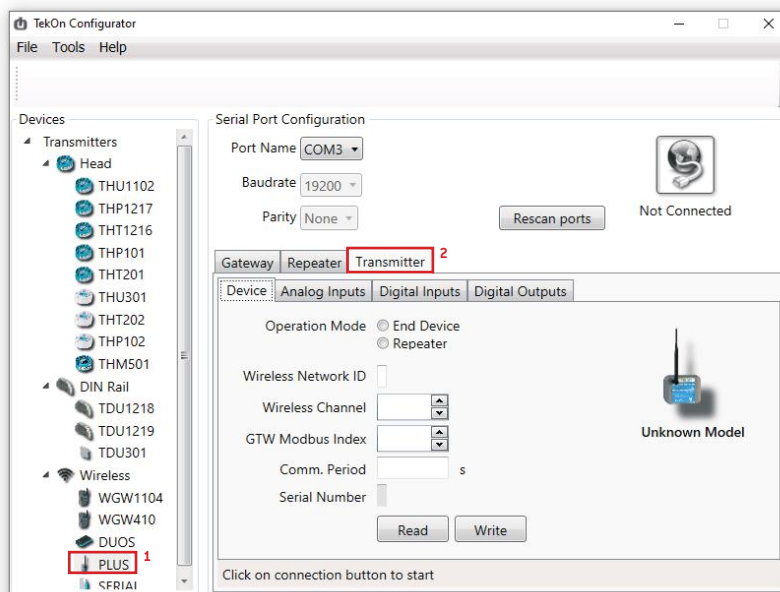

TWP4AI PLUS WIRELESS TRANSMITTER CONFIGURATION

**04** Click on *Rescan Ports* button.

**05** Select corresponding *Port name*<sup>1</sup>.

<sup>1</sup> You can check device's serial port name in "Device Manager" on Microsoft® Windows® operating system.



step

**02**

TWP4AI PLUS WIRELESS TRANSMITTER CONFIGURATION

**06**

Click on *Configuration Mode* (🌐) button.

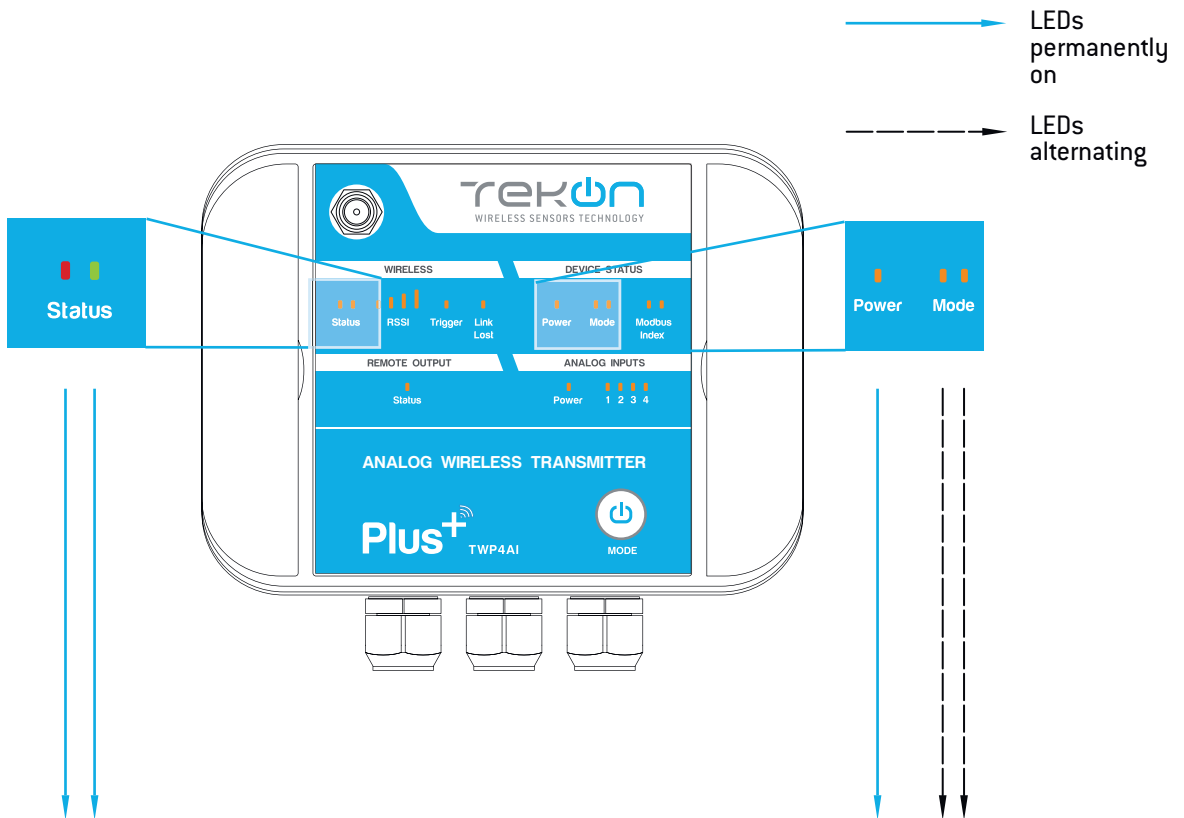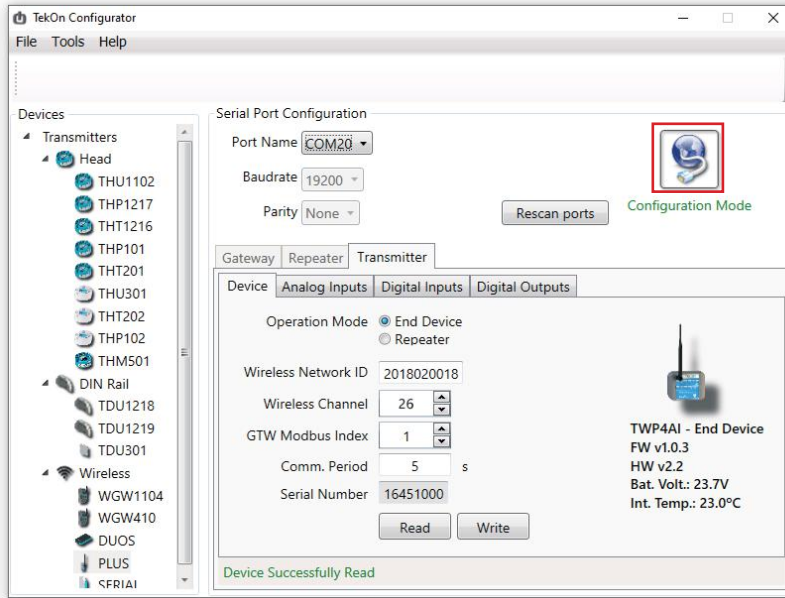



TWP4AI PLUS WIRELESS TRANSMITTER CONFIGURATION

**07**


Configure *Wireless Network ID* and *Wireless Channel* previously obtained from *Gateway*.

The wireless connection between both devices is ensured by setting the same *Wireless Network ID* and *Wireless Channel* parameters.

Gateway Modbus Index will define the modbus registers window used to store information sent by the transmitter.

Each transmitter should have a different *Gateway Modbus Index* in order to avoid information override.

Click on *Write* button to update *Transmitter* settings.

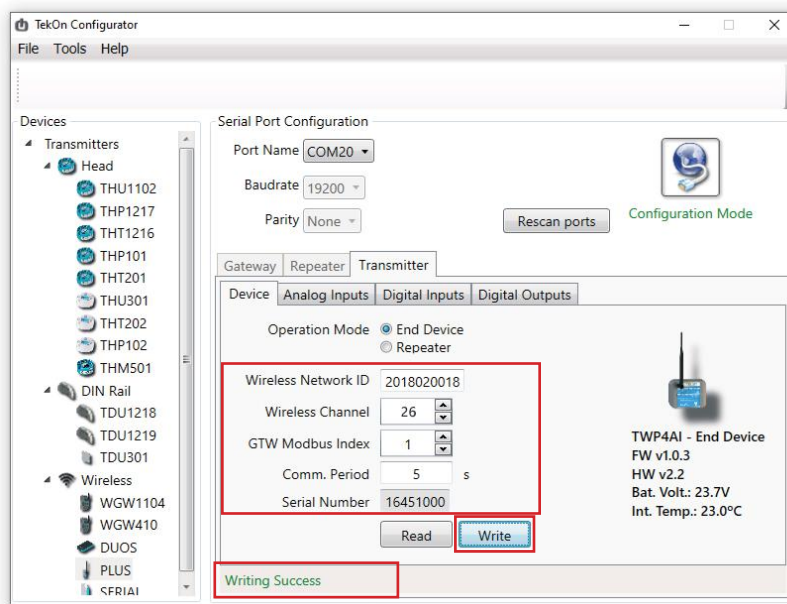



step

**02**

TWP4AI PLUS WIRELESS TRANSMITTER CONFIGURATION

**08**

Click on *Configuration Mode* (🖱️) button to exit setup and resume normal operating mode.

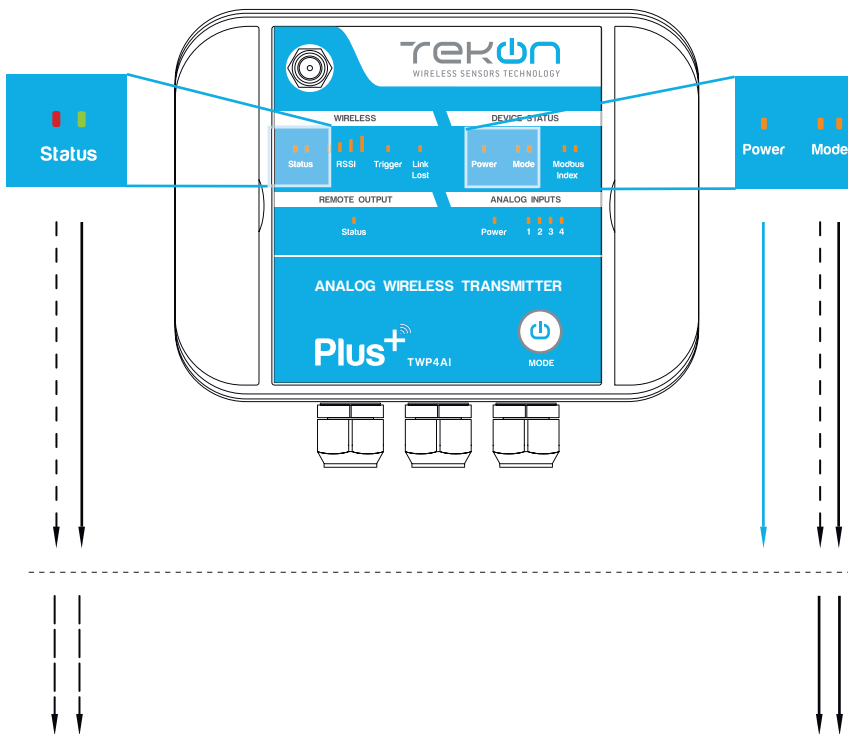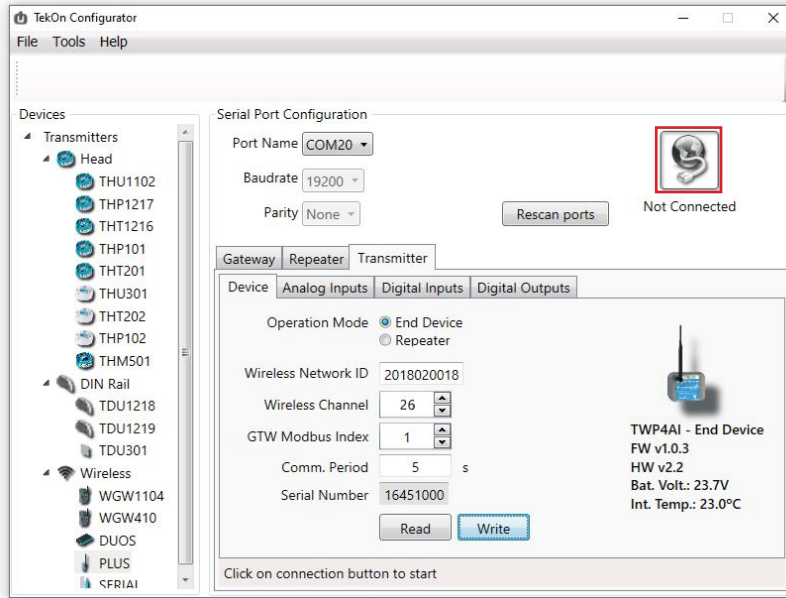

- ▶ LED permanently on
- - - - -▶ LEDs alternating
- - - - -▶ LEDs flashing until wireless connection is established
- ▶ LED permanently off

When connected to the Gateway

## TWP4AI PLUS WIRELESS TRANSMITTER CONFIGURATION

step  
**02**

After clicking on *Disconnect* button, the device will permanently attempt to connect to a wireless network. If there is no communication, the Status LED flashes slowly and the Mode LED flashes quickly. When there's a successful connection directly to a wireless network, both status LEDs alternate quickly - during 1 minute if the transmitter is operating as end device or permanently if operating as repeater.

**NOTE:**

Make sure that the devices are at a distance of at least 3 meters or remove the antenna from the gateway (in case both devices are near each other).

step  
**03**

**TWP-4AI TRANSMITTER ANALOG INPUTS CONFIGURATION**

TWP4AI TRANSMITTER ANALOG INPUTS CONFIGURATION **step 03**



**NOTE:**


By default, analog inputs are switched OFF for power optimization. Each analog input can be configured independently, as current input [0..20mA] or voltage input [0..10V]

**01**

To enter in *Configuration Mode* follow steps 01 to 05 of TWP4AI PLUS Wireless *Transmitter* Configuration.


**02**

In *Tekon Configurator Software* select *PLUS* >> *Transmitter* >> *Analog Inputs* menu

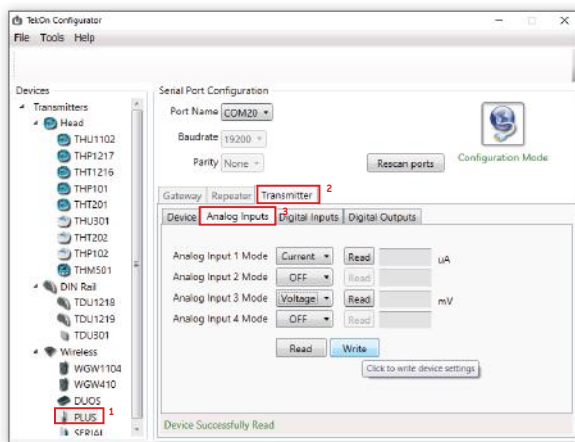

**03**

Select *Current* option on Analog Input 1 and *Voltage* option on Analog Input 3 operation mode and click *Write*.

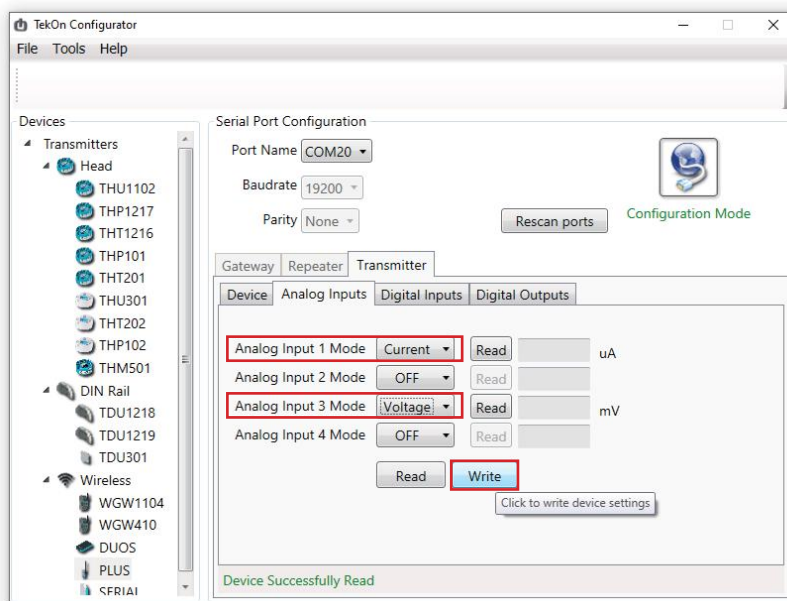


step

**03**

TWP4AI TRANSMITTER ANALOG INPUTS CONFIGURATION

**04**


The status string at the bottom of the software window provides feedback on ongoing operations.

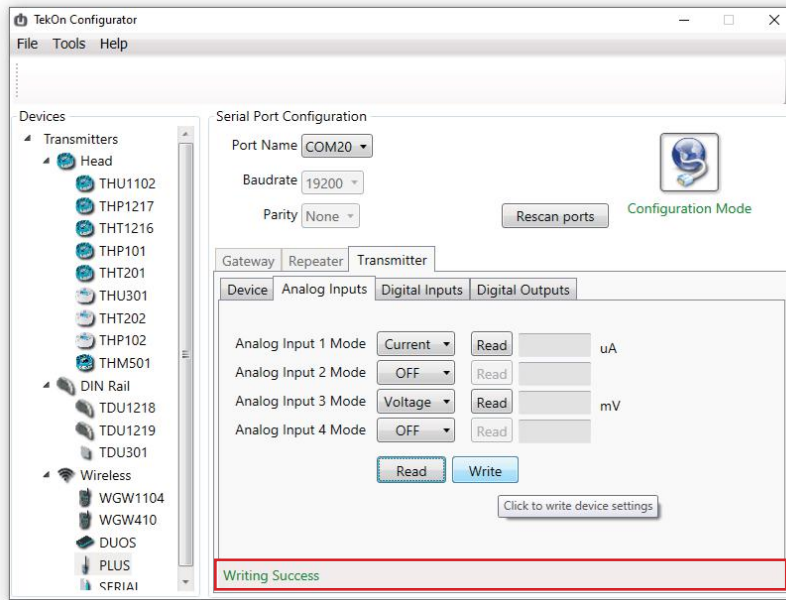

**05**

**Wiring**


Wire the device according to the diagram below.

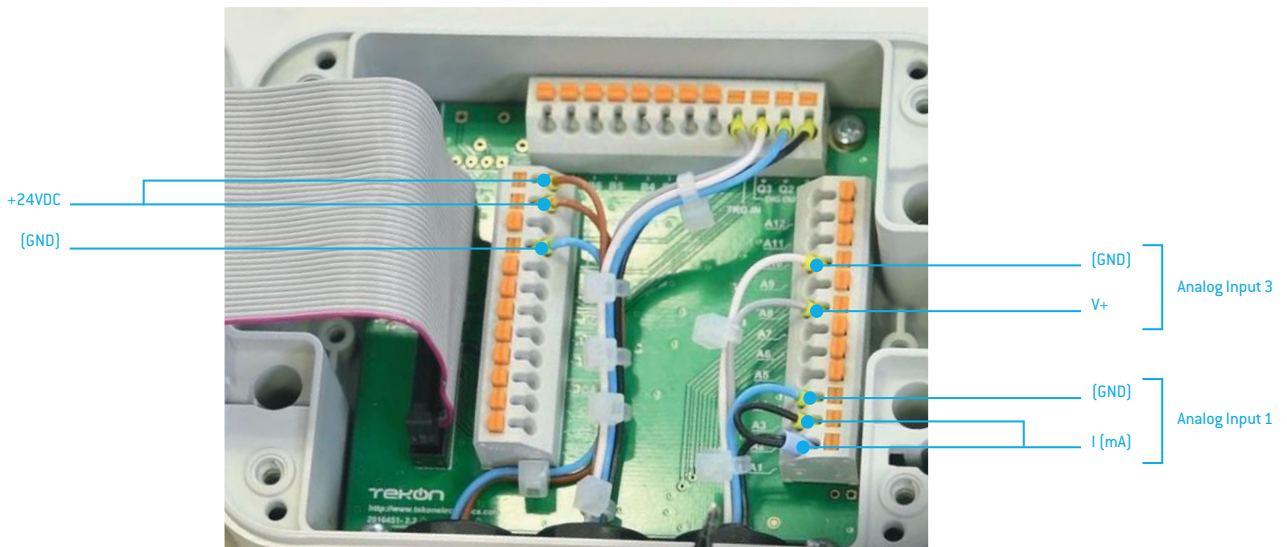

TWP4AI TRANSMITTER ANALOG INPUTS CONFIGURATION **step 03**

**06**


Validate configuration by clicking on *Read* button.

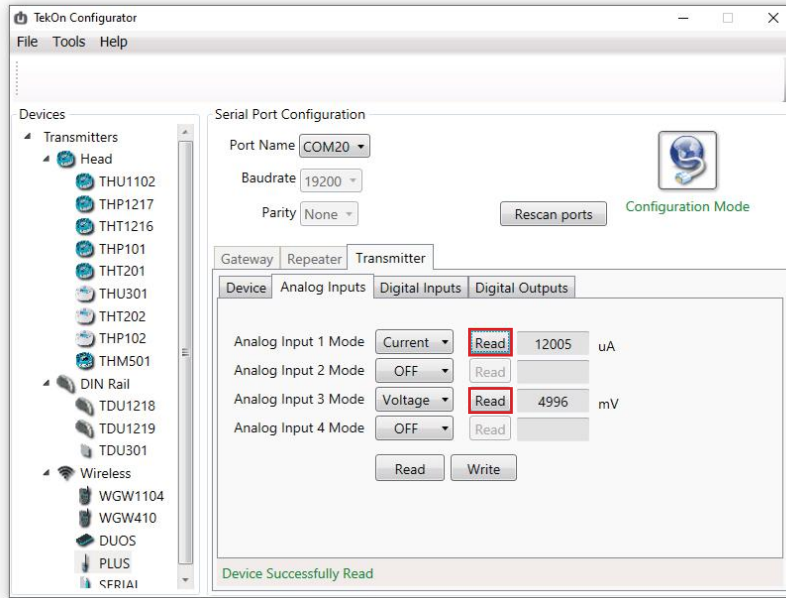

**NOTE:** Configuration and Operation validated. Measured value of current and voltage depend on the setup. In this example 12mA (12000uA) and 5V (5000 mV) are being injected.

**07**

Exit configuration mode and compare data sent by wireless communication.

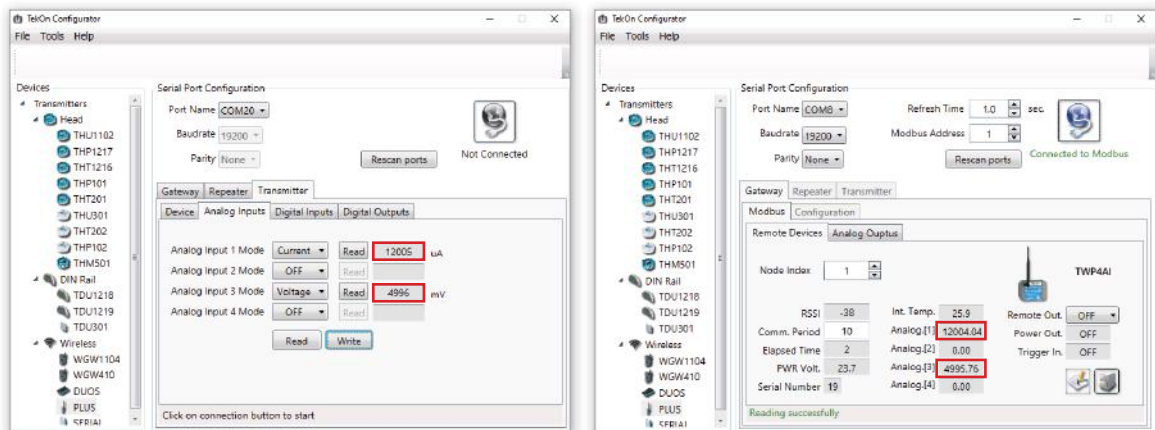

step  
**04**

**TWP-4AI TRANSMITTER DIGITAL INPUT CONFIGURATION**






**NOTE:**  
Sink type Digital Input.

**01**

To enter in *Configuration Mode* follow steps 01 to 05 of TWP4AI PLUS Wireless *Transmitter* Configuration.

**02**

In *Tekon Configurator Software* select *PLUS* >> *Transmitter* >> *Digital Inputs* menu.

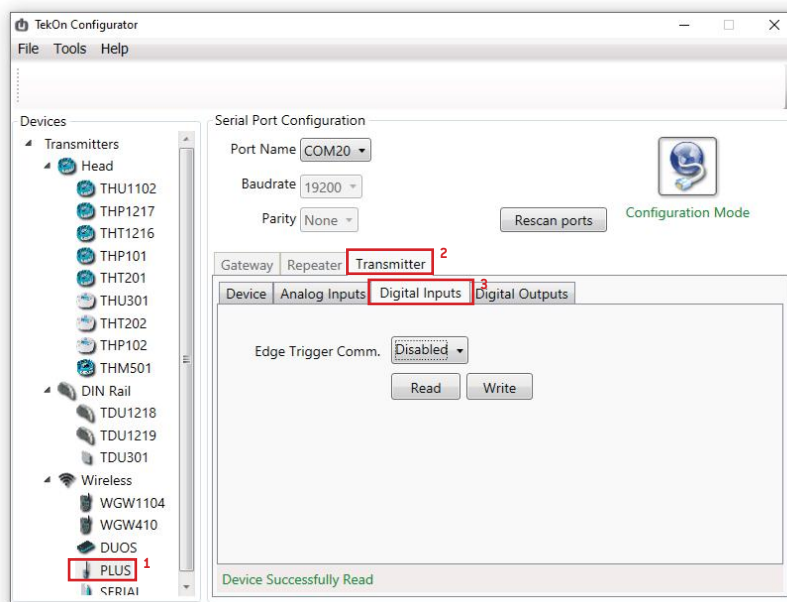


step

# 04

## TWP4AI TRANSMITTER DIGITAL INPUT CONFIGURATION

03


Select Operation Mode *Rising Edge* and click on *Write* button.

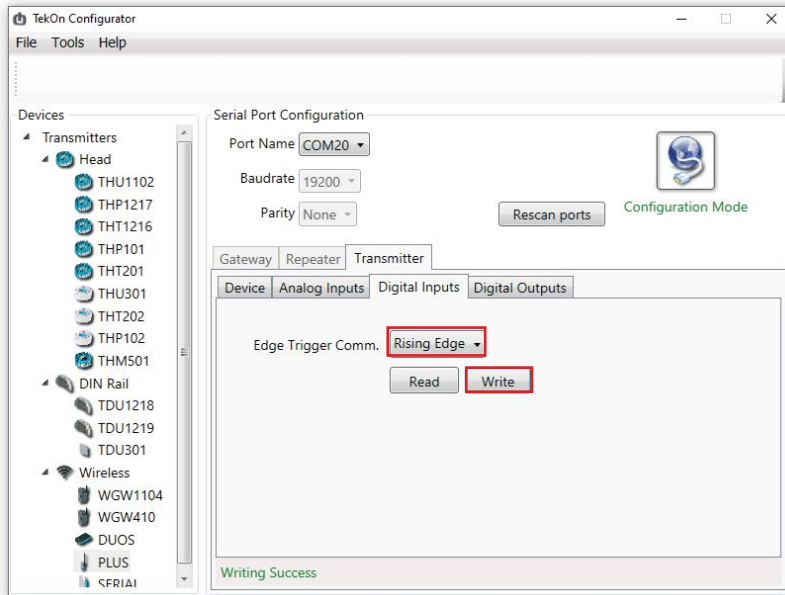

04

Validate functionality and click on *Disconnect* button.

Wait for the device to connect to the Gateway and observe data in Tekon Configurator window.

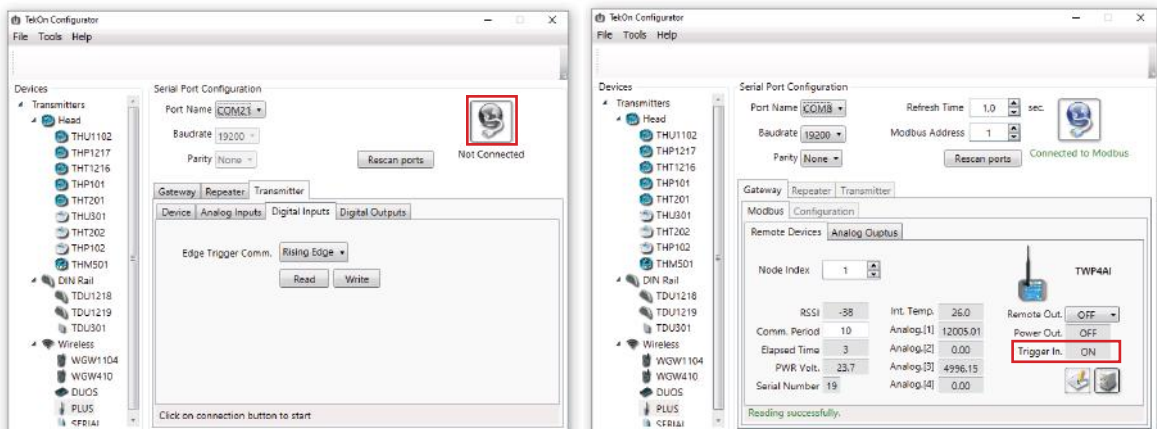

step  
**05**

**TWP-4AI TRANSMITTER DIGITAL OUTPUTS CONFIGURATION**

step

**05**


TWP4AI TRANSMITTER DIGITAL OUTPUTS CONFIGURATION

**01**

To enter in *Configuration Mode* follow steps 01 to 05 of TWP4AI PLUS Wireless *Transmitter* Configuration.

**02**


In *TekOn Configurator Software* select **PLUS** >> *Transmitter* >> *Digital Outputs* menu

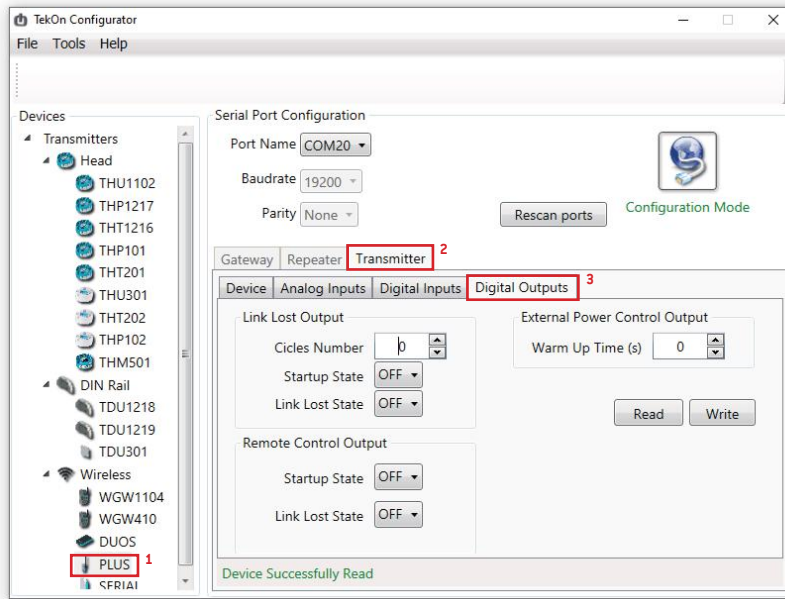

**03**

**Link Lost Output**


Output that outputs wireless connection state of the device.

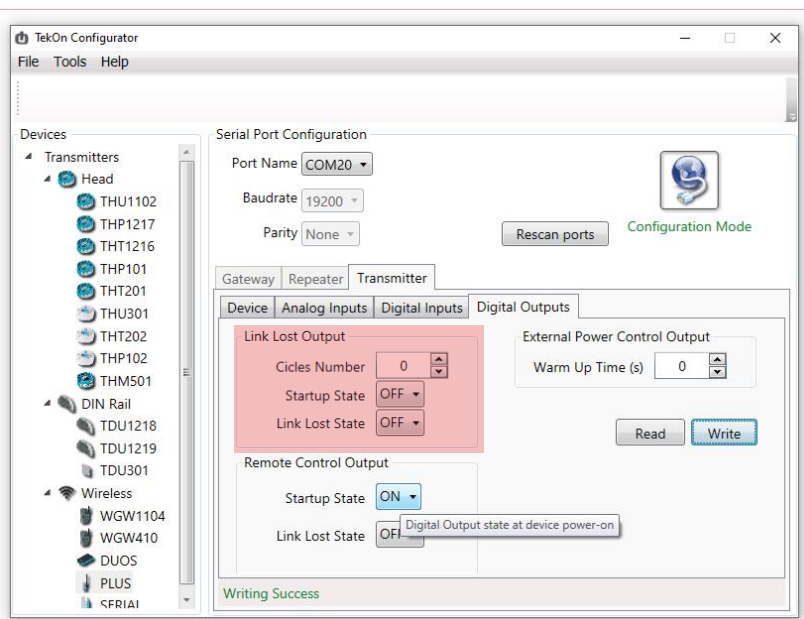

TWP4AI TRANSMITTER DIGITAL OUTPUTS CONFIGURATION **step 05**


**03.1**

Select *cycle number*, *start-up state* and *link lost state* and click on *Write* button.

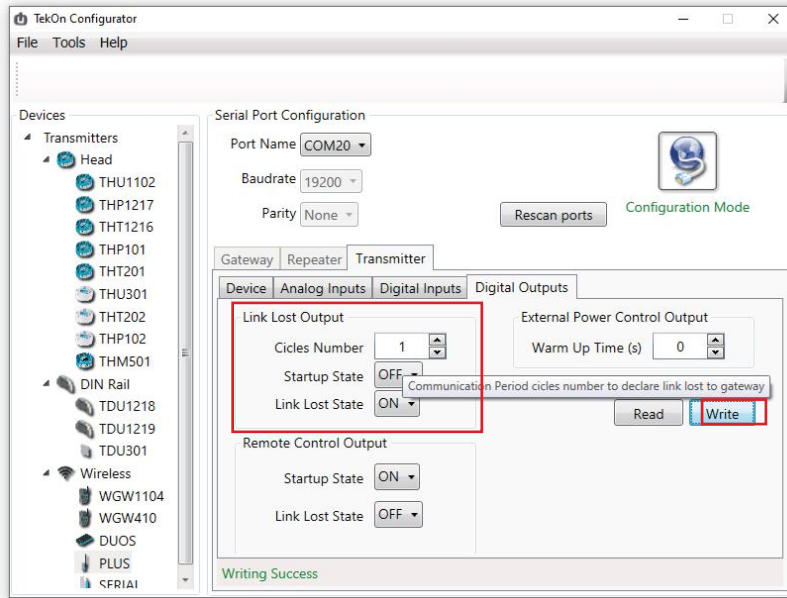

**03.2**

Exit configuration mode and verify setup by checking LEDs indicators..

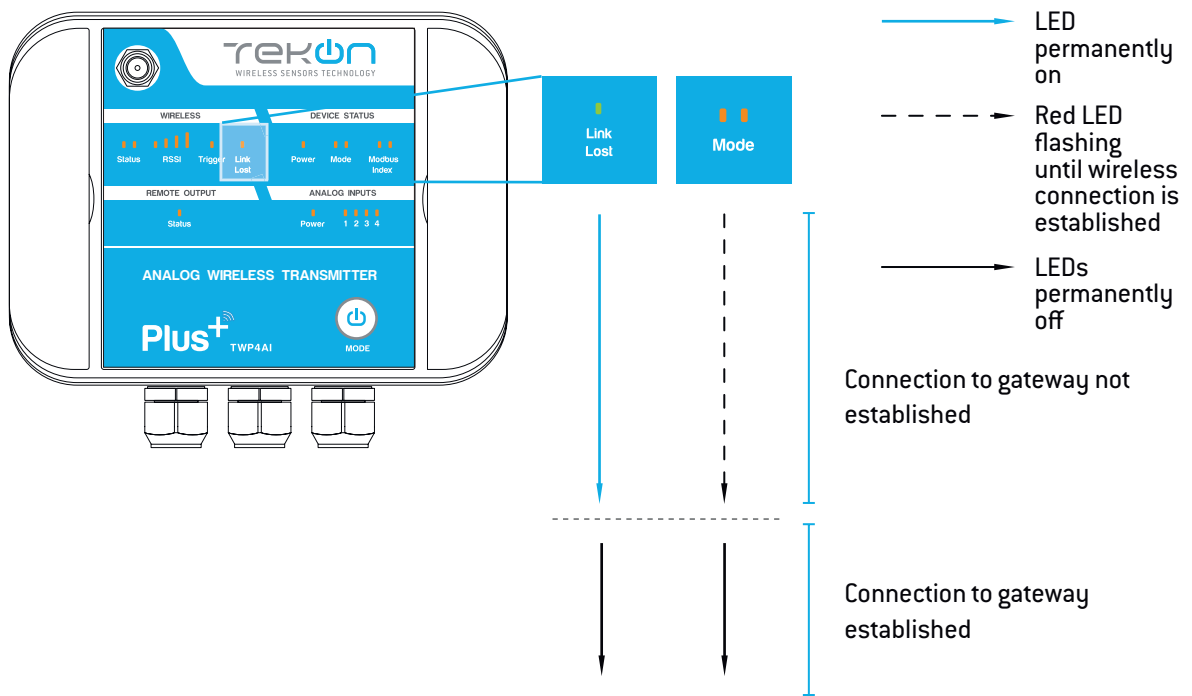

step

# 05

## TWP4AI TRANSMITTER DIGITAL OUTPUTS CONFIGURATION


### 04

#### Remote Control Output

Digital output remotely controlled by Gateway modbus protocol.


### 04.1

Define *Start-up state* and *Link lost state*. Click on *Write* button.

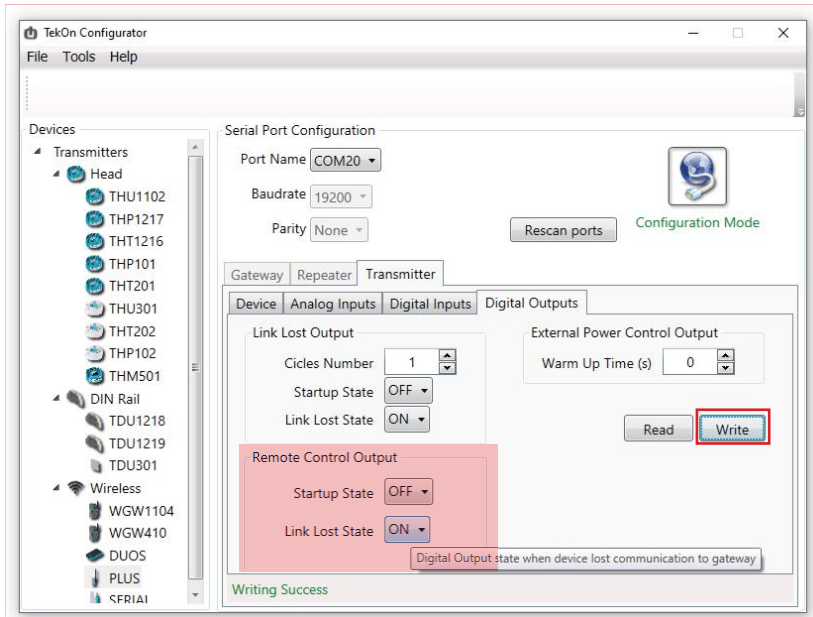

### 04.2



Exit configuration mode and verify setup by checking LEDs indicators.

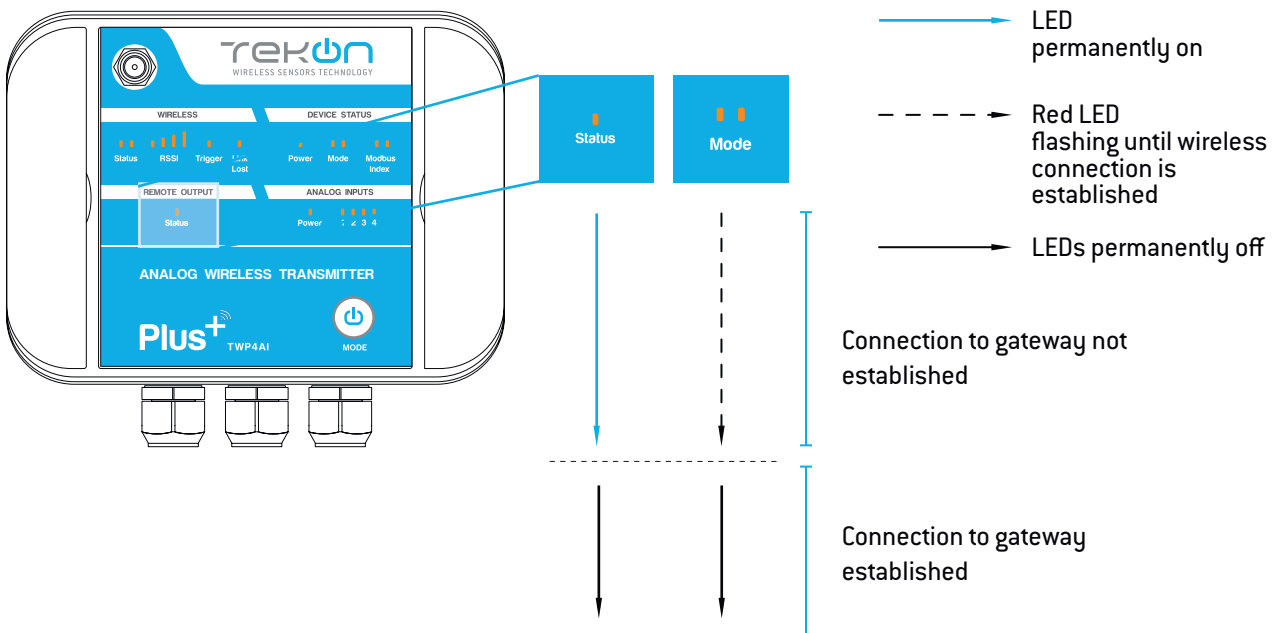

TWP4AI TRANSMITTER DIGITAL OUTPUTS CONFIGURATION

**04.3**

Using the Tekon Configurator you can change the State of Remote Output by setting the modbus register on the gateway. The Gateway will send the information in the next time the transmitter performs a communication.

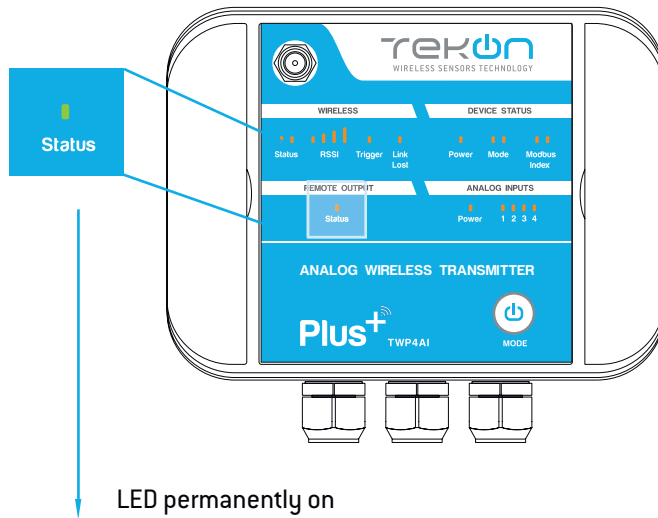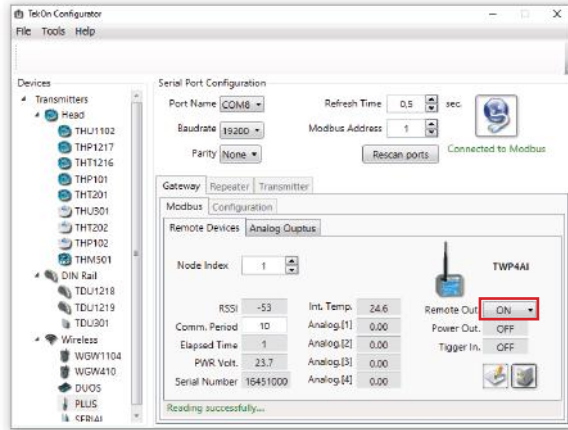


**05**

**External Power Control Output**


Time configurable output to power on an external device before data acquisition and transmission.

step  
**05** | TWP4AI TRANSMITTER DIGITAL OUTPUTS CONFIGURATION

**05.1** Define *Warm up time* and click on the *Write* button.

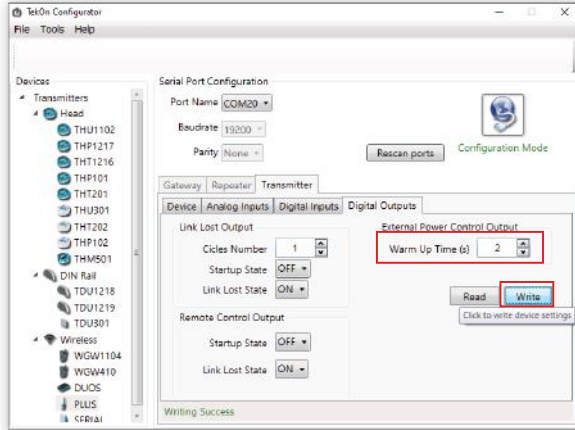

**05.2** Exit configuration mode and verify setup by checking LEDs indicators.

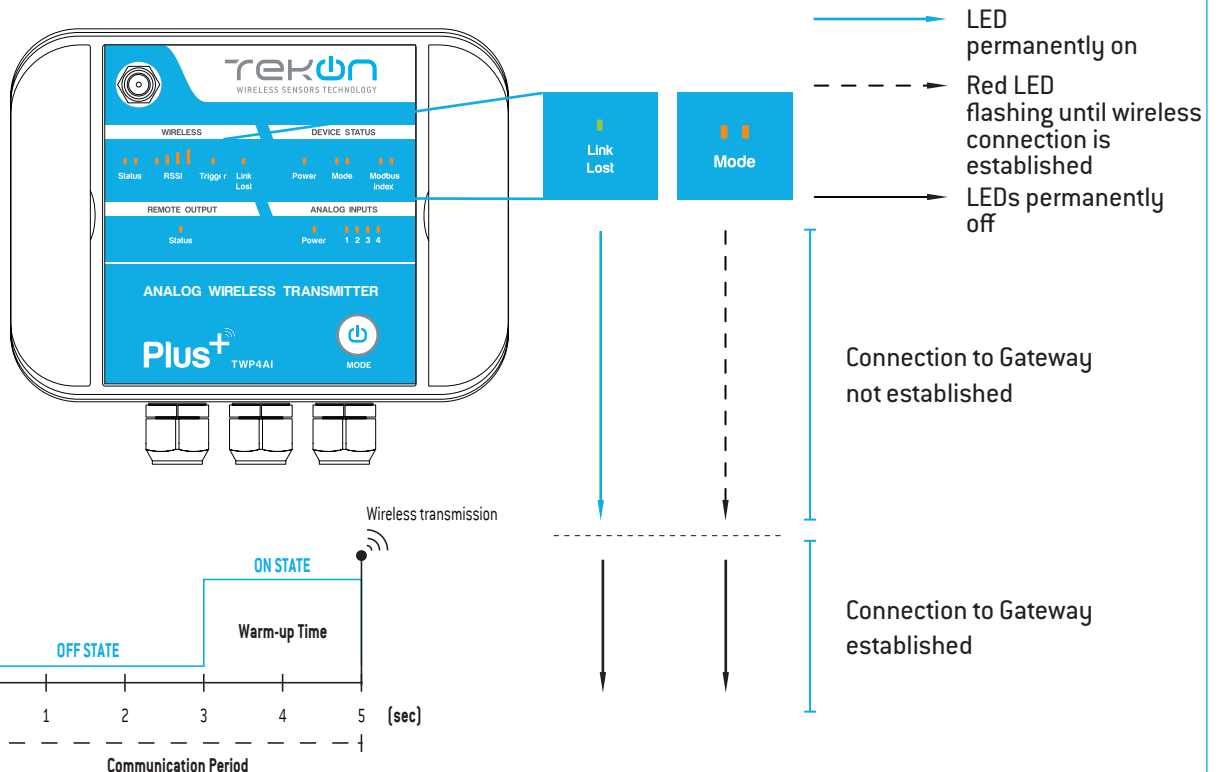

**NOTE:** Diagram only applies after the transmitter and gateway are connected.




step  
**06**

**WGW420 GATEWAY ANALOG OUTPUTS CONFIGURATION**

step  
**06** | GATEWAY ANALOG OUTPUTS

**01** Follow steps 06 and 07 of the PLUS Wireless Gateway Configuration.

**02** In *TekOn Configurator Software* select **PLUS** >> **Gateway** >> **Analog Outputs** menu

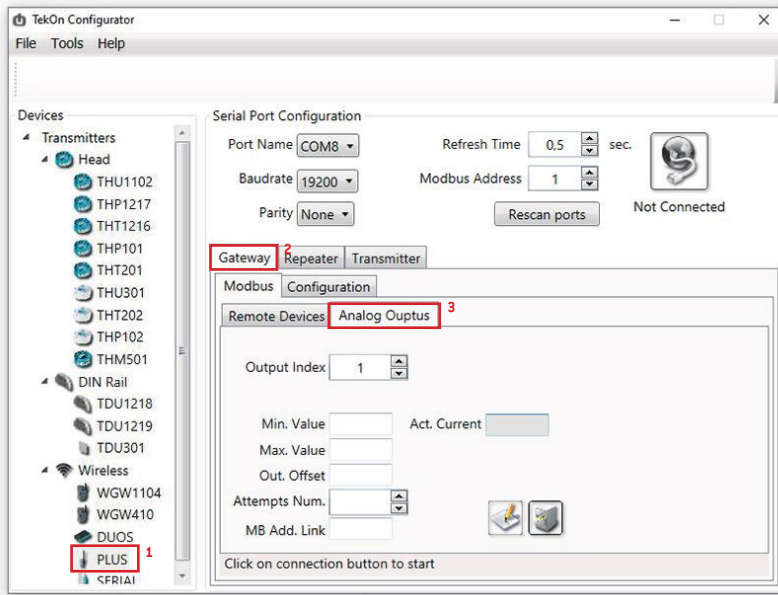

**03** Considering the transmitter configuration with GTW Modbus Index=1, there is a Gateway Modbus Address Window corresponding to Modbus address window [0-19].

HOLDING REGISTERS - TRANSMITTERS DATA	
Description	Address
Serial Number	(Transmitter Modbus Index-1)x20+0
Transmitter Model	(Transmitter Modbus Index-1)x20+2
RSSI	(Transmitter Modbus Index-1)x20+3
Communication Period	(Transmitter Modbus Index-1)x20+4
Elapsed Time	(Transmitter Modbus Index-1)x20+5
Power Voltage	(Transmitter Modbus Index-1)x20+6
Data 0	(Transmitter Modbus Index-1)x20+7
Data 1	(Transmitter Modbus Index-1)x20+9
Data 2	(Transmitter Modbus Index-1)x20+11
Data 3	(Transmitter Modbus Index-1)x20+13
Data 4	(Transmitter Modbus Index-1)x20+15
FW Version Major Minor	(Transmitter Modbus Index-1)x20+17
FW Version Revision	(Transmitter Modbus Index-1)x20+18
HW Version Major Minor	(Transmitter Modbus Index-1)x20+19




**NOTE:**

Transmitter analog input 1 data is received and stored at the Gateway Modbus address [9].

**04**


Link *Analog Output Index 1* (Gateway) to *Analog Input 1* (Transmitter) and configure MB Add Link according to the previous step. Set minimum and maximum values and click on *Write*

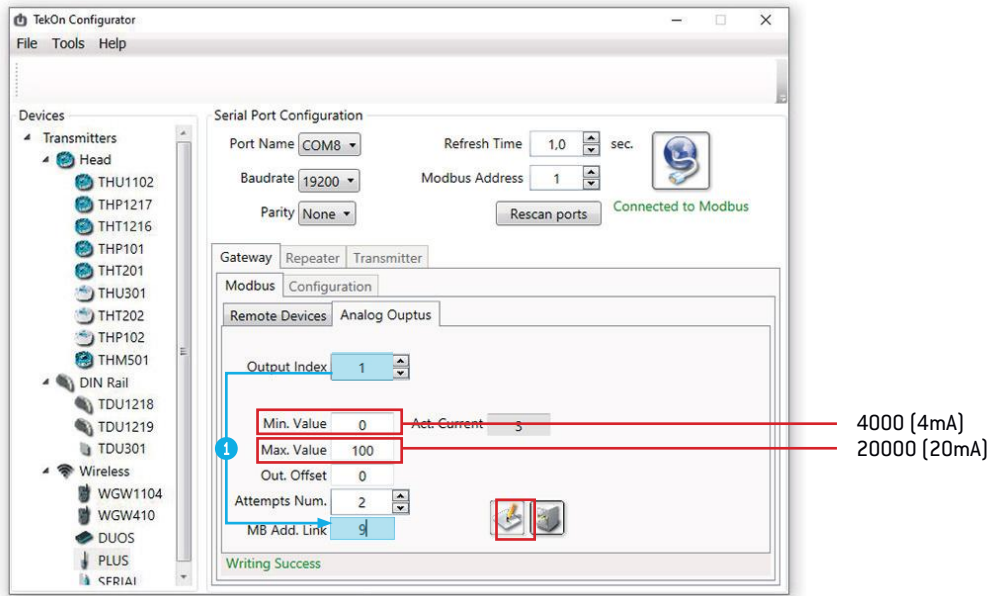

**NOTE:**

① Output index 1 is linked to modbus address [9], according to mapping table of step 03.

Modbus address double word (float 32) value is converted into 4..20 mA scale according to minimum and maximum defined values.

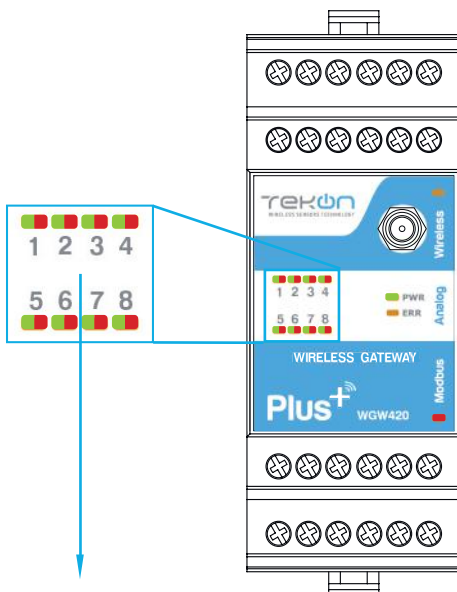

- 1** → Green led permanently on during a closed current loop
- 2** → Red led permanently on during an open current loop

step  
**07**


**WRP001 PLUS WIRELESS REPEATER CONFIGURATION**

CONNECT AND CONFIGURE THE PLUS WIRELESS REPEATER

**01** Loosen the 4 screws of the case and open it.



**02** Connect a micro USB cable to the computer and then to *WRP001 PLUS Wireless Repeater*.

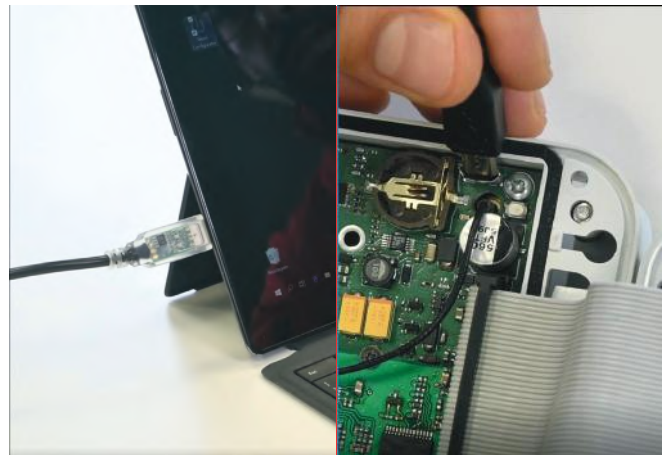


**03** Open a new window of *TekOn Configurator Software* and select *PLUS >> Repeater* menu.

step  
**07**

CONNECT AND CONFIGURE THE PLUS WIRELESS REPEATER


**04**

Click on *Rescan Ports* button.

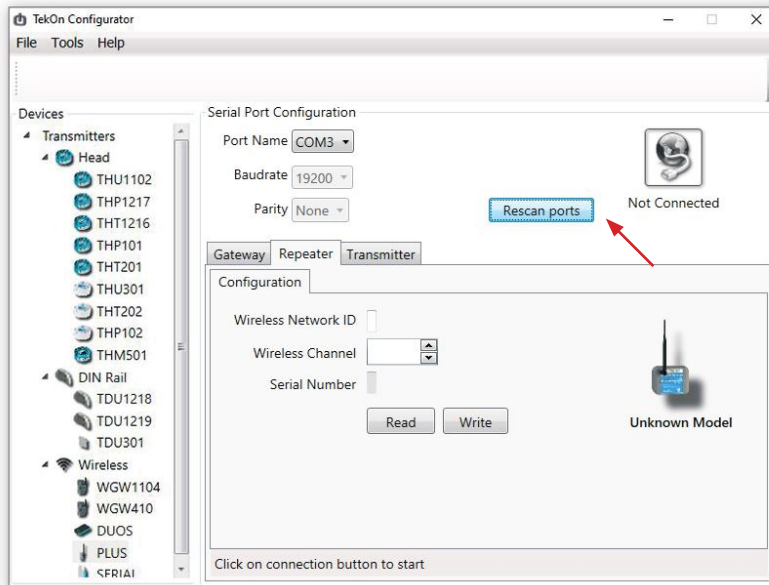

**05**

Select corresponding *Port name*<sup>1</sup>.


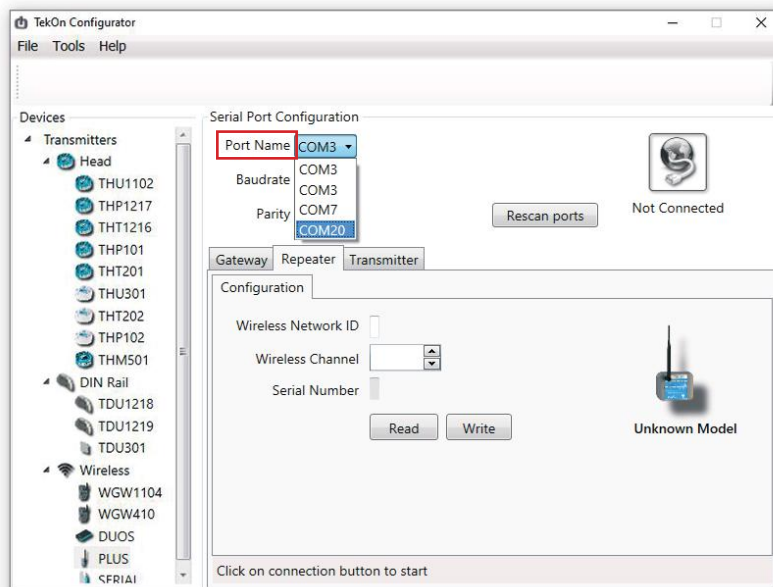


<sup>1</sup> You can check device's serial port name in "Device Manager" on Microsoft® Windows® operating system.

CONNECT AND CONFIGURE THE PLUS WIRELESS REPEATER step  
**07**

**06**

Click on *Configuration Mode* (🌐) button.

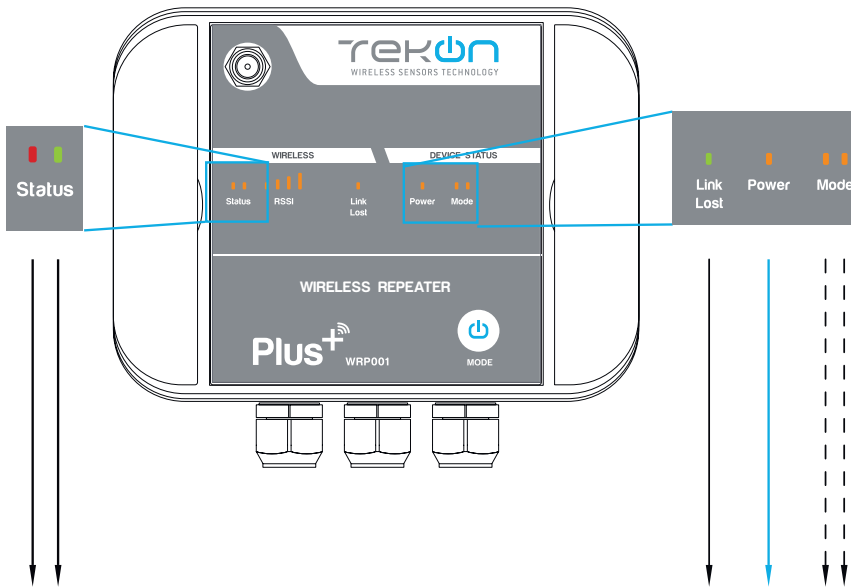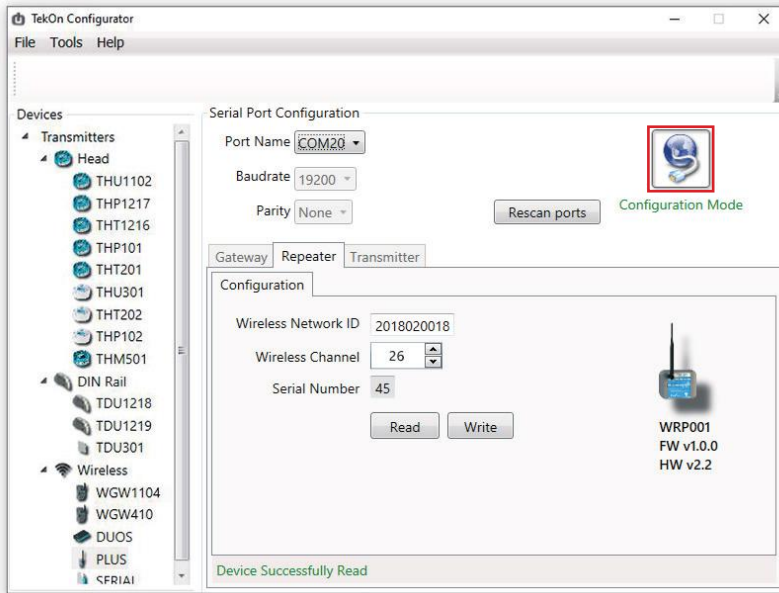

- LED permanently on
- - - - - LEDs flashing until wireless connection is established
- LED permanently off

step


# 07

## CONNECT AND CONFIGURE THE PLUS WIRELESS REPEATER

### 07


Configure *Wireless Network ID* and *Wireless Channel* previously obtained from *Gateway*.

Click on *Write* button to update *Transmitter* settings.

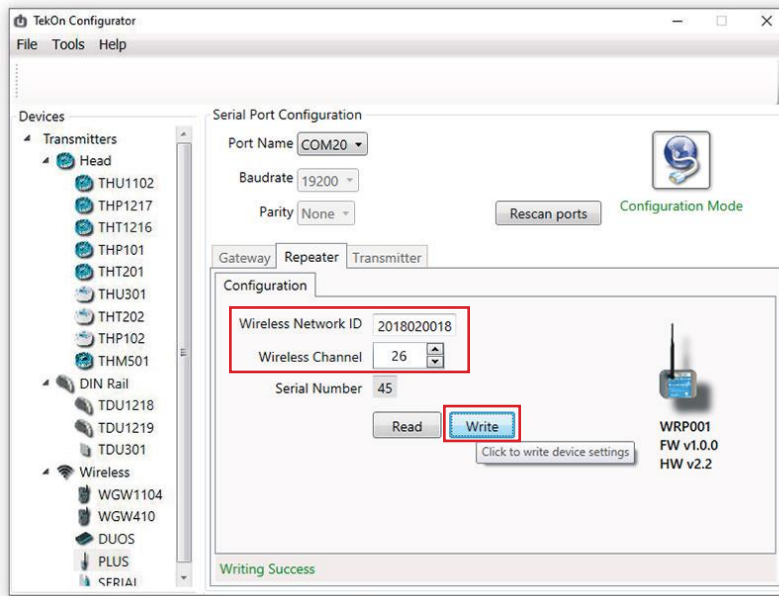


### 08

Click on *Configuration Mode* (  ) button to exit setup and resume normal operating mode.

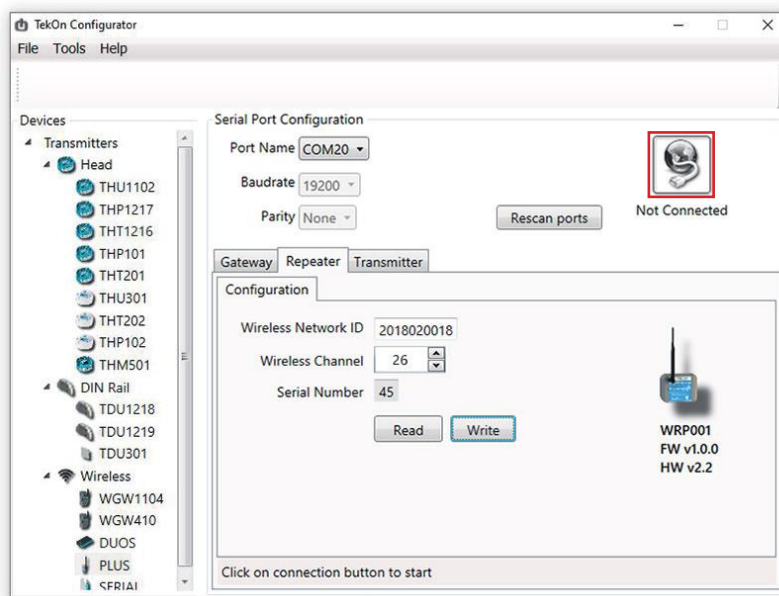



CONNECT AND CONFIGURE THE PLUS WIRELESS REPEATER

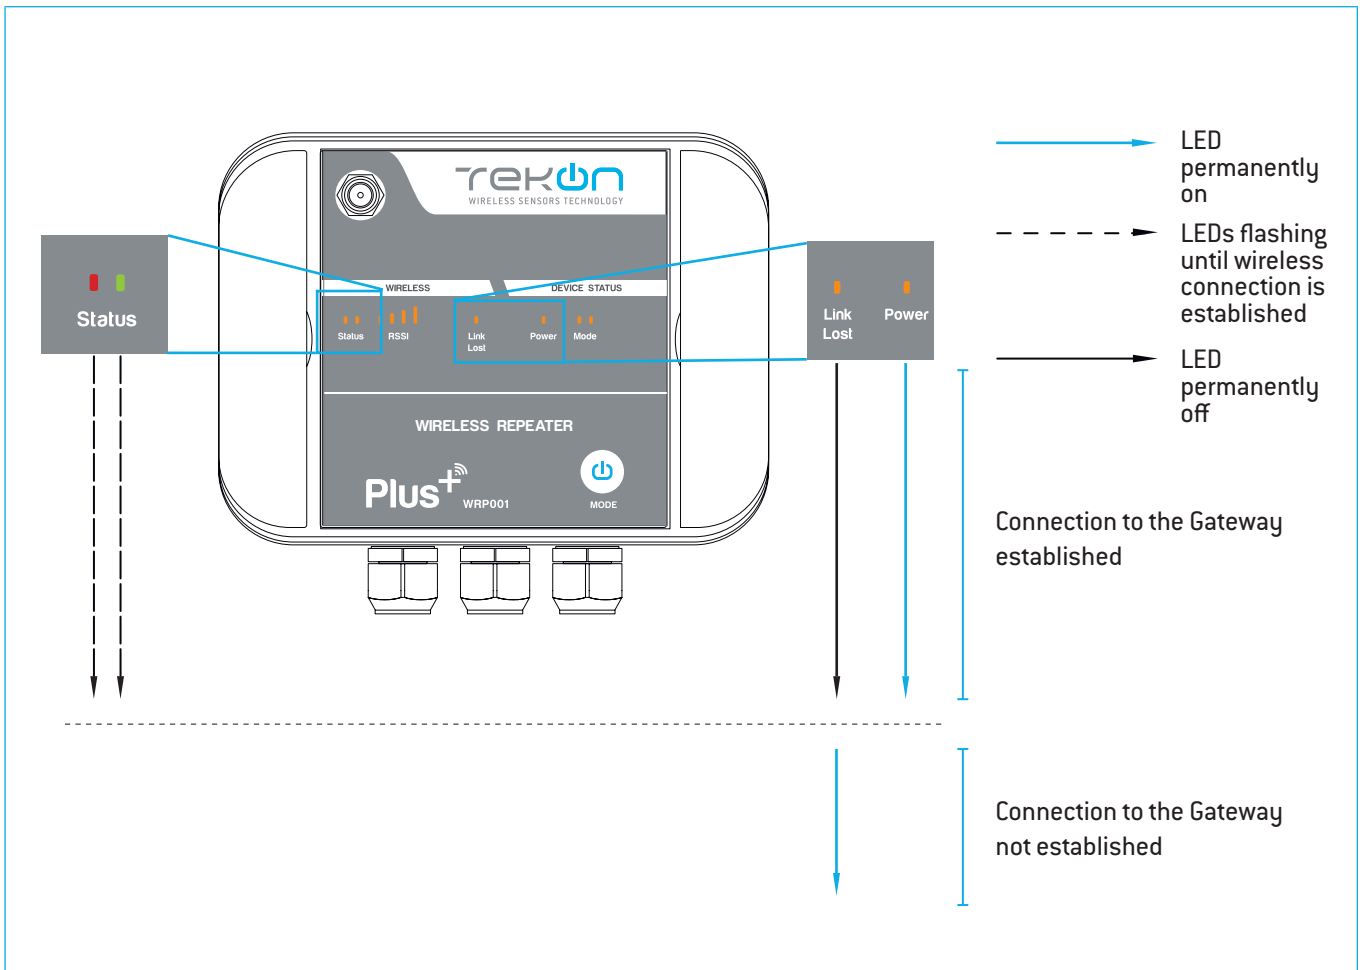

step  
**08**

**SITE SURVEY MODE**


Refers to following devices: *TWP4AI Transmitter*, *TWP-4AI4DI1UT Transmitter*, *WRP001 Repeater* and *TWPH-1UT Transmitter*.

Site survey mode is a tool that allows a quick wireless signal strength evaluation at the site of installation. It doesn't require additional equipment or software.

**01**

Press and hold Mode (⏻) button until Status LEDs are permanently on and Mode LEDs flash.

RSSI LEDs indicate the signal strength.

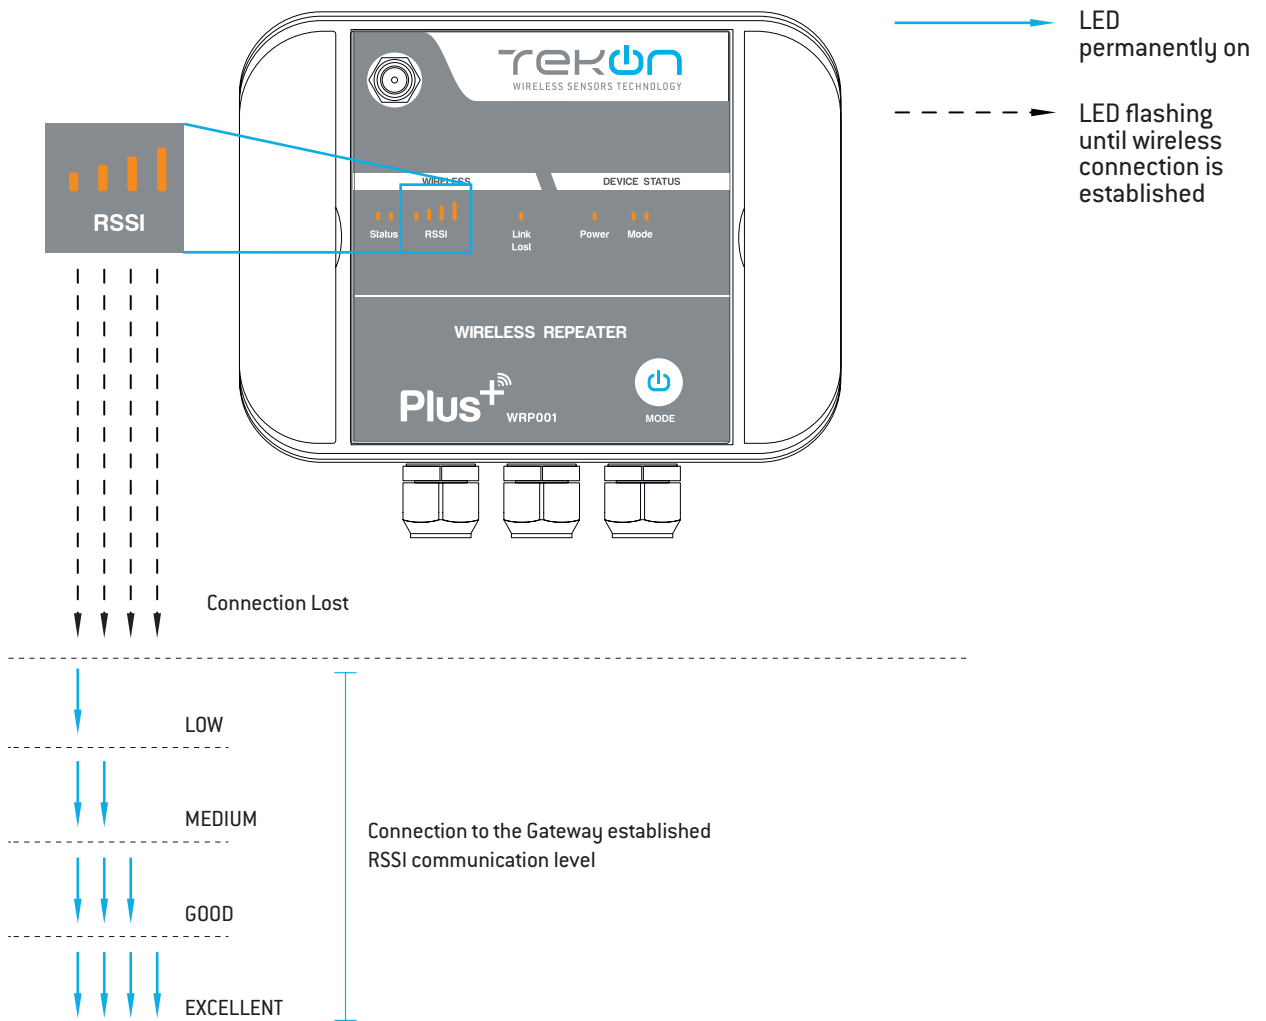

**02**

Press and hold Mode (⏻) button until RSSI LEDs switch off and device resumes normal operation mode.

**TEKON ELECTRONICS**  
a brand of Bresimar Automação S.A.


Avenida Europa, 460  
Quinta do Simão  
3800-230 Aveiro  
PORTUGAL

**Sales**

P.: +351 234 303 320  
M.: +351 933 033 250  
E.: sales@tekonelectronics.com

**Technical Support**

E.: support@tekonelectronics.com

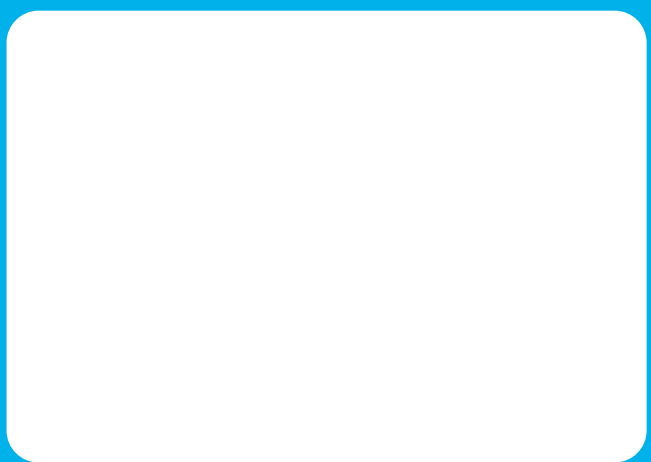

Cofinanciado por:



UNIÃO EUROPEIA  
Fundo Europeu  
de Desenvolvimento Regional