

# UNIVERSAL TEMPERATURE ISOLATED HEAD TRANSMITTER THU301-I



## INSTALLATION GUIDE

IG\_INHD\_THU301-I\_E02A

# UNIVERSAL TEMPERATURE ISOLATED HEAD TRANSMITTER THU301-I

## INSTALLATION GUIDE

step  
**01**

**CONNECT AND CONFIGURE THU301-I UNIVERSAL TEMPERATURE ISOLATED HEAD  
TRANSMITTER**

Pages 3 to 11

---

step


**01**

CONNECT AND CONFIGURE THU301-I UNIV. TEMP. ISOLATED HEAD TRANSMITTER

DOWNLOAD AND INSTALL "TEKON CONFIGURATOR" FREE SOFTWARE FROM TEKON ELECTRONICS WEBSITE

**01**


Connect the THU301-I transmitter to the Mini-USB cable.

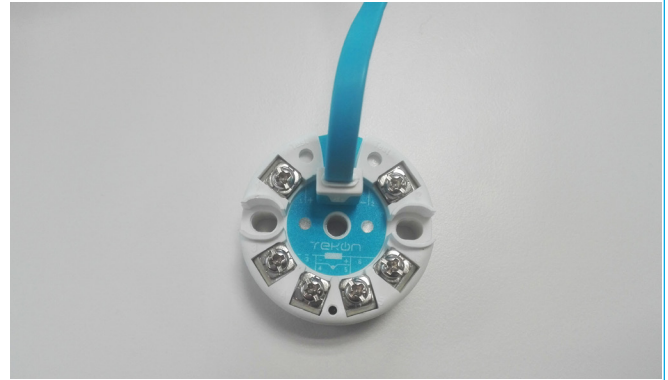

**02**


Connect a Thermocouple or PT100 sensor to the THU301-I transmitter.

**Note:** in this example, we will use a thermocouple.

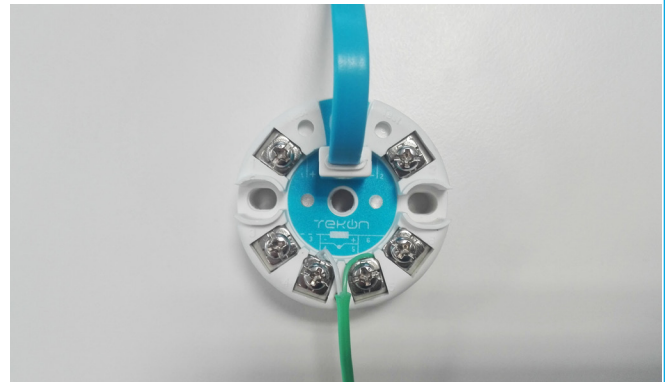

**03**

Connect the Mini-USB cable to the computer.

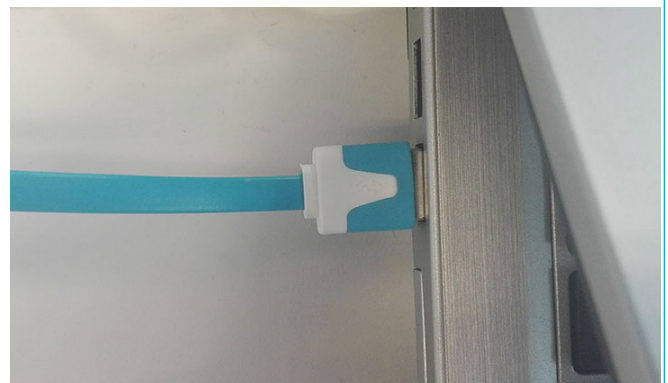

**04**

Open Tekon Configurator software.



step  
**01**


CONNECT AND CONFIGURE THU301-I UNIV. TEMP. ISOLATED HEAD TRANSMITTER

**05**


**Open the THU301-I device page.**

You can enter the device's page in the following ways:

**1st option:** Click on **"WIRED TRANSMITTERS"** in the left menu and then click on the device.

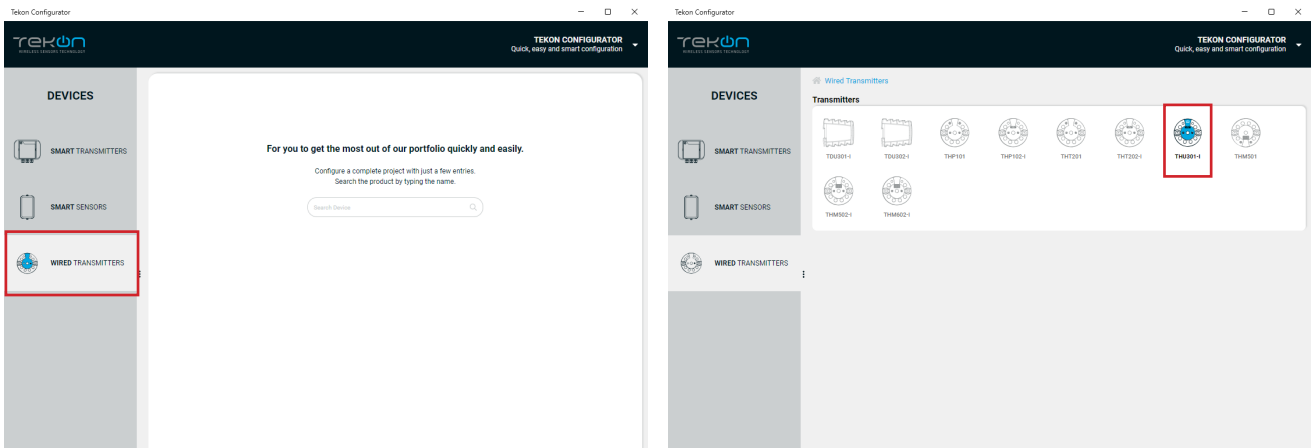

**2nd option:** Type the name of the device in the **"Search Device"** field on the home page and select.

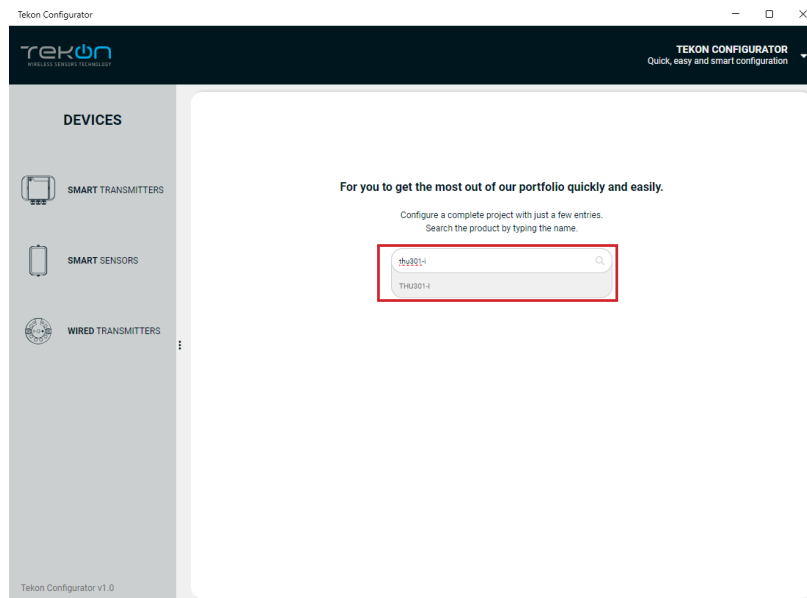


step  
**01**


CONNECT AND CONFIGURE THU301-I UNIV. TEMP. ISOLATED HEAD TRANSMITTER

**06**

Load the “Port COM” corresponding to the THU301-I.

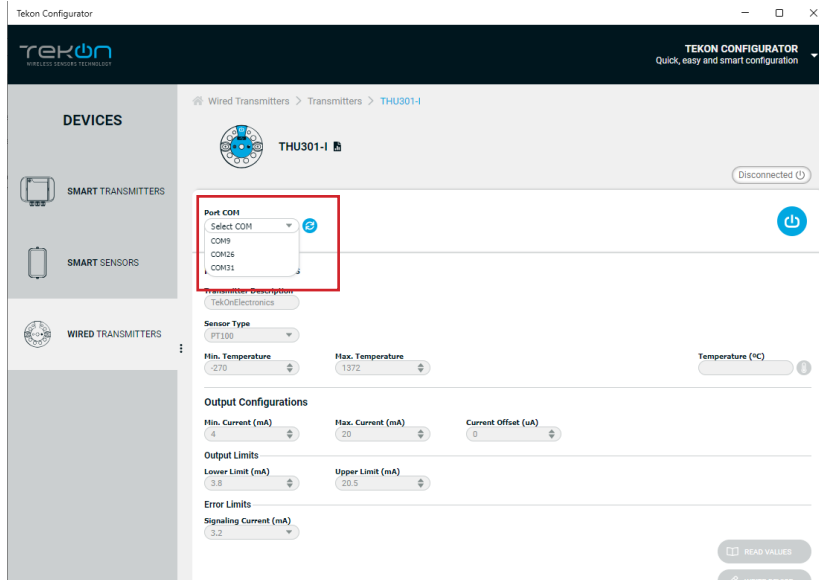


**NOTE:**

If the USB cable has already been connected before opening the device page, “Port COM” will appear in the list, otherwise you need to click on the “” button.

**07**

Select corresponding *Port COM*<sup>2</sup>.

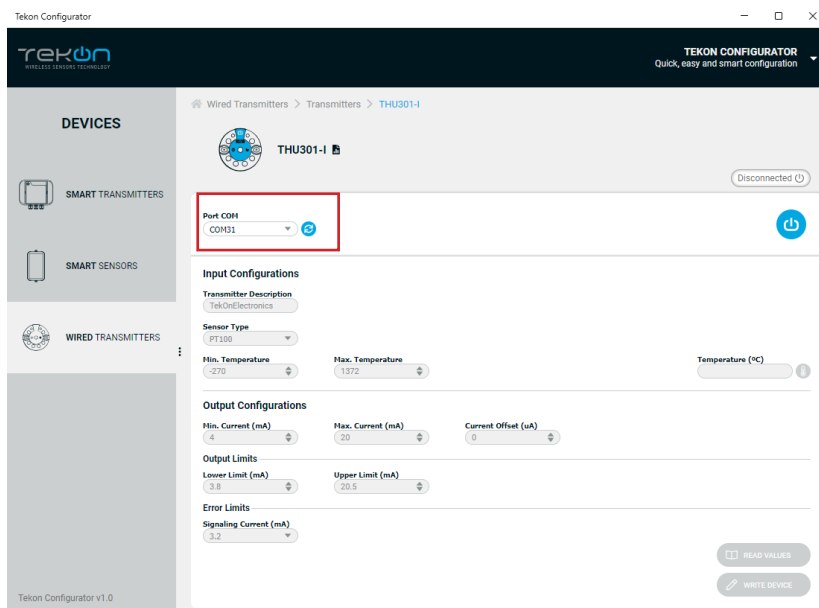


<sup>2</sup> You can check device’s serial port name in “Device Manager” on Microsoft® Windows® operating system.


step

**01**

CONNECT AND CONFIGURE THU301-I UNIV. TEMP. ISOLATED HEAD TRANSMITTER


**08**

Click on *Connect* (  ) button to enter in configuration mode.

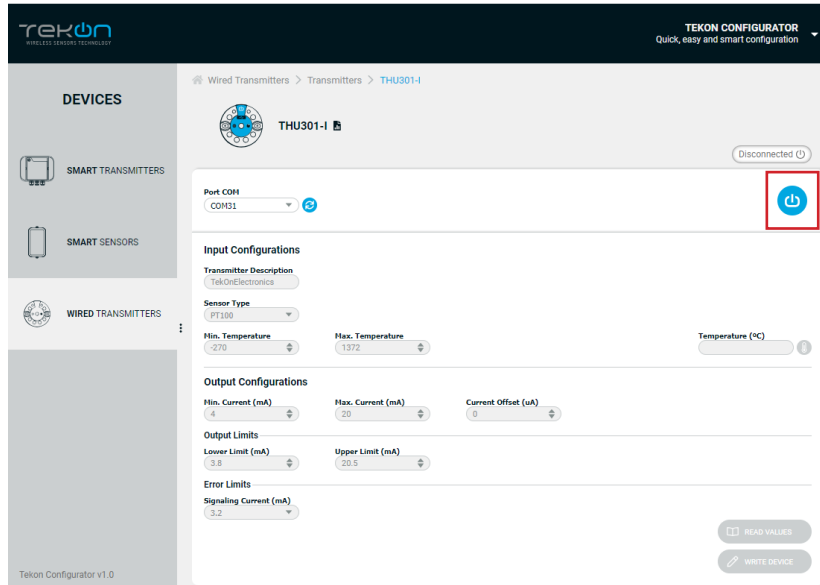


**09**

The software will connect to the device.

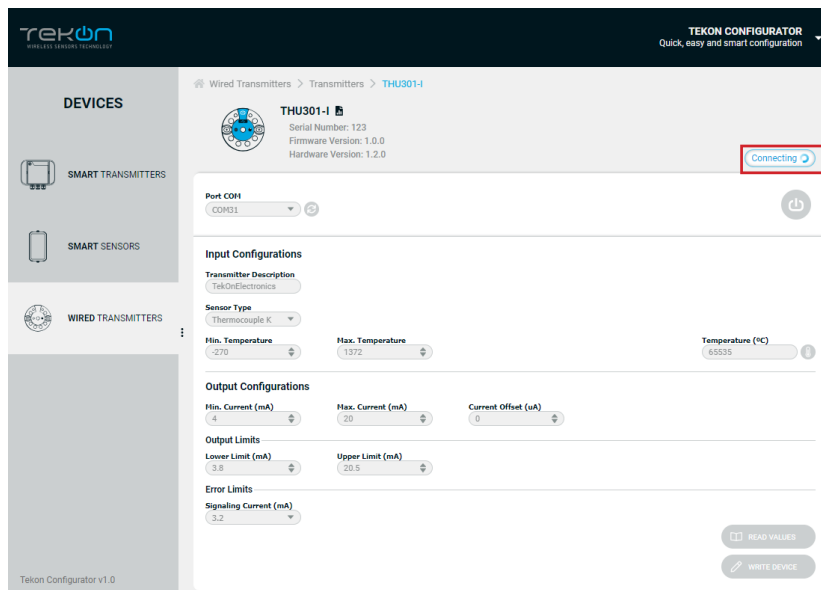

**NOTE:**


If the software is unable to connect to the device, the  status is displayed. If it hasn't connected, go back to the previous steps and check the port COM.

step  
**01**

CONNECT AND CONFIGURE THU301-I UNIV. TEMP. ISOLATED HEAD TRANSMITTER


**10**

When the software connects to the device, the “*Connected*” message will be displayed.

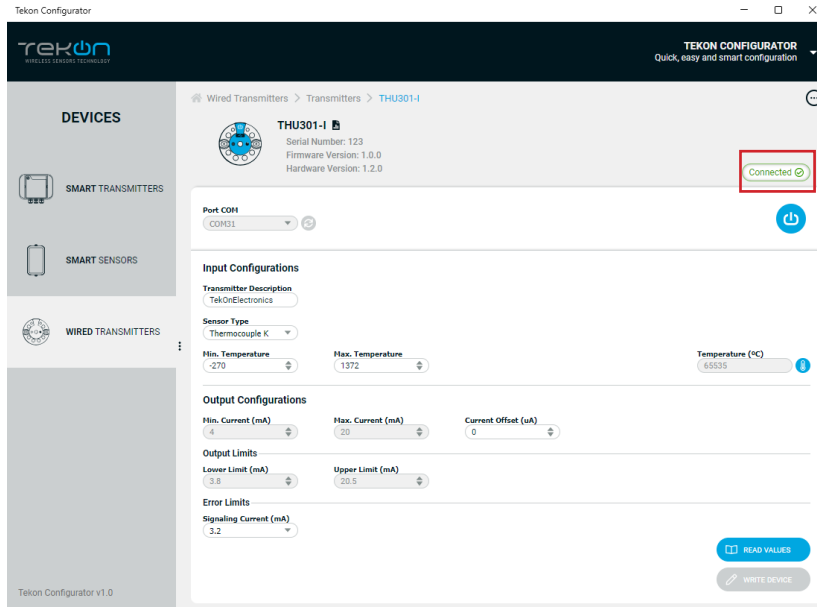

**11**

While the THU301-I transmitter it is in configuration mode, the blue led will flash continuously.

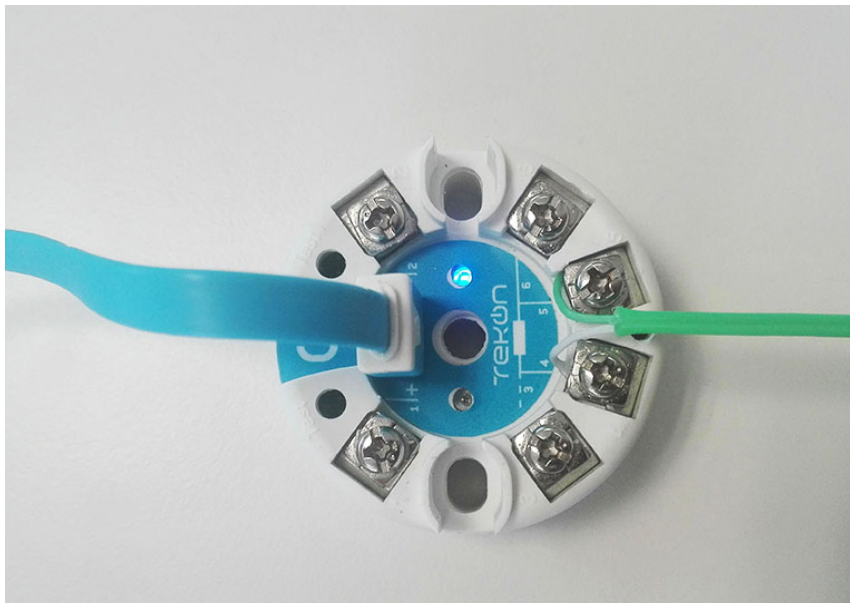


step  
**01**

CONNECT AND CONFIGURE THU301-I UNIV. TEMP. ISOLATED HEAD TRANSMITTER

**12**


Choose which type sensor (PT100 or Thermocouple) you want to in **Sensor Type** select.

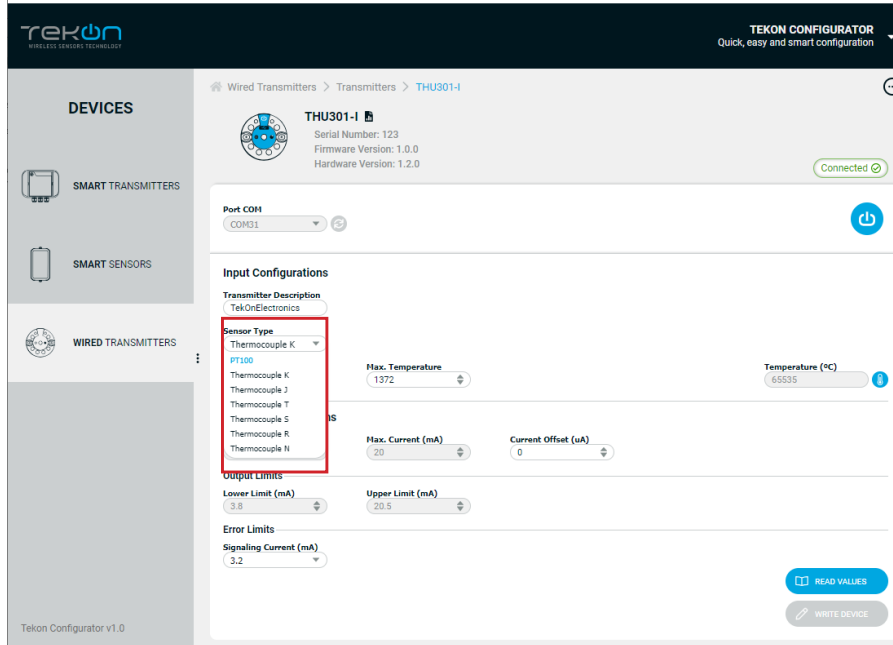

**13**

To change the selected sensor settings, update the value of the desire parameter and select the “Write Device” option.

In this example, we use the **thermocouple K** and change the “Temperature Min.” to -100 and “Temperature Max.” to 100.

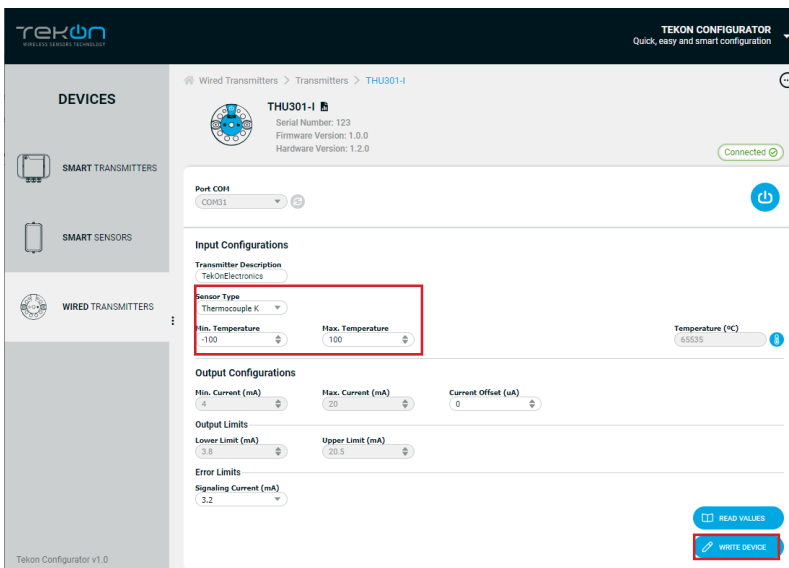

While the settings are being written, the following icon will be displayed next to the “WRITE DEVICE” button [🔄]

If the changes to the device have been written, the following symbol will appear [✅]

If not, the following symbol will appear [❌], try again and check that the device is connected correctly.



**NOTE:**


The “WRITE DEVICE” button will only be active when there is a change to one of the editable fields, if there is no change it will be disabled.






step  
**01**


CONNECT AND CONFIGURE THU301-I UNIV. TEMP. ISOLATED HEAD TRANSMITTER

**14**

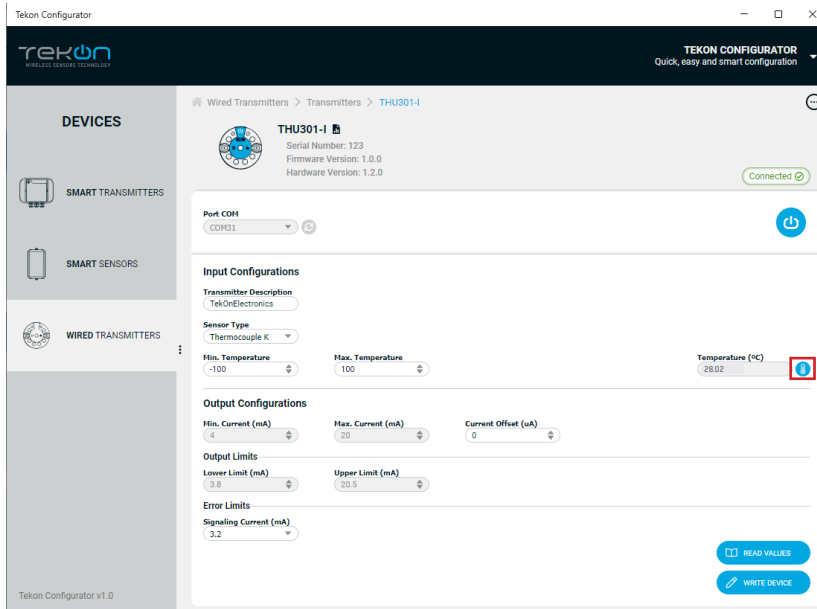Click on  to read the current temperature value.



Wait for the software to read the values from the device. Wait for the  status to change to .

If the device reading fails  appears. Make sure that all the steps have been carried out correctly.

**15**

If the temperature reading is outside the set temperature range, the transmitter THU301-I red and blue led will blink simultaneously.



**Note:** please review your settings and check the datasheet status led information to analyse all the led behaviours.

step


**01**

CONNECT AND CONFIGURE THU301-I UNIV. TEMP. ISOLATED HEAD TRANSMITTER

**16**


In Output Configurations you can set “Current Offset (uA)” and in Error Limits you can set “Signaling Current (mA)”:

- “Current Offset (uA)”: value add to the output current, to perform an offset.
- “Signaling Current (mA)”: Voltage set to alert for sensor problems (open circuit, no sensor connected or sensor damaged).

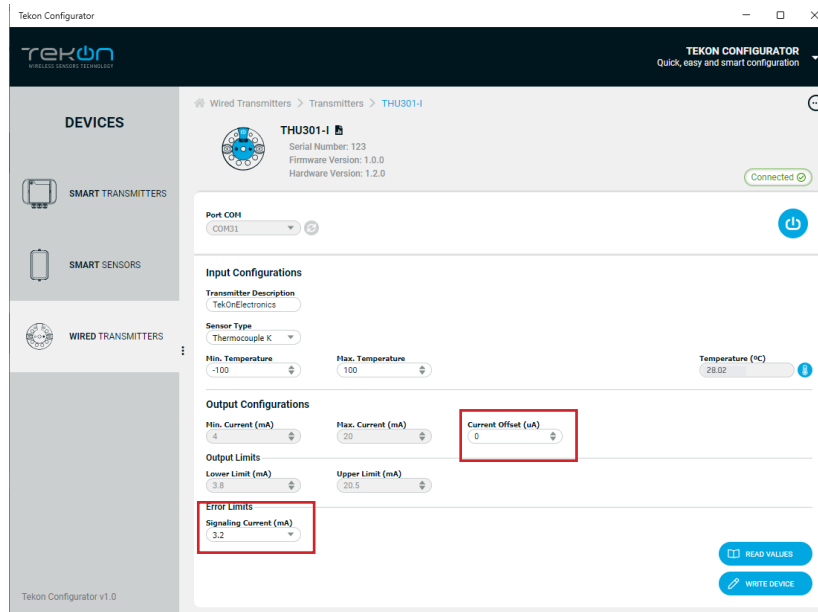

**17**

Edit the fields and click on “Write Device” to save the changes. To return to the previous software window, click on the “Basic Options” tab.

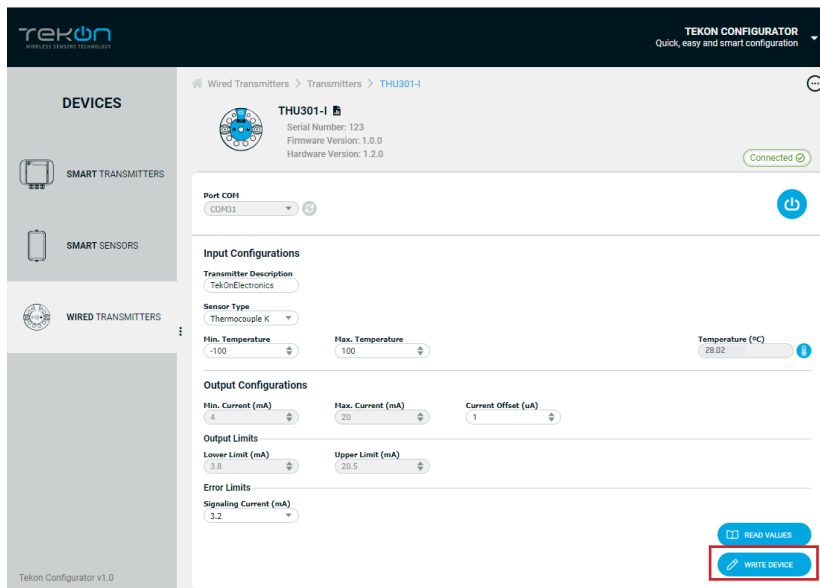

While the settings are being written, the following icon will be displayed next to the “WRITE DEVICE” button (🔄)

If the changes to the device have been written, the following symbol will appear (✅)

If not, the following symbol will appear (❌), try again and check that the device is connected correctly.



**NOTE:**

The “WRITE DEVICE” button will only be active when there is a change to one of the editable fields, if there is no change it will be disabled.


step

01

CONNECT AND CONFIGURE THU301-I UNIV. TEMP. ISOLATED HEAD TRANSMITTER

18


Click on the button (  ) to exit *configuration mode* and return the device to normal operating mode.

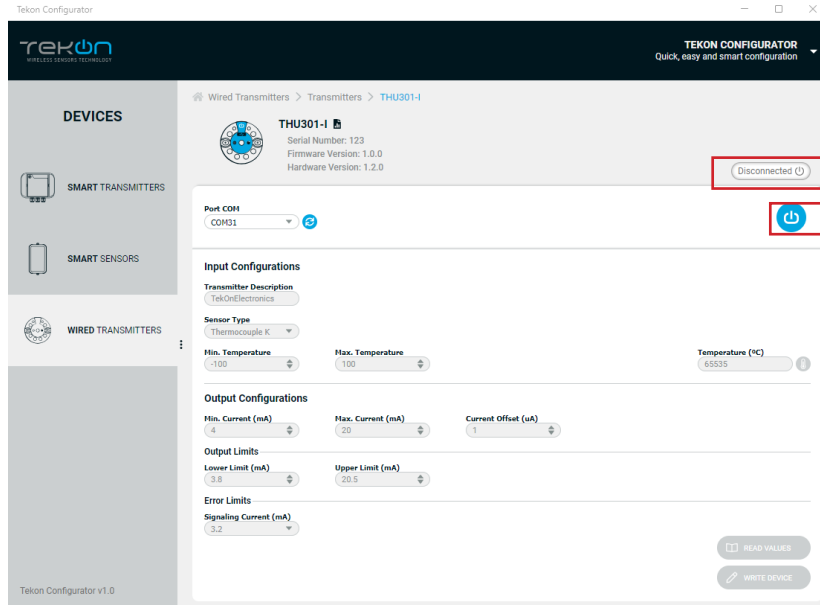

TEKON ELECTRONICS  
a brand of Bresimar Automação S.A.

Quinta do Simão  
3800-230 Aveiro  
PORTUGAL

P.: +351 234 303 320  
M.: +351 933 033 250  
E.: sales@tekonelectronics.com



Cofinanciado por:



UNIÃO EUROPEIA  
Fundo Europeu  
de Desenvolvimento Regional