



PLUS TWP-4AI4DI1UT INSTALLATION GUIDE

IG_PLUS_TWP-4AI4DI1UT_E02A

PLUS TWP-4AI4DI1UT INSTALLATION GUIDE

Table of contents

step
01 **TWP-4AI4DI1UT PLUS WIRELESS GATEWAY CONFIGURATION**
Pages 4 to 13

step
02 **TWP-4AI4DI1UT PLUS WIRELESS TRANSMITTER CONFIGURATION**
Pages 14 to 21

step
03 **TWP-4AI4DI1UT TRANSMITTER ANALOG INPUTS CONFIGURATION**
Pages 22 to 25

step
04 **TWP-4AI4DI1UT TRANSMITTER DIGITAL INPUTS CONFIGURATION**
Pages 26 to 31

step
05 **TWP-4AI4DI1UT TRANSMITTER UNIV. TEMPERATURE INPUT CONFIGURATION**
Pages 32 to 35

PLUS TWP-4AI4DI1UT INSTALLATION GUIDE

Table of contents

step 06	TWP-4AI4DI1UT TRANSMITTER DIGITAL OUTPUTS CONFIGURATION Pages 35 to 40
-------------------	----------------------------------------------------------------------------------

step 07	WG420 GATEWAY ANALOG OUTPUTS CONFIGURATION Pages 41 to 43
-------------------	---------------------------------------------------------------------

step 08	WRP001 PLUS WIRELESS REPEATER CONFIGURATION Pages 44 to 51
-------------------	----------------------------------------------------------------------

step 09	SITE SURVEY Pages 52 and 53
-------------------	---------------------------------------

step
01

WGW420 PLUS WIRELESS GATEWAY CONFIGURATION

WG420 PLUS WIRELESS GATEWAY CONFIGURATION | step
01

TEKON CONFIGURATOR SOFTWARE is only compatible with the Microsoft® Windows® Operating System.

01 Connect the antenna to the *Gateway*.



02 **Wiring**
Connect the power supply and then the *RS485-USB* cable to the *Gateway*.



Wire Indication:
Blue - GND; Brown - +24 VDC; Orange - Data+ (A); Black - GND; Yellow - Data - (B)

03 Power ON the device.




step

01

WGW420 PLUS WIRELESS GATEWAY CONFIGURATION


04

Check device connection state by LED indication.

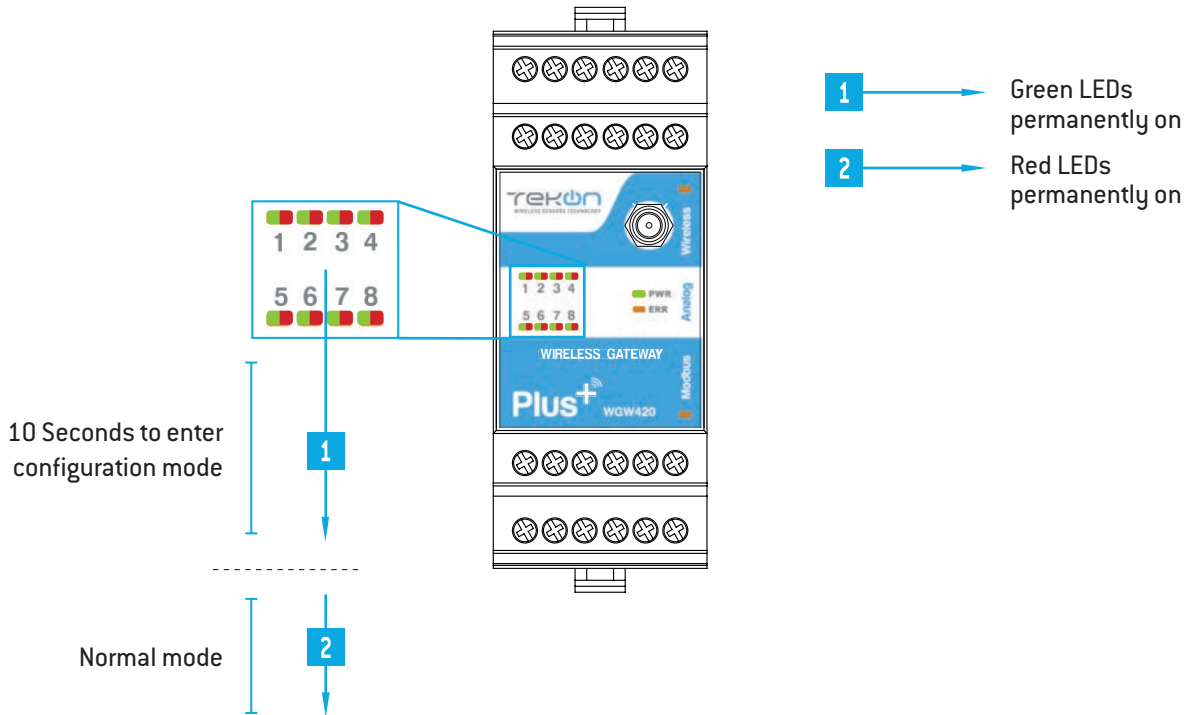

05

Open *Tekon Configurator Software*¹

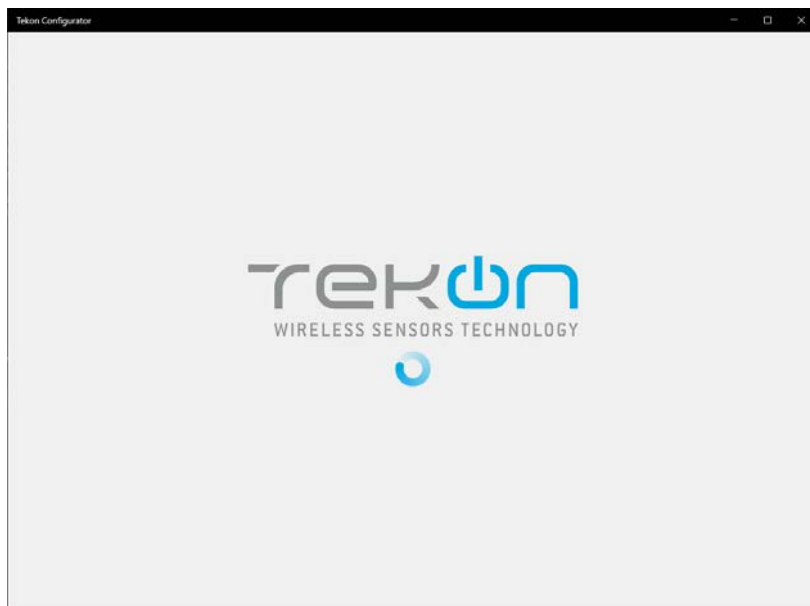


¹ Tekon Configurator software is free of charge and available at www.tekonelectronics.com

06


Open the WG420 PLUS Wireless Gateway device page.

You can enter the device's page in the following ways:

1st option: Click on **"SMART TRANSMITTERS"** in the left menu and then click on the WG420 device.

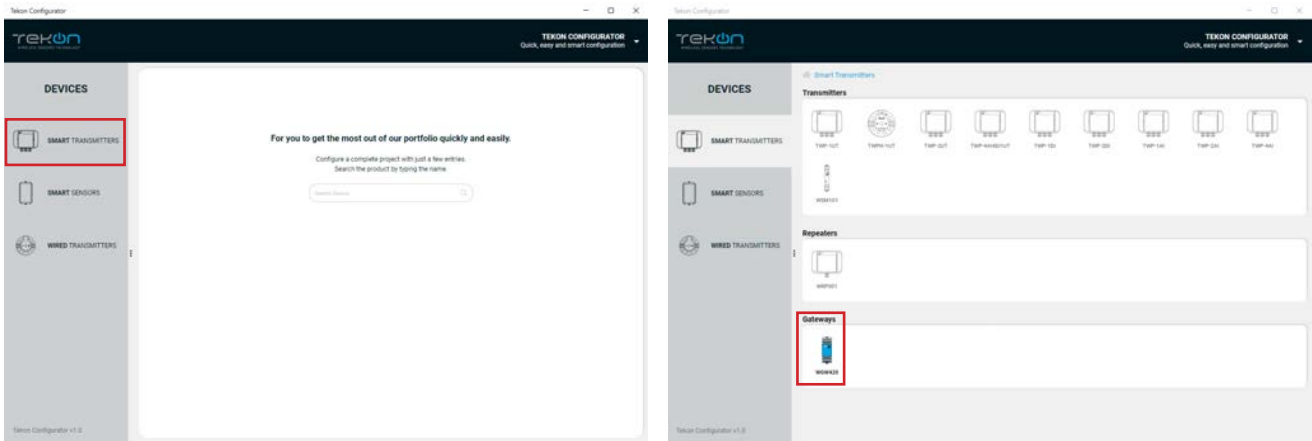

2nd option: Type the name of the device in the **"Search Device"** field on the home page and select.

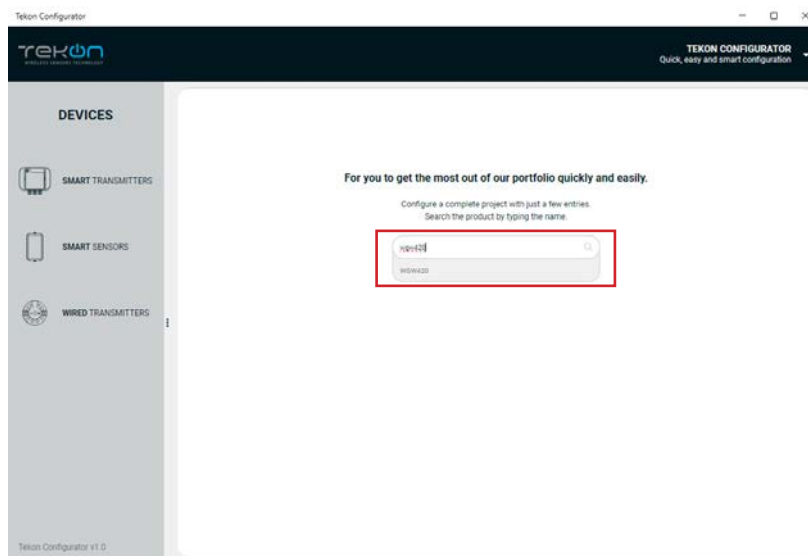


step

01

WG420 PLUS WIRELESS GATEWAY CONFIGURATION

07

Load the “Port COM” corresponding to the WG420 Wireless Gateway.

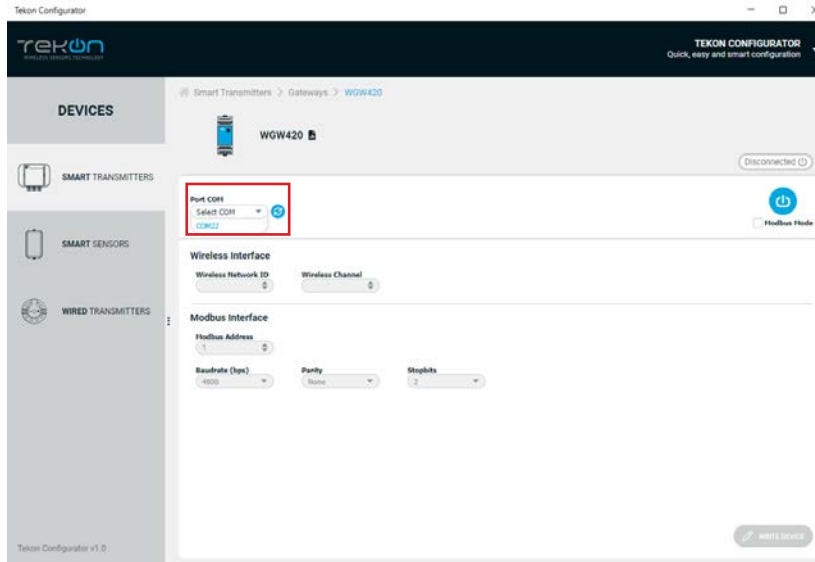


NOTE:

If the USB cable has already been connected before opening the device page, “Port COM” will appear in the list, otherwise you need to click on the “🔌” button.

08

Select corresponding *Port name*².

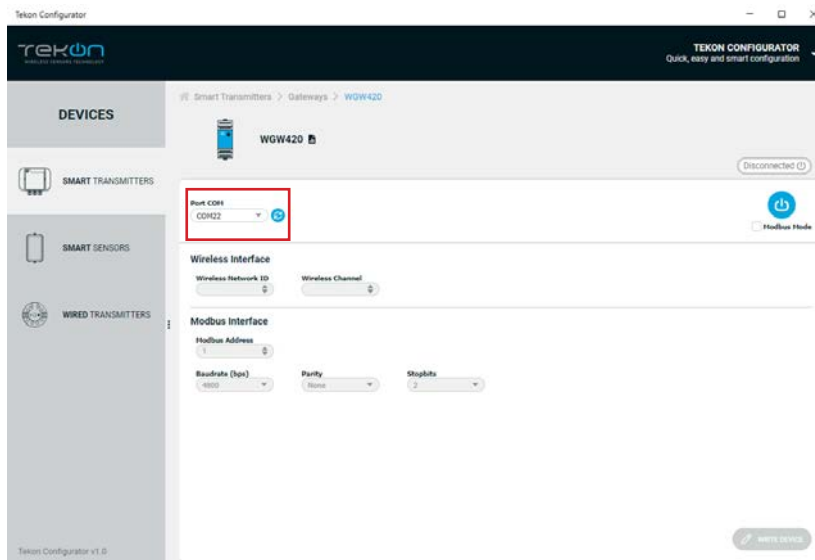



² You can check device's serial port name in “Device Manager” on Microsoft® Windows® operating system.


step **01**
WGW420 PLUS WIRELESS GATEWAY CONFIGURATION

09 Perform a power cycle on the *Gateway*.



NOTE: After power up, you have 10 seconds to enter configuration mode by clicking on Connect button [] (while green LEDs are permanently on). In this mode, you can manage device parameters: *Modbus Address*, *Modbus Baudrate*, *Modbus Parity*, *Wireless Network ID* and *Wireless Channel*.

10 Click on *Connect* () button.

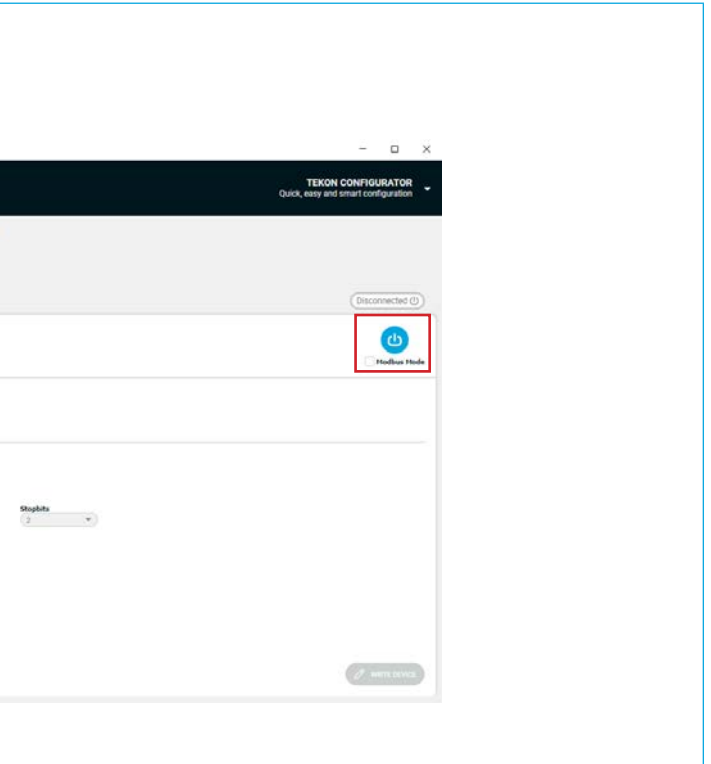


step
01

WGW420 PLUS WIRELESS GATEWAY CONFIGURATION

11

The software will connect to the device.

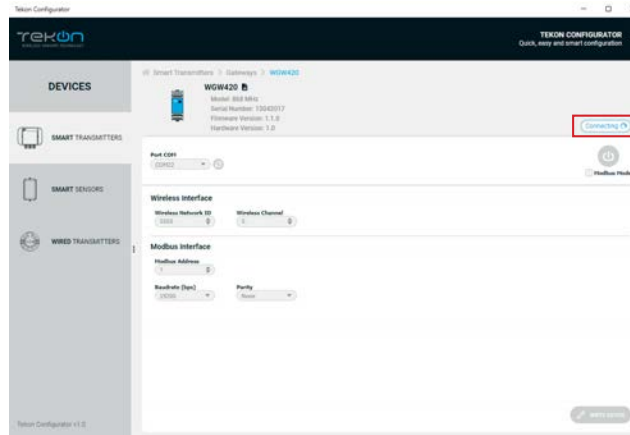

NOTE:


If the software is unable to connect to the device, the **Connection Failed** status is displayed. If it hasn't connected, go back to the previous steps and check the port COM.

12

When the software connects to the device, the "Connected" message will be displayed.



You can also verify configuration mode activation by checking LEDs on the gateway.

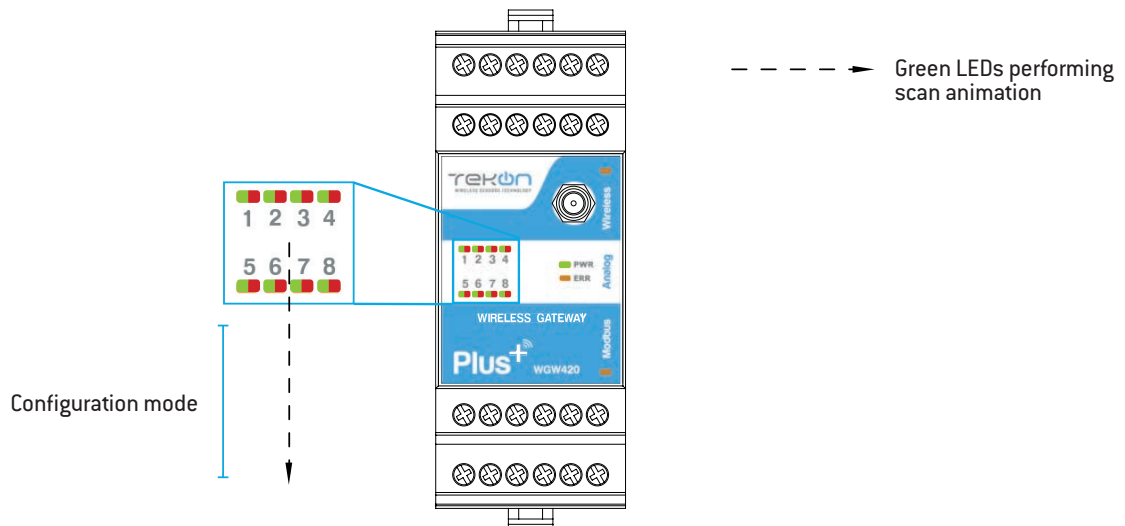


NOTE:

When the 10-second time frame to enter configuration mode is exceeded, the LEDs will turn permanently red and the gateway will enter normal operation mode. To get back in configuration mode, you need to perform a power cycle - step 8.

step
01
WG420 PLUS WIRELESS GATEWAY CONFIGURATION

13

Take note of device configuration data available, namely: *Modbus Address*, *Modbus Baudrate*, *Modbus Parity*, *Wireless Network ID* and *Wireless Channel*.

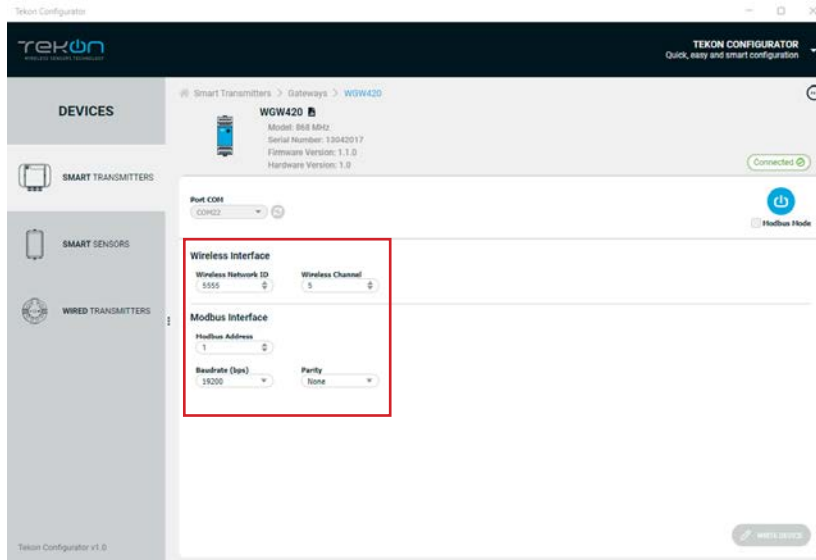



NOTE:

The wireless network connection between devices is ensured by setting the same *Wireless Network ID* and *Wireless Channel* parameters.

You can change the editable parameters. To save your changes, click on WRITE DEVICE. If the changes have been written to the device, the symbol [✓] will appear. If not, the symbol [✗] will appear: try again and check that the device is connected correctly.

14

Click on the *Disconnect* button.

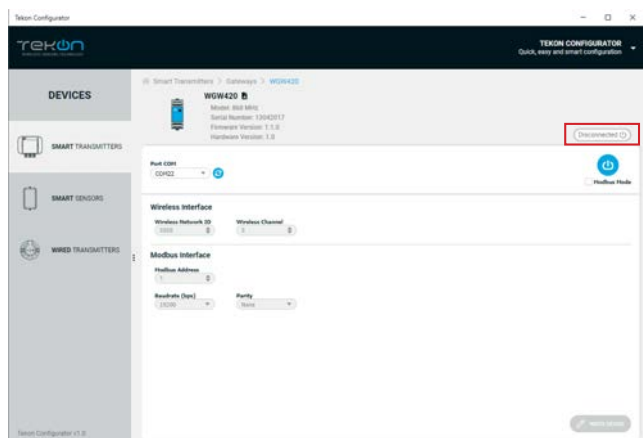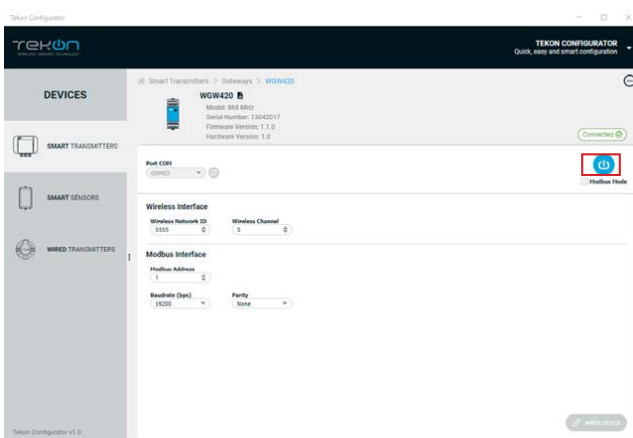

The “Connected” status changes to “*Disconnected*”.


step
01

WG420 PLUS WIRELESS GATEWAY CONFIGURATION

15


Modbus Communication

Select modbus mode in the checkbox below the Connect button.

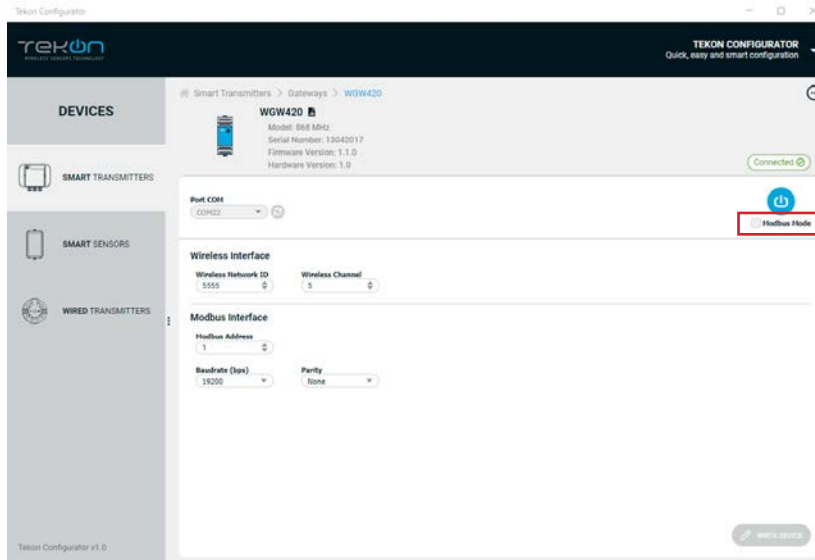

16


Ensure that *Port name*, *Baudrate*, *Parity* and *Modbus Address* fields are the same as those obtained in configuration mode.

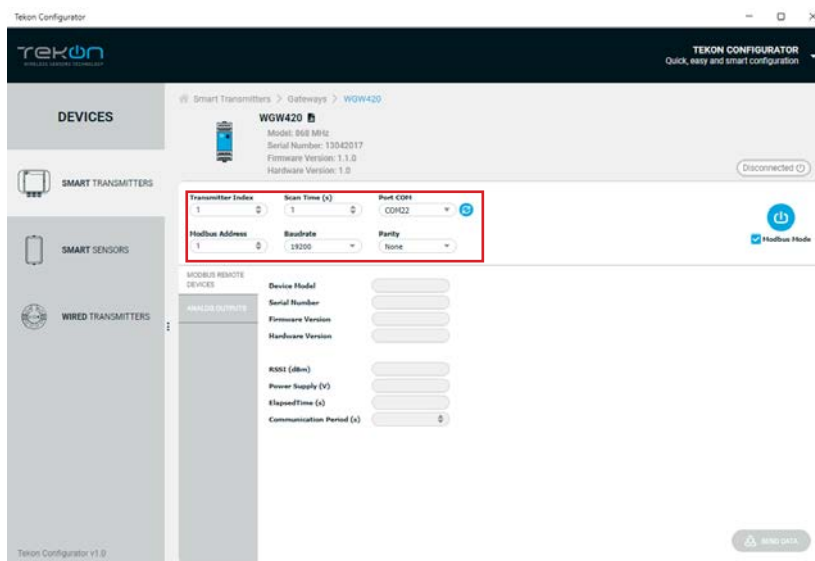


WG420 PLUS WIRELESS GATEWAY CONFIGURATION

17

Click on connect and check that the status is *“Connected”*.

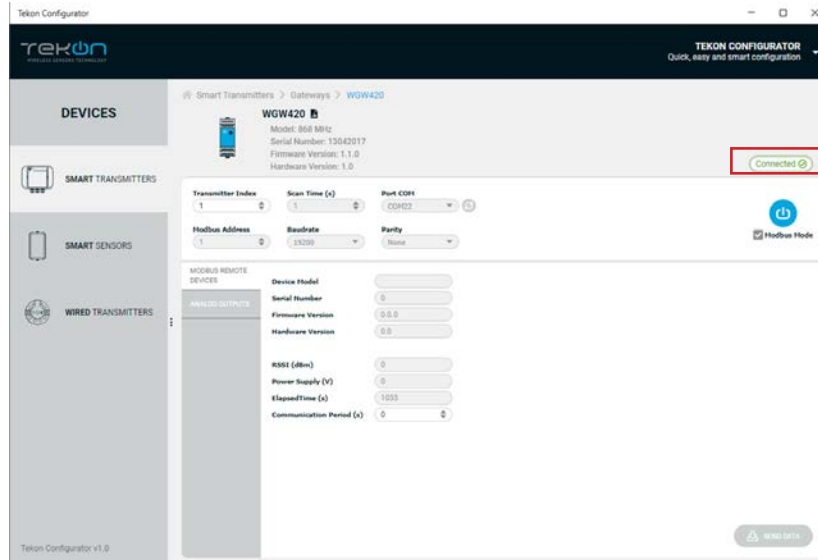

16

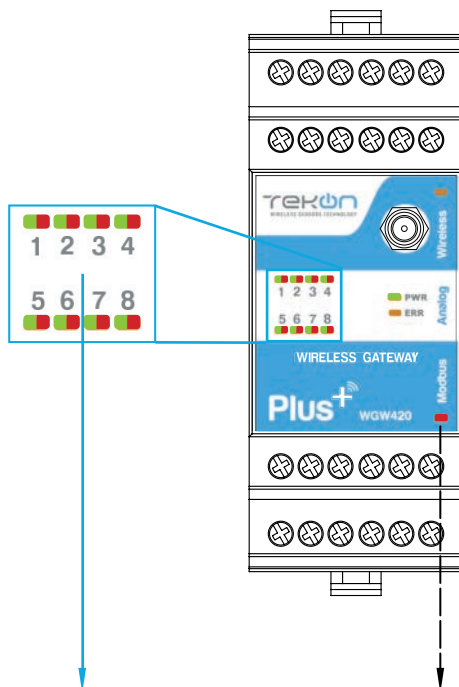

- Red LEDs permanently on
- LED flashes on each wireless communication



NOTE:

See WG420 Datasheet to access LED indication information - page 4.

step
02

TWP-4AI4DI1UT PLUS WIRELESS TRANSMITTER CONFIGURATION

TWP-4AI4DI1UT PLUS WIRELESS TRANSMITTER CONFIGURATION

01 Loosen the 4 screws of the case and open it.

[Example image]



02 Connect a micro USB cable to the computer and then to *TWP-4AI4DI1UT PLUS Wireless Transmitter*.

[Example image]



03 Open *Tekon Configurator Software*

step

02


TWP-4AI4DI1UT PLUS WIRELESS TRANSMITTER CONFIGURATION

04


Open the TWP-4AI4DI1UT PLUS Wireless Transmitter device page.

You can enter the device's page in the following ways:

1st option: Click on **"SMART TRANSMITTERS"** in the left menu and then click on the TWP-1UT.

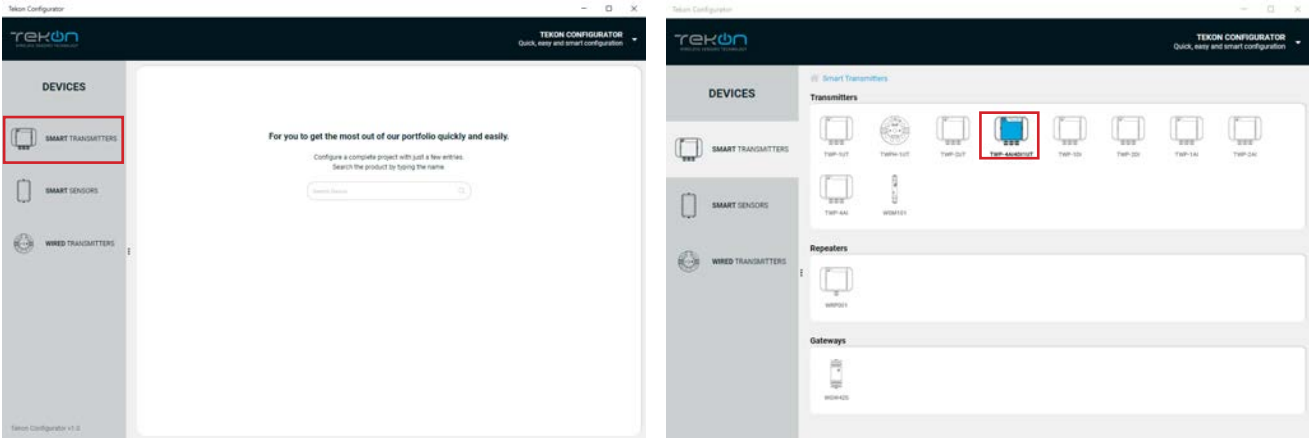


2nd option: Type the name of the device in the **"Search Device"** field on the home page and select.

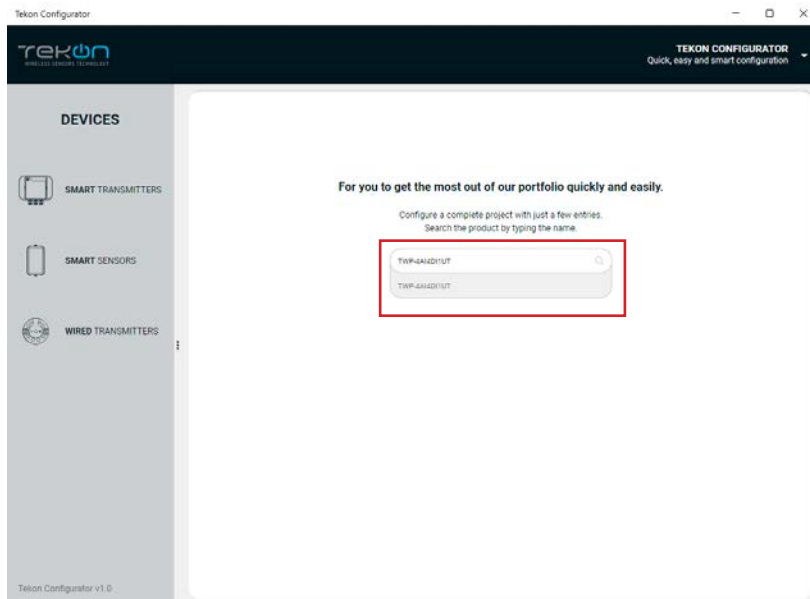

TWP-4AI4DI1UT PLUS WIRELESS TRANSMITTER CONFIGURATION

05

Load the “Port COM” corresponding to the TWP-4AI4DI1UT PLUS Wireless Transmitter.

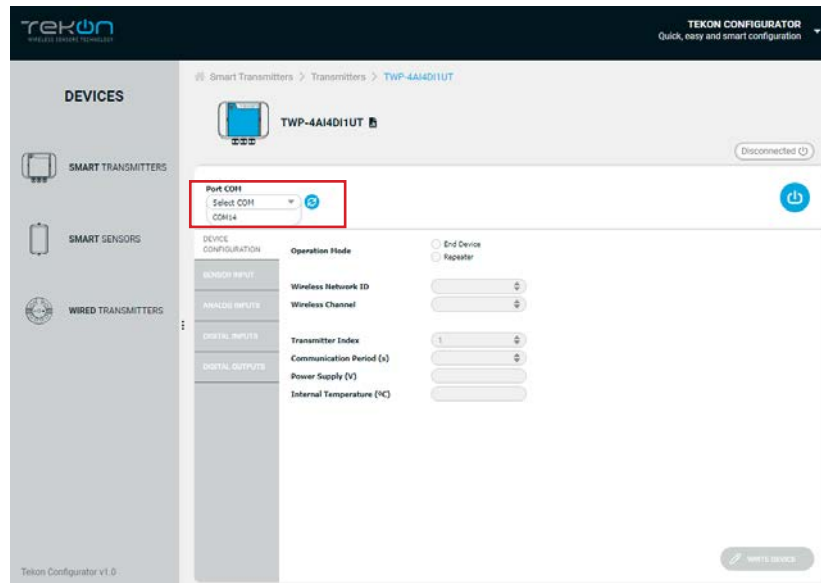


NOTE:

If the USB cable has already been connected before opening the device page, “Port COM” will appear in the list, otherwise click the button 

06

Select corresponding *Port Com*².

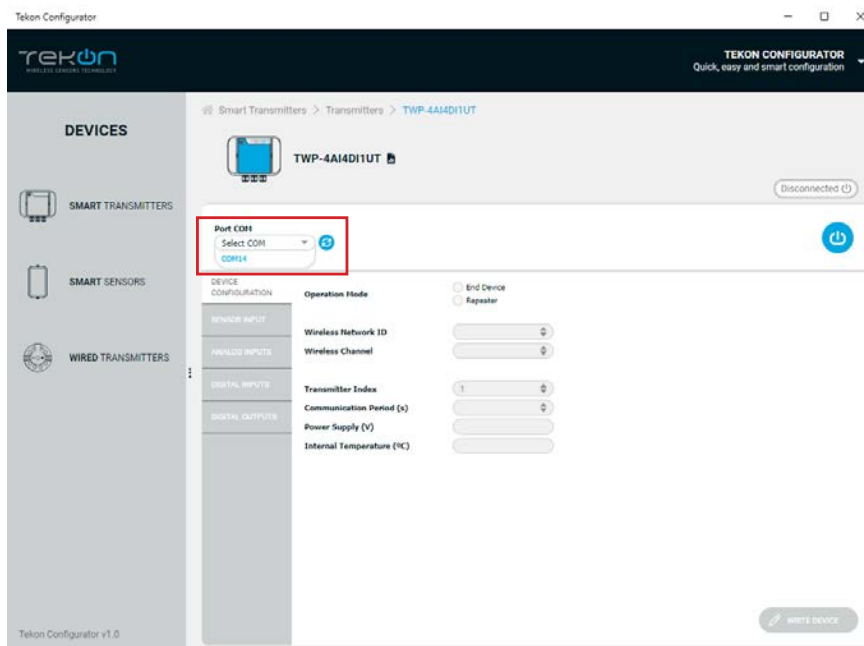

² You can check device’s serial port name in “Device Manager” on Microsoft® Windows® operating system.



step

02

TWP-4AI4DI1UT PLUS WIRELESS TRANSMITTER CONFIGURATION


07


Click on the “Connect” button () to enter *Configuration Mode*.

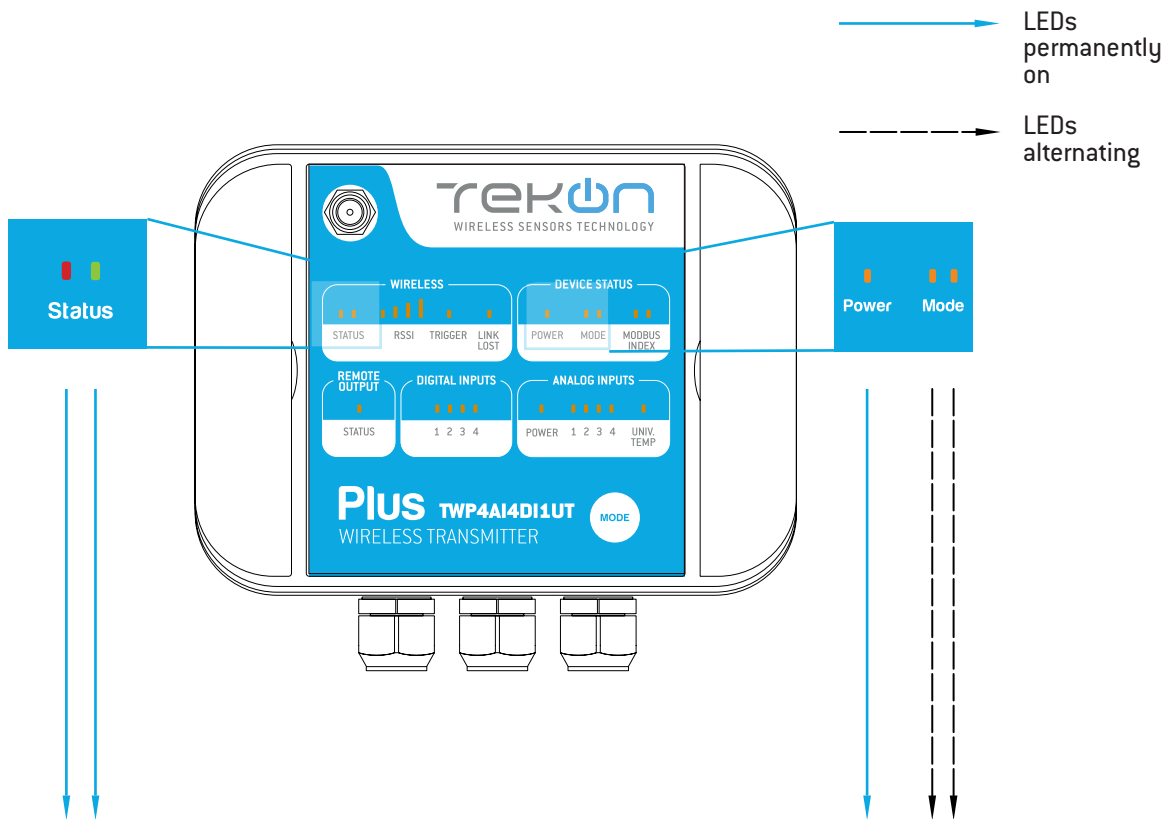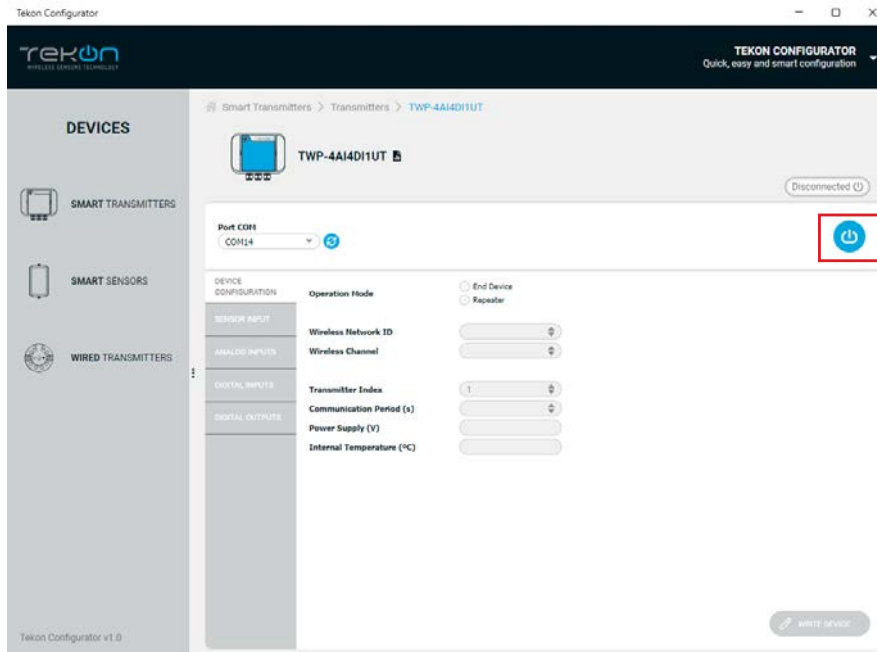


TWP-4AI4DI1UT PLUS WIRELESS TRANSMITTER CONFIGURATION

08 The software will connect to the device.

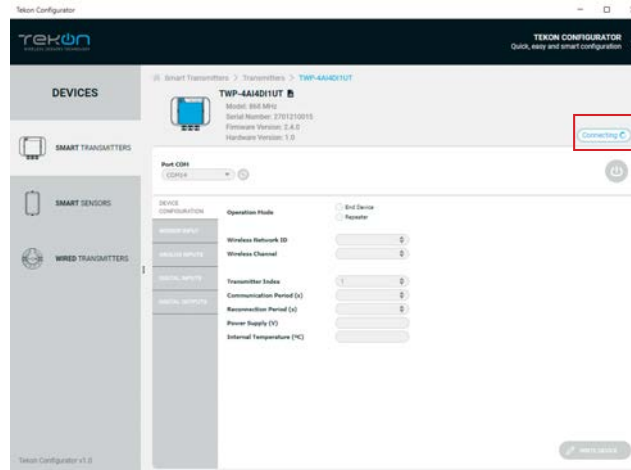

NOTE: If the software is unable to connect to the device, the  status is displayed. If it hasn't connected, go back to the previous steps and check the port COM.

09 When the software connects to the device, the "Connected" message will be displayed.

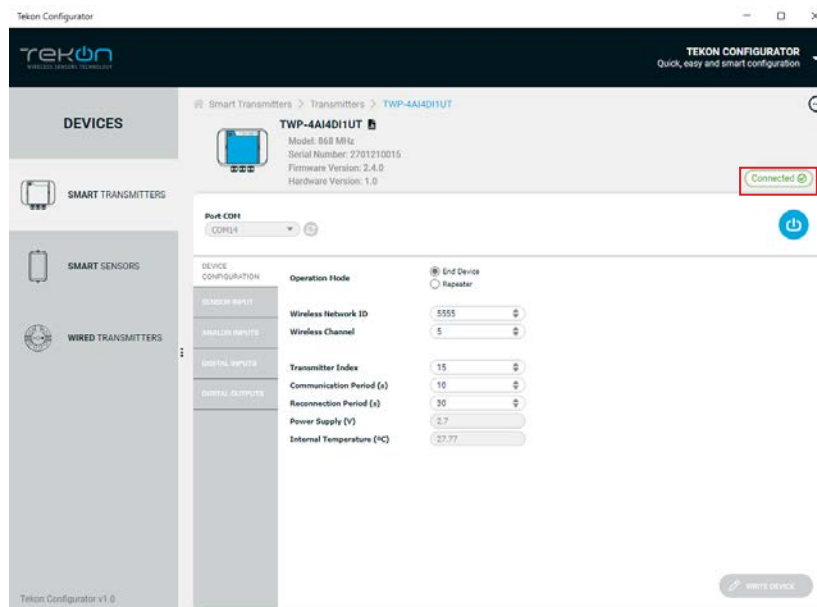

step

02


TWP-4AI4DI1UT PLUS WIRELESS TRANSMITTER CONFIGURATION

10

Configure *Wireless Network ID* and *Wireless Channel* previously obtained from *Gateway*.

The wireless connection between both devices is ensured by setting the same *Wireless Network ID* and *Wireless Channel* parameters. Gateway Modbus Index will define the modbus registers window used to store information sent by the transmitter. Each transmitter should have a different *Gateway Modbus Index* in order to avoid information override.

Click on *Write Device* button to update *Transmitter* settings.

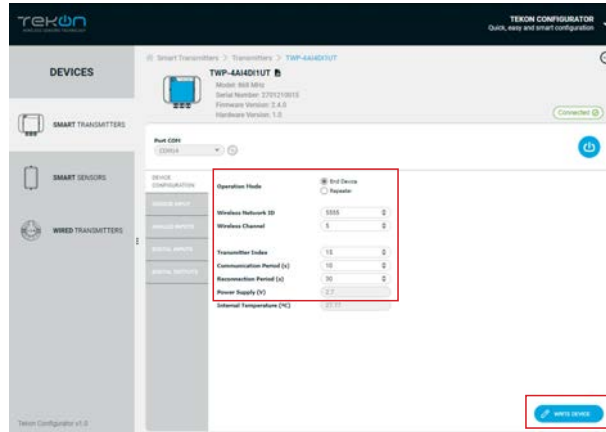

On this page you can configure the transmitter's *communication period*, i.e. the time interval between measurements and communication of the values to the gateway. In addition, you can configure the *reconnection period* which is only triggered when communication between the gateway and the transmitter fails. When communication fails, the transmitter will try to connect to the gateway using the following logic:


- 5 attempts with the communication period set;
- N attempts with the reconnection period until communication is successful.

The default reconnection period is 30 minutes. Please note that short reconnection periods (< 30 minutes) will impact the transmitter's autonomy if communication takes a long time to be re-established.



NOTE:

The "WRITE DEVICE" button will only be active when there is a change to one of the editable fields, if there is no change it will be deactivated.

While the settings are being written, the following icon will be displayed next to the "WRITE DEVICE" button ()

If the changes to the device have been written, the following symbol will appear ()



If not, the following symbol will appear (), try again and check that the device is connected correctly.

TWP-4A14D1UT PLUS WIRELESS TRANSMITTER CONFIGURATION

11

Click on the button (🔌) to exit *configuration mode* and return the device to normal operating mode.

After clicking on *Disconnect* button, the device will permanently attempt to connect to a wireless network. If there is no communication, the Status LED flashes slowly and the Mode LED flashes quickly. When there's a successful connection directly to a wireless network, both status LEDs alternate quickly - during 1 minute if the transmitter is operating as end device or permanently if operating as repeater.

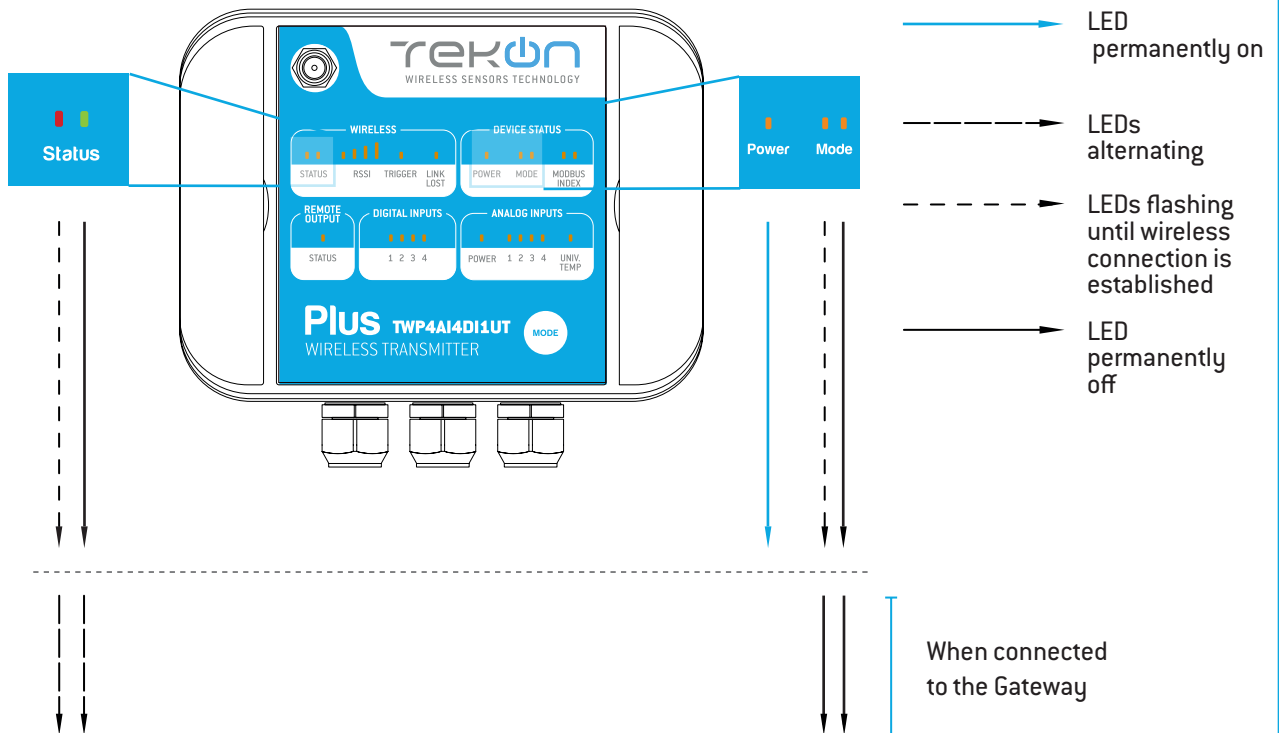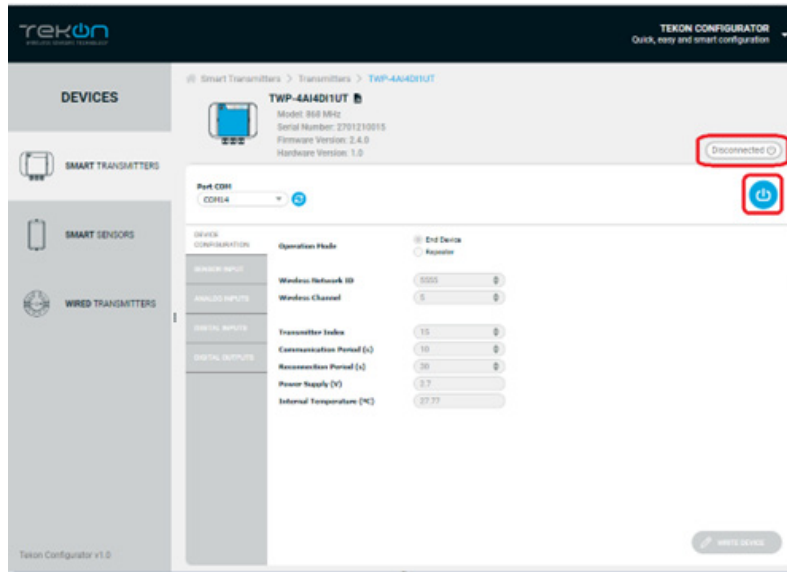

NOTE:

Make sure that the devices are at a distance of at least 3 meters or remove the antenna from the gateway (in case both devices are near each other).

step
03

TWP-4AI4DI1UT TRANSMITTER ANALOG INPUT CONFIGURATION

TWP-4AI4DI1UT TRANSMITTER ANALOG INPUTS CONFIGURATION



NOTE:


By default, analog inputs are switched OFF for power optimization. Each analog input can be configured independently, as current input [0..20mA] or voltage input [0..10V]

01

To enter in *Configuration Mode* follow steps 01 to 10 of TWP-4AI4DI1UT PLUS Wireless *Transmitter* Configuration.


02

In the Tekon Configurator Software, click on *"Analog Inputs"* to open the sensor settings.

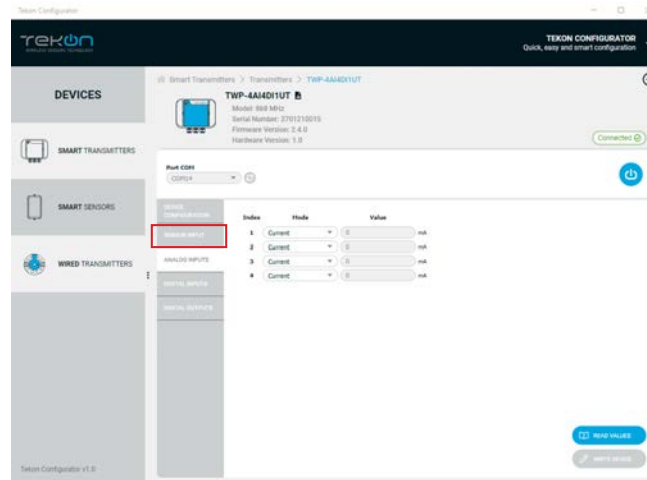

03

As an example, select the *Current* option under Mode and click on *"Write Device"*.

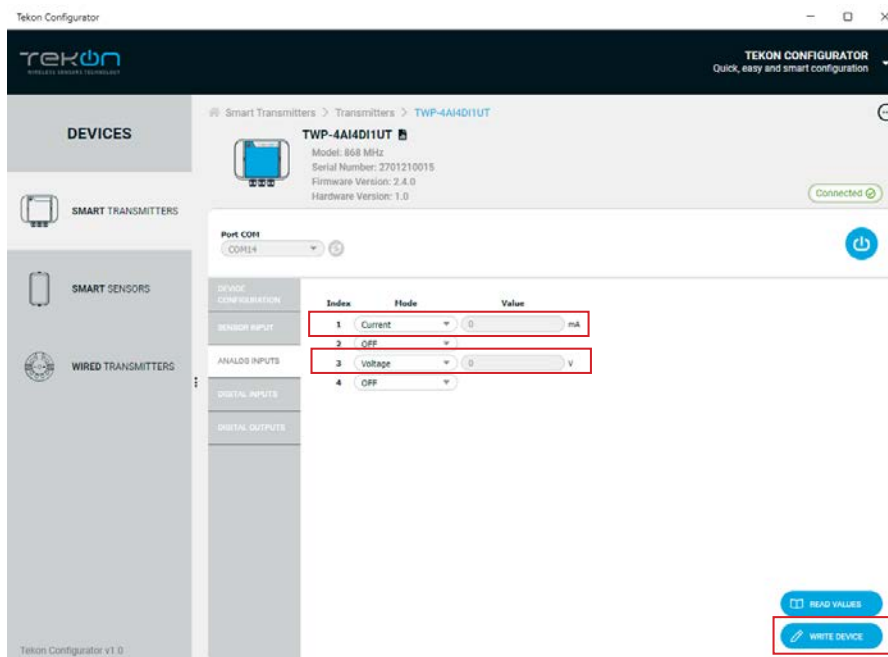




step


03

TWP-4AI4DI1UT TRANSMITTER ANALOG INPUTS CONFIGURATION

04

Wait for the software to write the new setting to the device. Wait for the status  to change to .

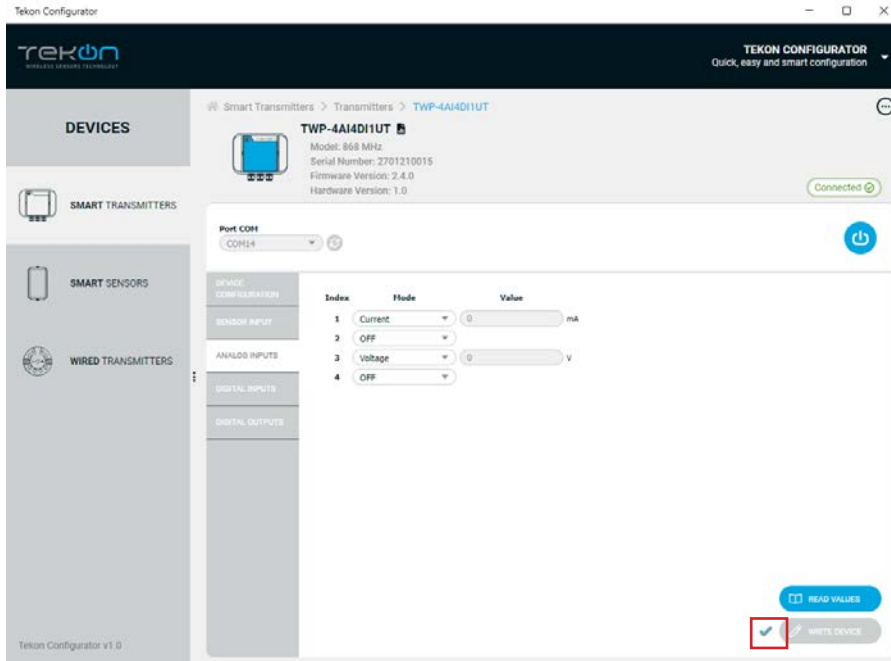


If the writing of the device is not completed, you will see . Make sure that all the steps have been carried out correctly.

05

Wiring


Wire the device according to the diagram below.

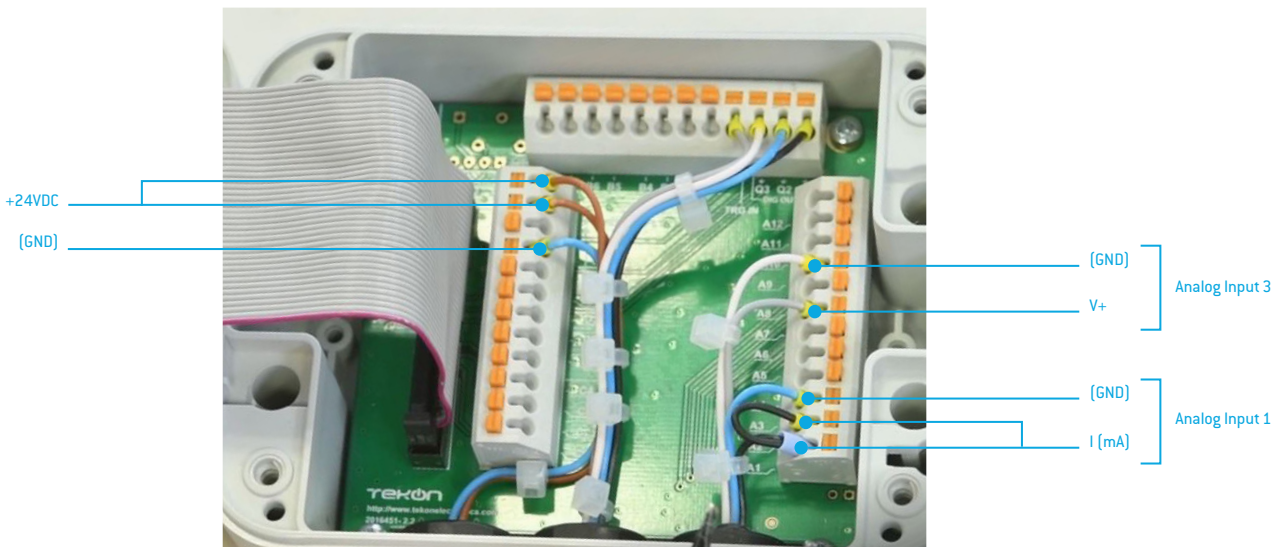

TWP-4AI4DI1UT TRANSMITTER ANALOG INPUTS CONFIGURATION

06

Validate configuration by clicking on *Read Values* button.

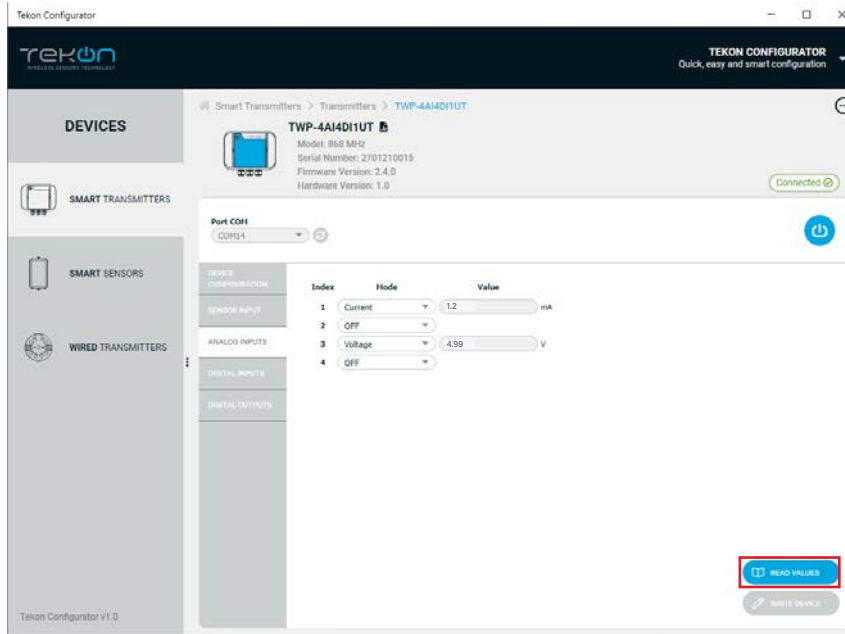

NOTE:



Configuration and Operation validated.
Measured value of current and voltage depend on the setup. In this example 12mA (12000uA) are being injected.

step
04

TWP-4AI4DI1UT TRANSMITTER DIGITAL INPUTS CONFIGURATION

TWP-4AI4DI1UT TRANSMITTER DIGITAL INPUTS CONFIGURATION step
04




NOTE:
Sink type Digital Input.
Configuration of Digital Input Trigger.

01

To enter in *Configuration Mode* follow steps 01 to 10 of TWP-4AI4DI1UT PLUS Wireless *Transmitter* Configuration

02

In *Tekon Configurator Software* select *Digital Outputs*.

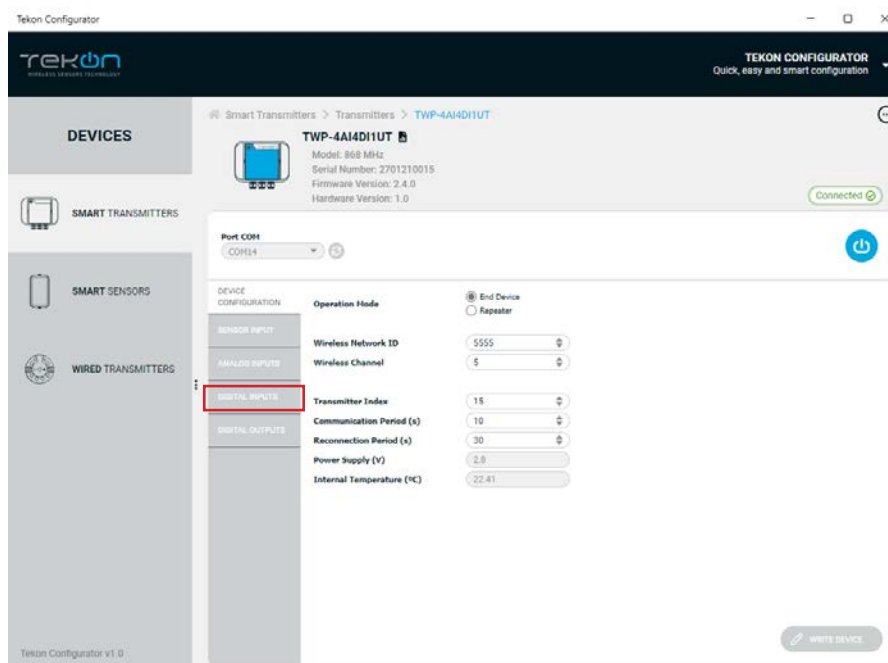


step

04



TWP-4AI4DI1UT TRANSMITTER DIGITAL INPUTS CONFIGURATION


03

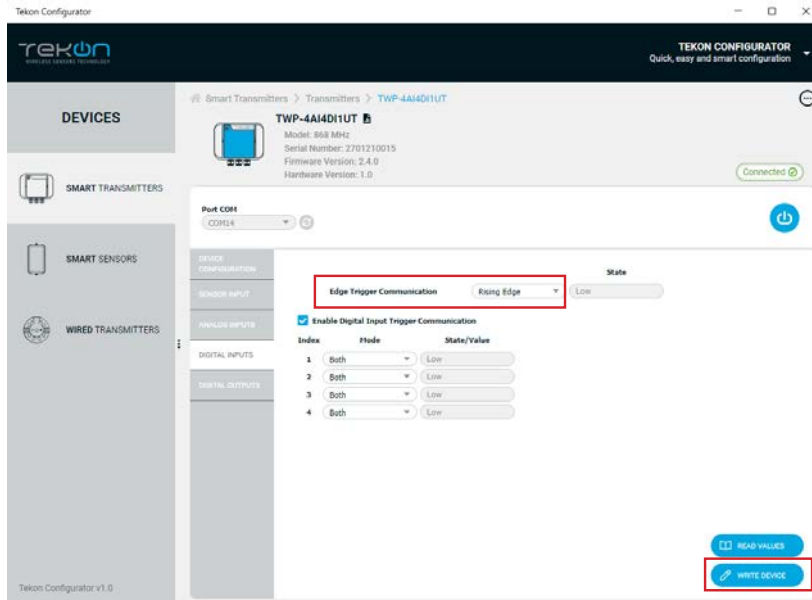
Select Operation Mode *Rising Edge* and click on *Write Device* button.



04

Wait for the software to write the new setting to the device. The status  of should change to .

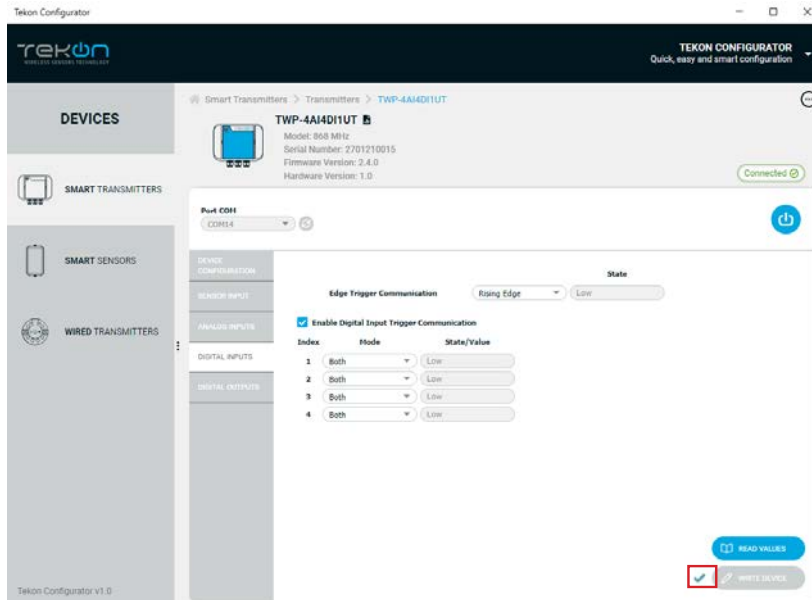


If the writing of the device is not completed, you will see . Make sure that all the steps have been carried out correctly.

TWP-4A14D1UT TRANSMITTER DIGITAL INPUTS CONFIGURATION


05

Validate functionality and click on *Disconnect* button.
Wait for the device to connect to the Gateway and observe data in Tekon Configurator window.

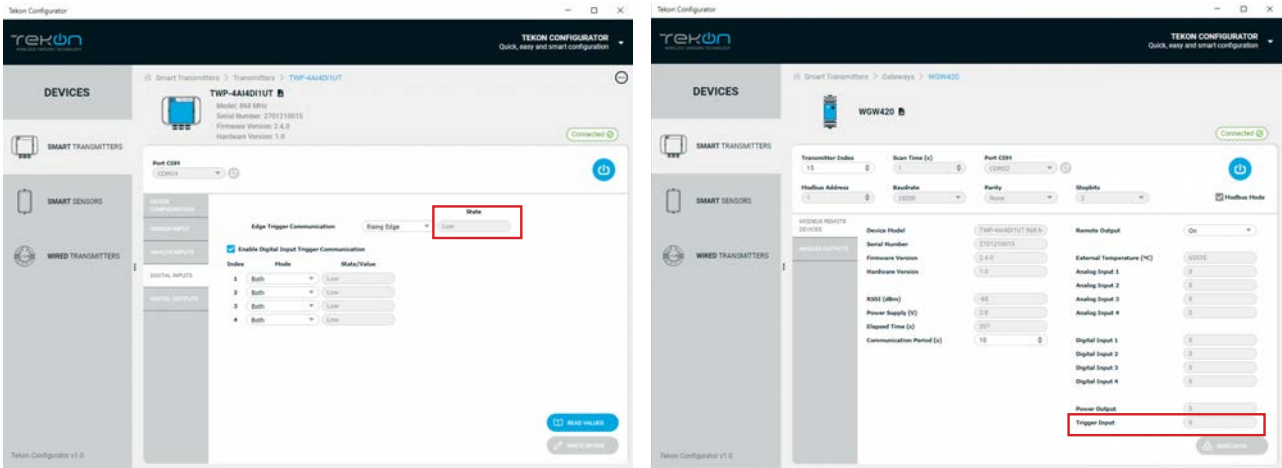

06

Click on the checkbox *Enable DI Trigger Communication* to enable the digital inputs configuration.

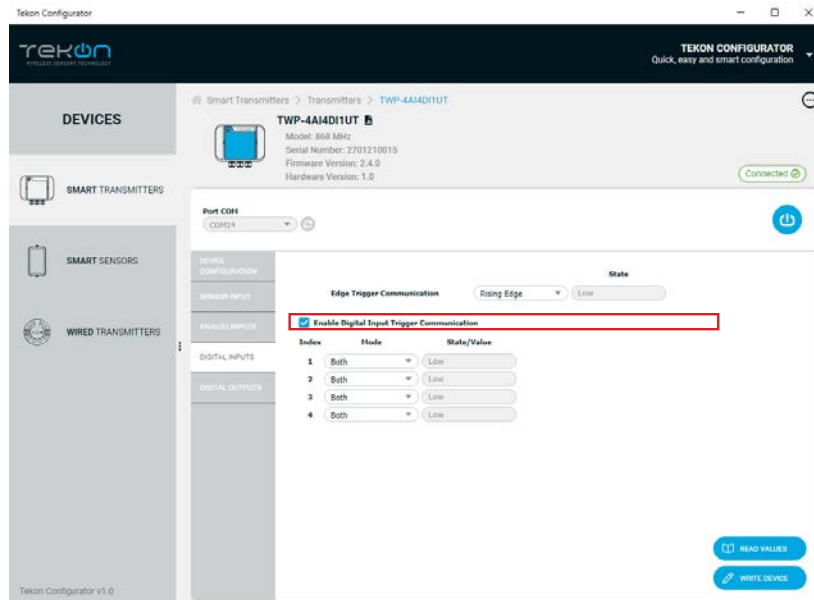


step



04


TWP-4AI4DI1UT TRANSMITTER DIGITAL INPUTS CONFIGURATION

07

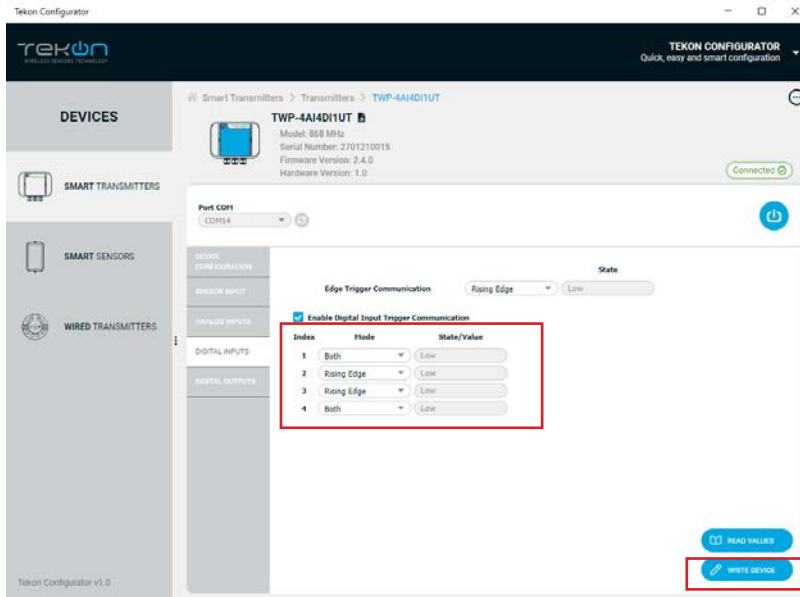Select the *Event Trigger* for each connected digital input and click on *Write Device* button




Wait for the software to write the new setting to the device. The status  should change to .

If the writing of the device is not completed, you will see . Make sure that all the steps have been carried out correctly.

08



Change the digital input state and click on *Read Values* to check the state of the digital inputs.

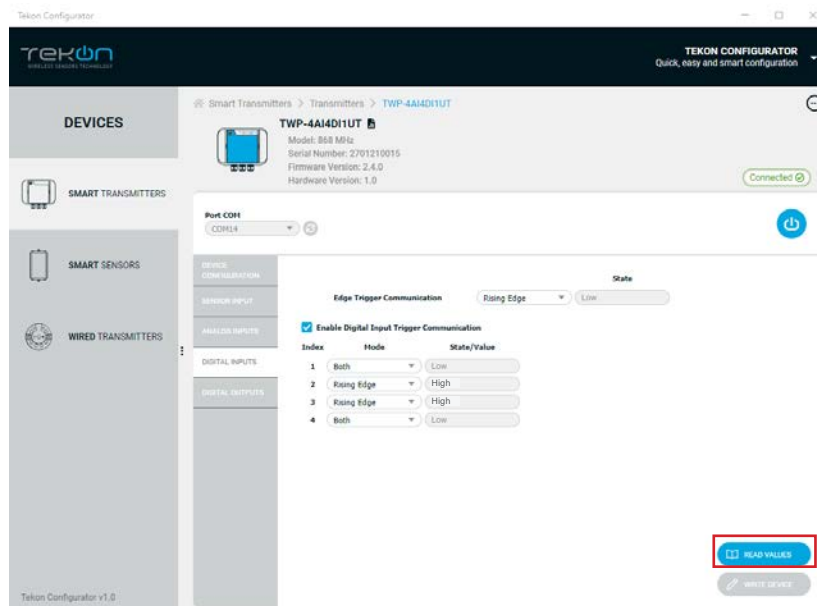

TWP-4AI4DI1UT TRANSMITTER DIGITAL INPUTS CONFIGURATION

09

Validate functionality and click on *Disconnect* button.
 Wait for the device to connect to the Gateway and observe data in Tekon Configurator window.
 Trigger an event on your digital inputs and observe an earlier communication and the state of each Digital Input.

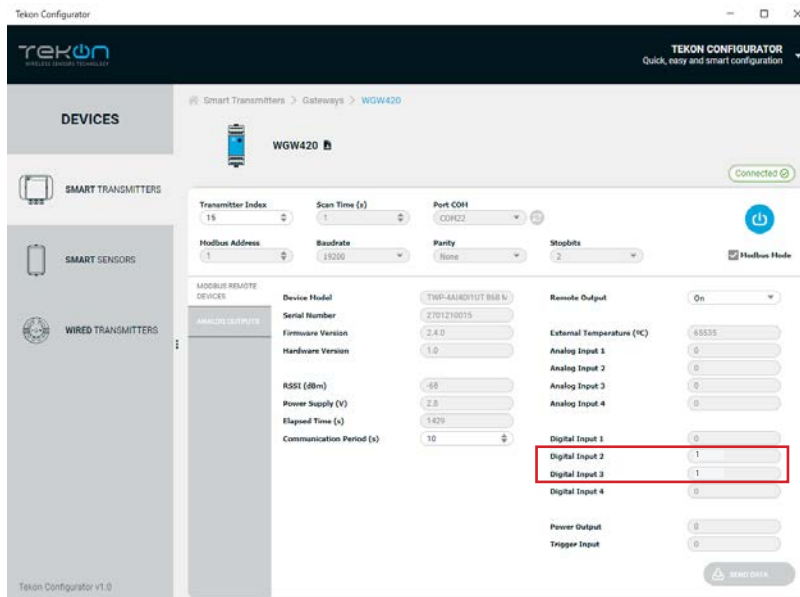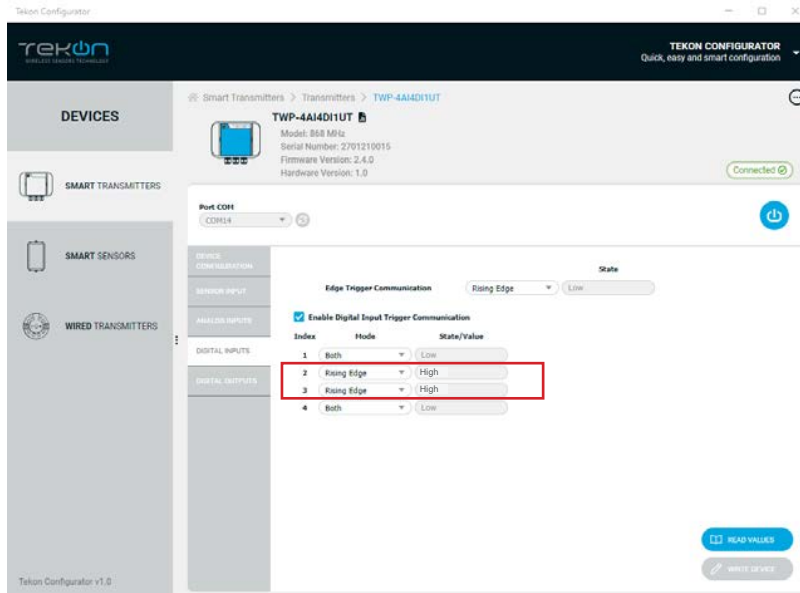


step
05

TWP-4AI4DI1UT TRANSM. UNIV. TEMPERATURE INPUT CONFIGURATION


TWP-4AI4DI1UT TRANSMITTER UNIVERSAL TEMPERATURE INPUT CONFIGURATION



01 To enter in *Configuration Mode* follow steps 01 to 10 of TWP-4AI4DI1UT PLUS Wireless *Transmitter* Configuration

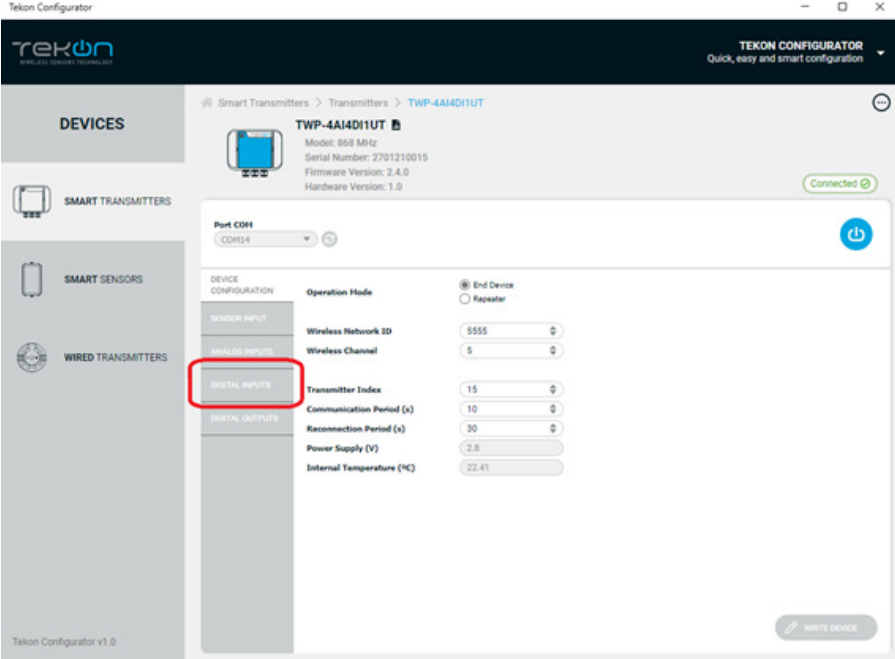
02 In *Tekon Configurator Software* select *SENSOR INPUT*

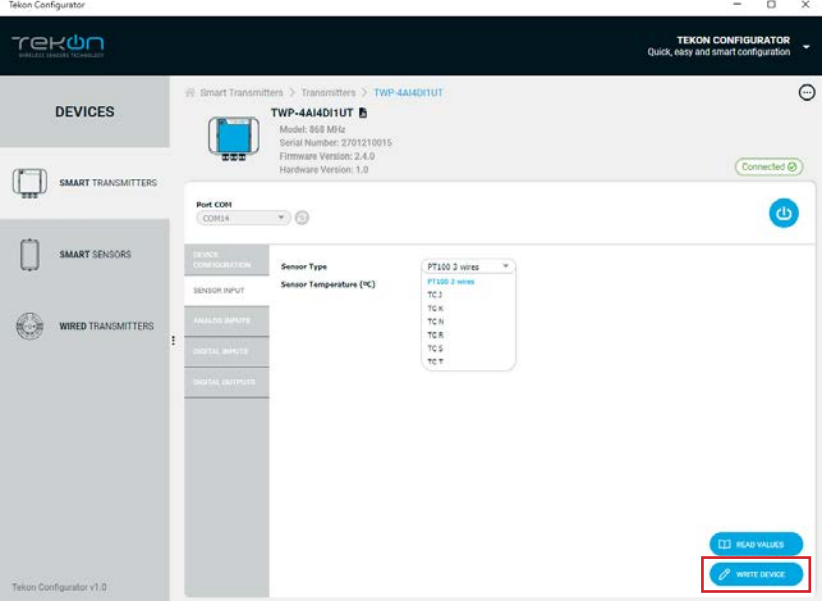

03 Select the *Sensor Type* connected to the transmitter universal temperature input and click on *Write* button.



Wait for the software to write the new setting to the device. Wait for the status  to change to .


If the writing of the device is not completed, you will see . Make sure that all the steps have been carried out correctly.

step
05

TWP-4AI4DI1UT TRANSMITTER UNIVERSAL TEMPERATURE INPUT CONFIGURATION


04

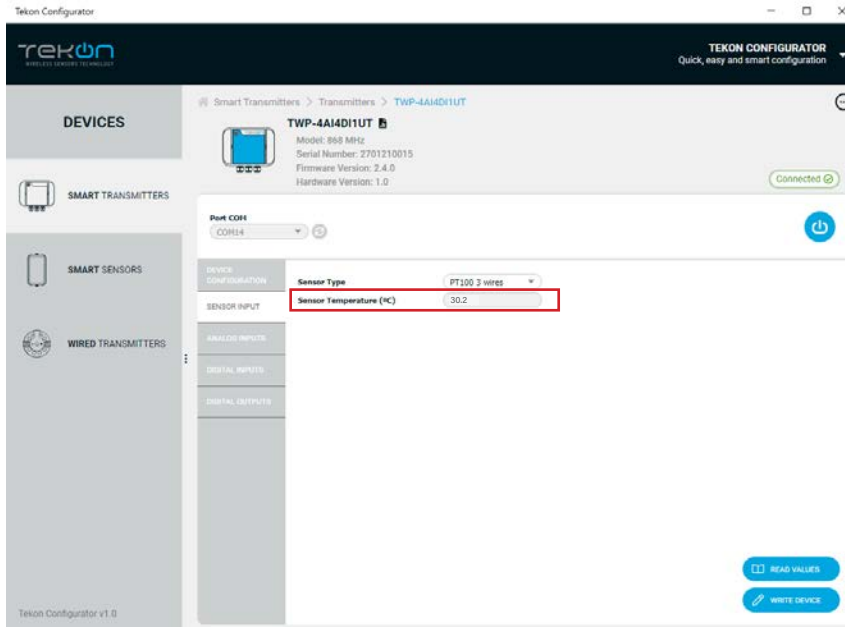

You can check the *Sensor Temperature*.




05

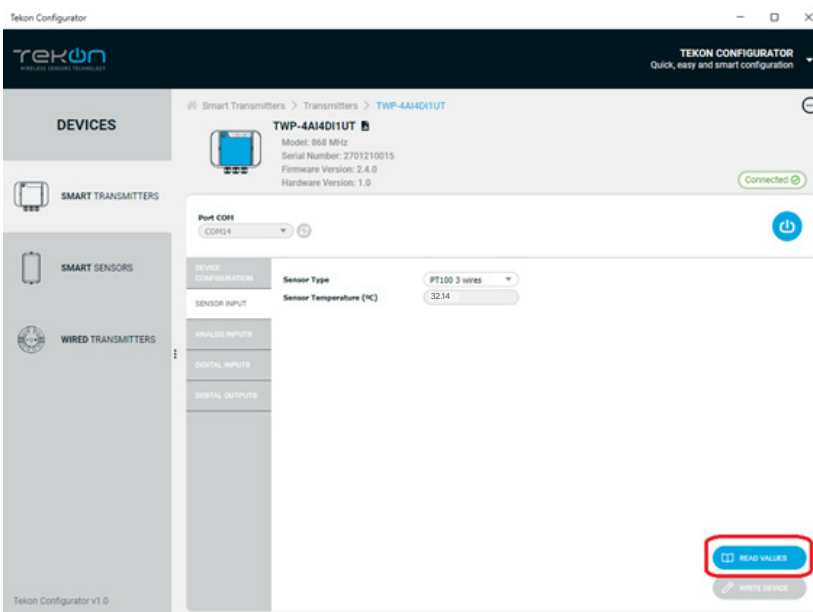Click on *Read Values* button to update the temperature readings and wait for the read success message.



Wait for the software to read the values from the device. Wait for the  status to change to 

If the device reading fails,  appears. Make sure that all the steps have been carried out correctly.



NOTE:

If the readed value is "65535", please check the presence of temperature probe and its connection.

step
06


TWP-4AI4DI1UT TRANSMITTER DIGITAL OUTPUTS CONFIGURATION

step
06


TWP-4AI4DI1UT TRANSMITTER DIGITAL OUTPUTS CONFIGURATION

01 To enter in *Configuration Mode* follow steps 01 to 10 of TWP-4AI4DI1UT PLUS Wireless *Transmitter* Configuration

02 In *Tekon Configurator Software* select *Digital Outputs* menu.

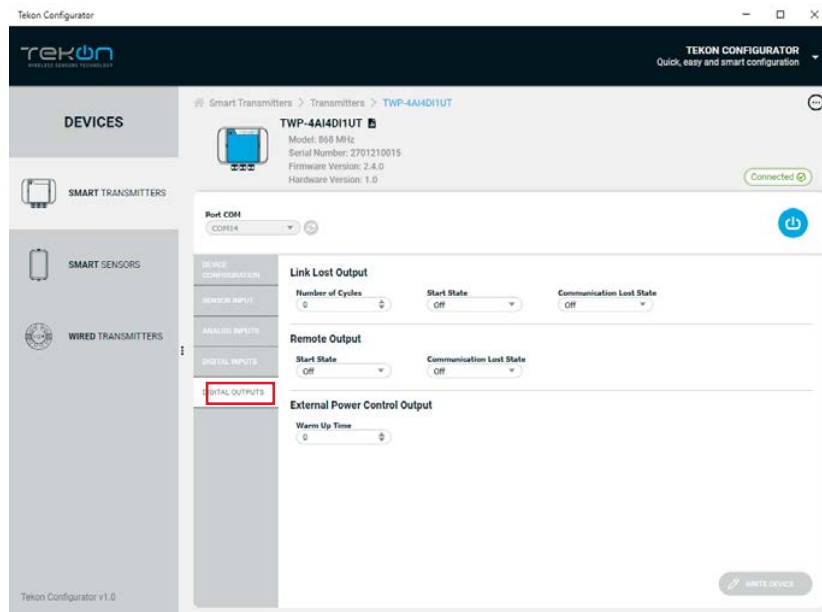


03 **Link Lost Output**
Output that outputs wireless connection state of the device.

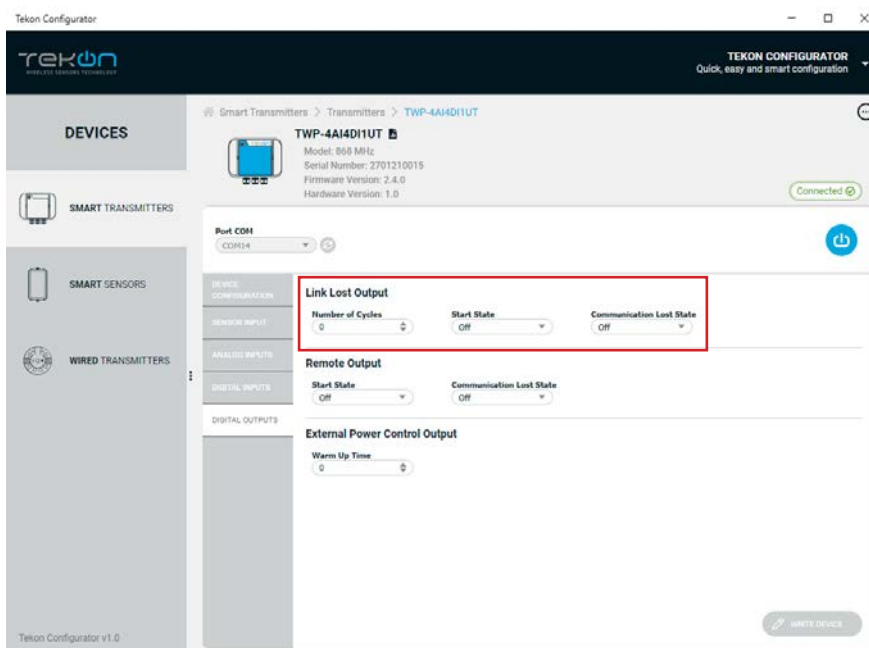




TWP-4AI4DI1UT TRANSMITTER DIGITAL OUTPUTS CONFIGURATION

03.1

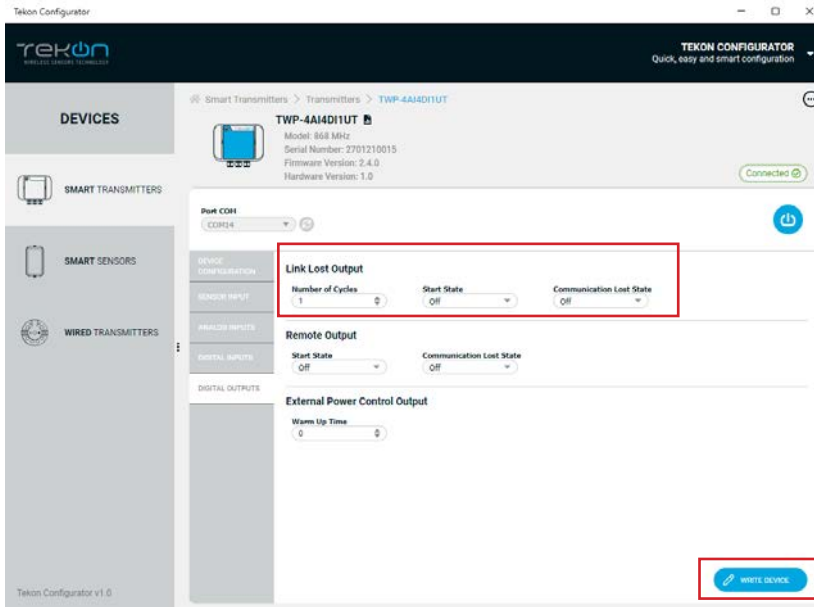Select *number of cycles*, *start state* and *communication lost state* and click on *Write Device* button.




Wait for the software to write the new setting to the device. Wait for the status  to change to .

If the writing of the device is not completed, you will see . Make sure that all the steps have been carried out correctly.

03.2

Exit configuration mode and verify setup by checking LEDs indicators..

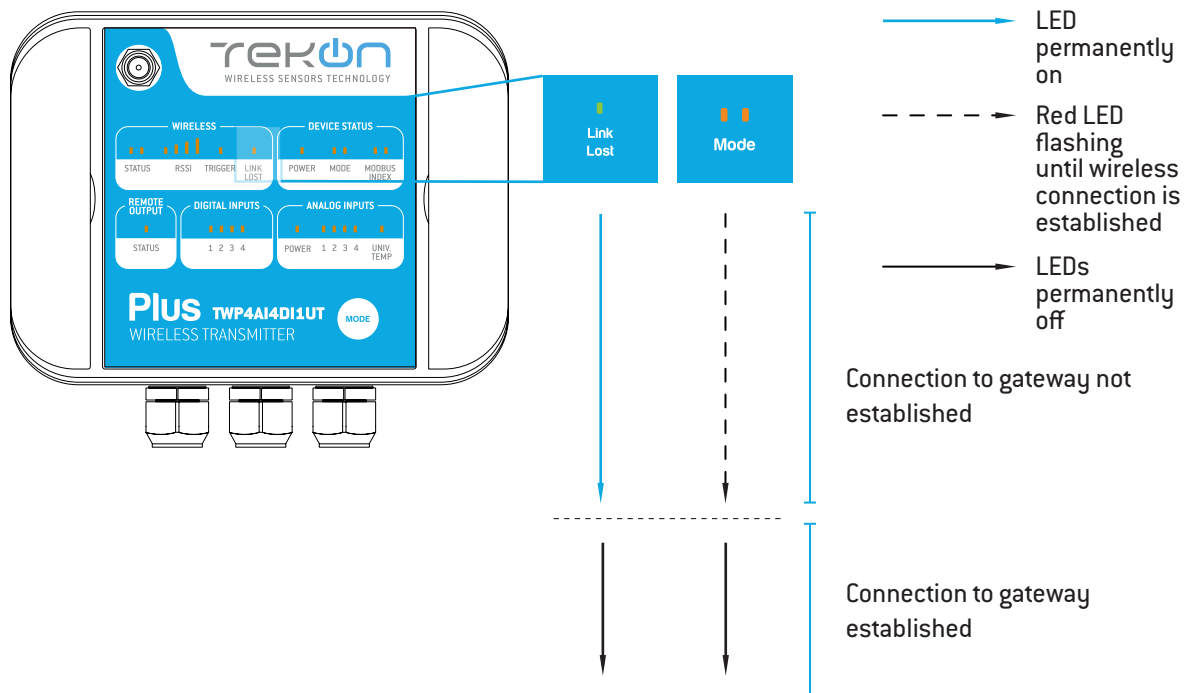




step
06


TWP-4AI4DI1UT TRANSMITTER DIGITAL OUTPUTS CONFIGURATION

04 **Remote Control Output**
Digital output remotely controlled by Gateway modbus protocol.

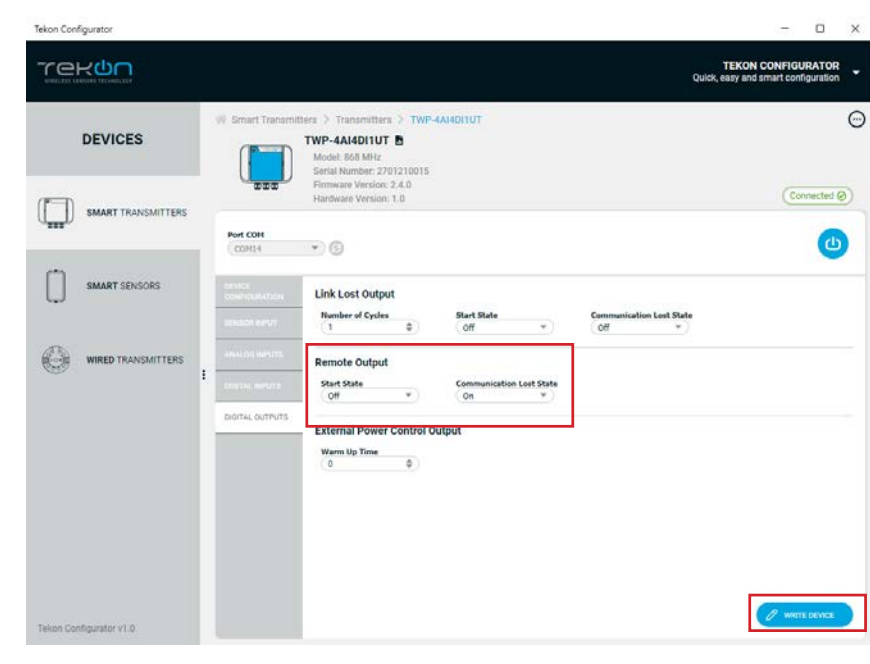
04.1 Define *start state* and *Communication lost state*. Click on *Write Device* button.



Wait for the software to write the new setting to the device. Wait for the status  to change to .

If the writing of the device is not completed, you will see . Make sure that all the steps have been carried out correctly.



04.2 Exit configuration mode and verify setup by checking LEDs indicators.

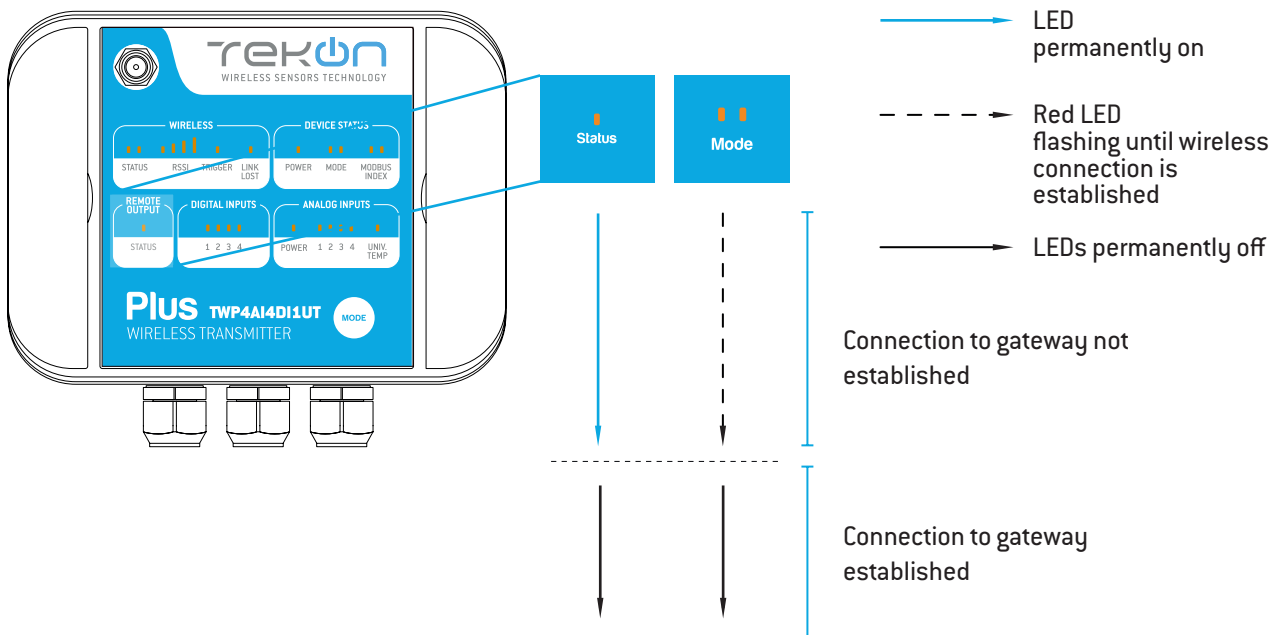

TWP-4AI4DI1UT TRANSMITTER DIGITAL OUTPUTS CONFIGURATION

04.3

Using the Tekon Configurator you can change the State of Remote Output by setting the modbus register on the gateway. The Gateway will send the information in the next time the transmitter performs a communication.

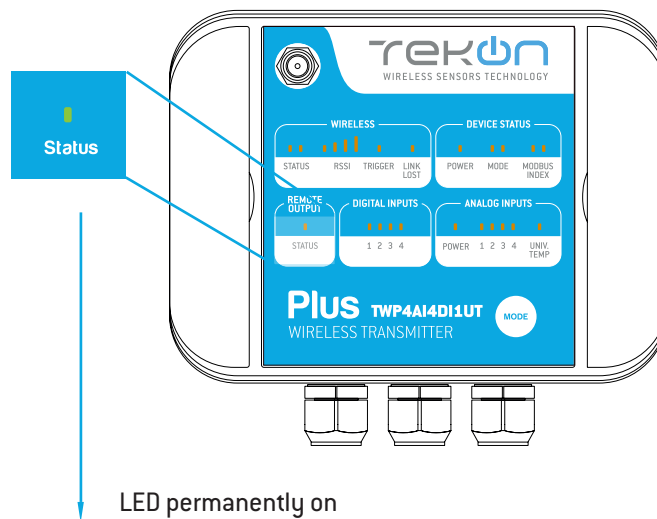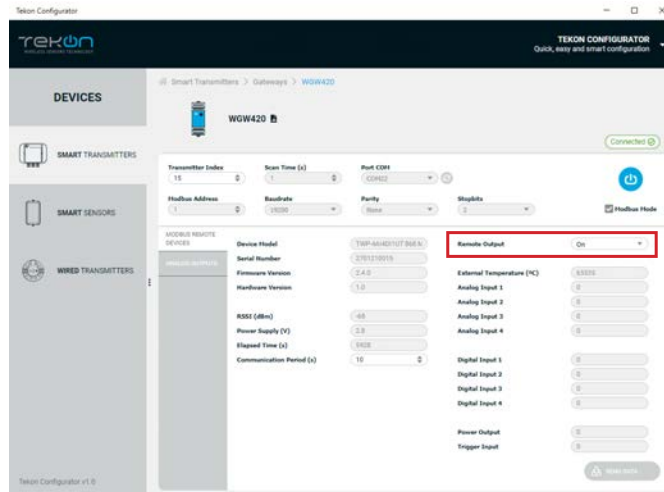

05

External Power Control Output


Time configurable output to power on an external device before data acquisition and transmission.



step
06


TWP-4AI4DI1UT TRANSMITTER DIGITAL OUTPUTS CONFIGURATION

05.1

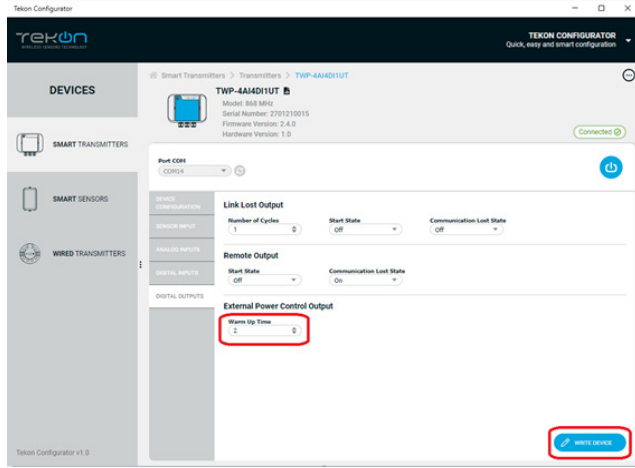Define *Warm up time* and click on the *Write Device* button.




Wait for the software to write the new setting to the device. Wait for the status  to change to .

If the writing of the device is not completed, you will see . Make sure that all the steps have been carried out correctly.

05.2

Exit configuration mode and verify setup by checking LEDs indicators.

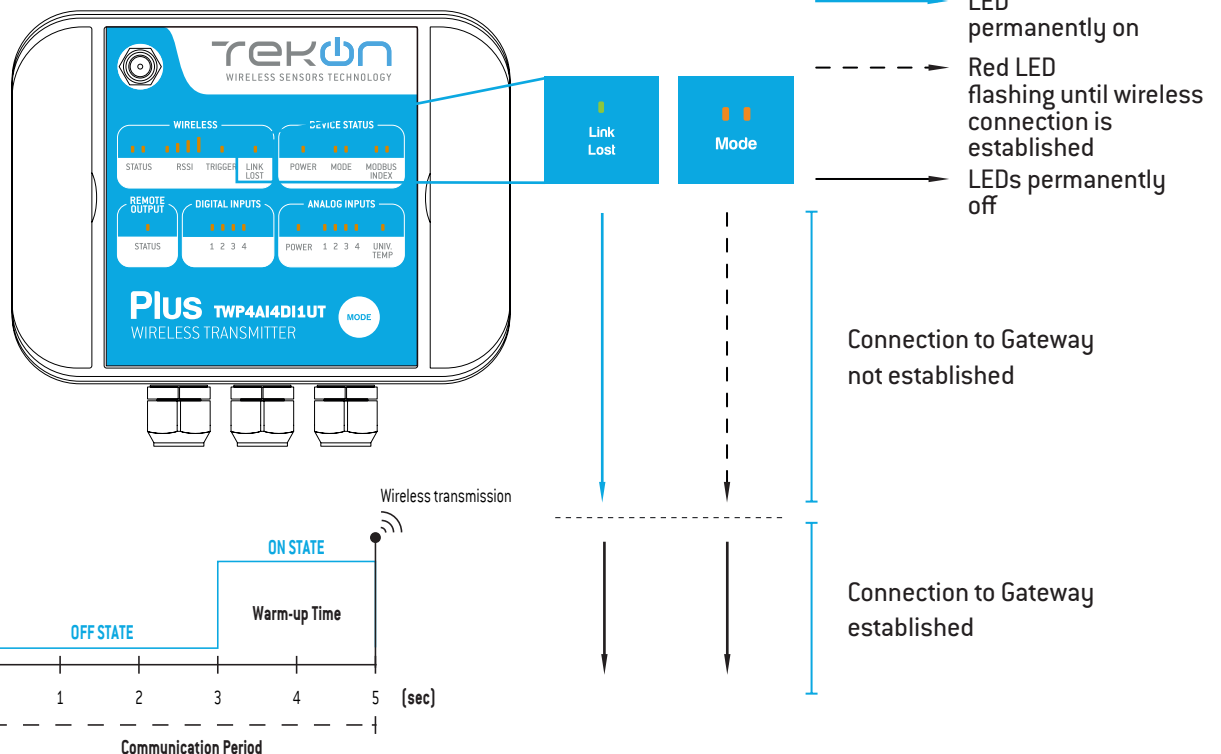

NOTE:

Diagram only applies after the transmitter and gateway are connected.


step
07

WGW420 GATEWAY ANALOG OUTPUTS CONFIGURATION


step
07 | GATEWAY ANALOG OUTPUTS

01 Follow steps 01 and 14 of the *WGW420 PLUS GATEWAY* configuration.

02 In *Tekon Configurator Software* select *Modbus Mode* >> *Analog Outputs* menu

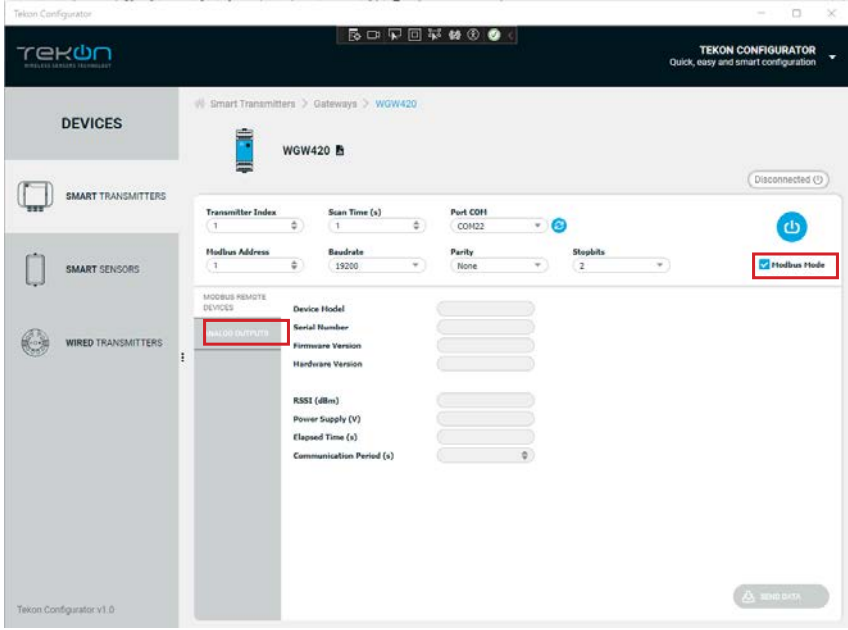

03 Considering the transmitter configuration with Modbus Adress=1, there is a Gateway Modbus Address Window corresponding to Modbus address window [0-19].

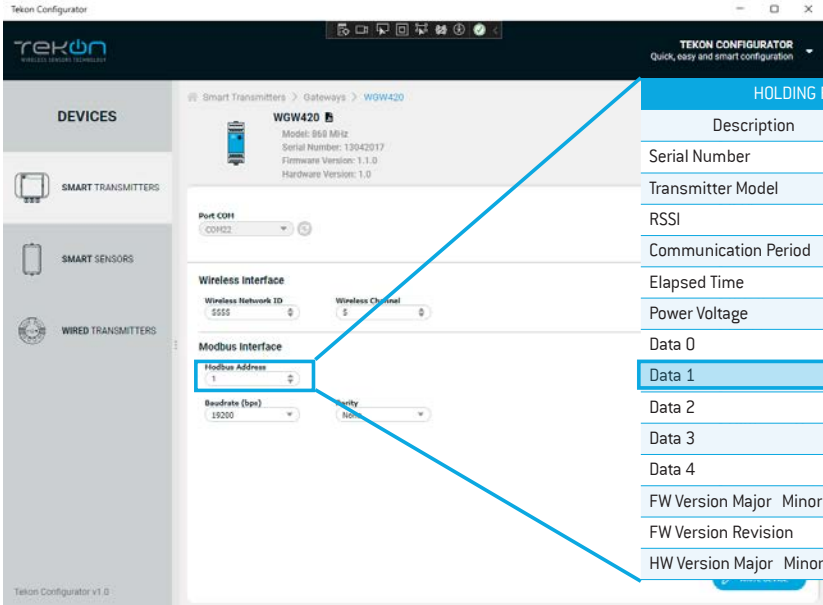


HOLDING REGISTERS - TRANSMITTERS DATA		
Description	Address	
Serial Number	{Transmitter Modbus Index-1} x 20+0	0
Transmitter Model	{Transmitter Modbus Index-1} x 20+2	
RSSI	{Transmitter Modbus Index-1} x 20+3	
Communication Period	{Transmitter Modbus Index-1} x 20+4	
Elapsed Time	{Transmitter Modbus Index-1} x 20+5	
Power Voltage	{Transmitter Modbus Index-1} x 20+6	
Data 0	{Transmitter Modbus Index-1} x 20+7	
Data 1	{Transmitter Modbus Index-1} x 20+9	9
Data 2	{Transmitter Modbus Index-1} x 20+11	
Data 3	{Transmitter Modbus Index-1} x 20+13	
Data 4	{Transmitter Modbus Index-1} x 20+15	
FW Version Major Minor	{Transmitter Modbus Index-1} x 20+17	
FW Version Revision	{Transmitter Modbus Index-1} x 20+18	
HW Version Major Minor	{Transmitter Modbus Index-1} x 20+19	19

NOTE: Transmitter analog input 1 data is received and stored at the Gateway Modbus address [9].

04


Link the “*Output Index*” (Gateway) to Temperature Input 1 (Transmitter) and configure the “*Modbus Address Link*” according to the previous step. Set the minimum and maximum values and click on “*Send Data*”.

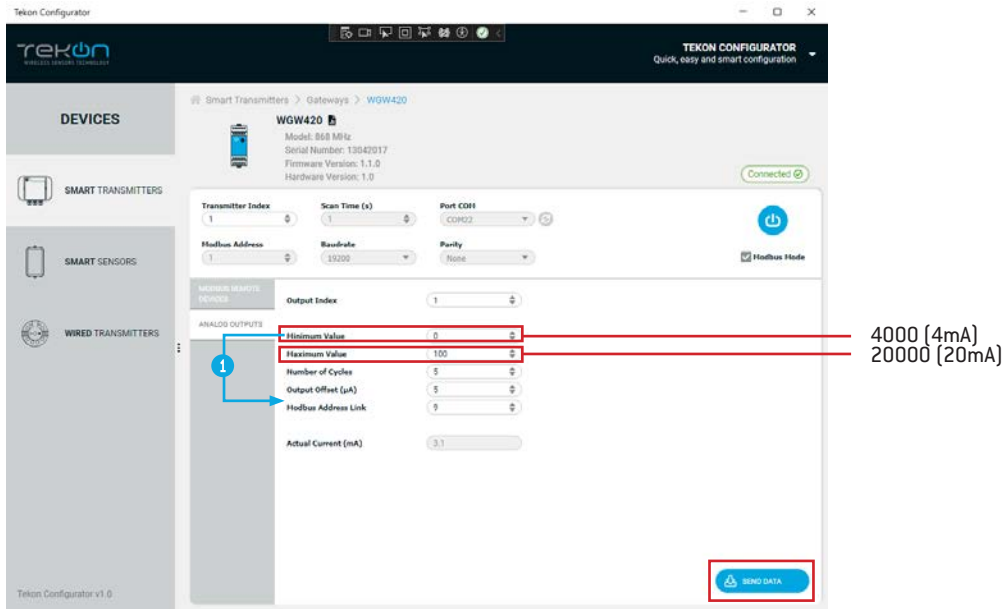

NOTE:

① Output index 1 is linked to modbus address [9], according to mapping table of step 03.

Modbus address double word [float 32] value is converted into 4..20 mA scale according to minimum and maximum defined values.

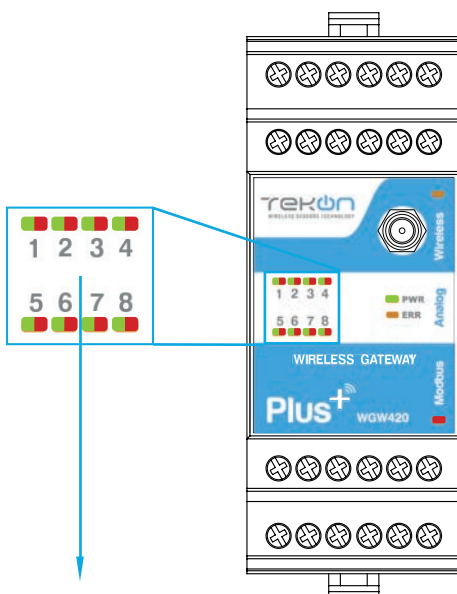

- 1** → Green led permanently on during a closed current loop
- 2** → Red led permanently on during an open current loop

step
08


WRP001 PLUS WIRELESS REPEATER CONFIGURATION

CONNECT AND CONFIGURE THE PLUS WIRELESS REPEATER

01 Loosen the 4 screws of the case and open it.



02 Connect a micro USB cable to the computer and then to *WRP001 PLUS Wireless Repeater*.

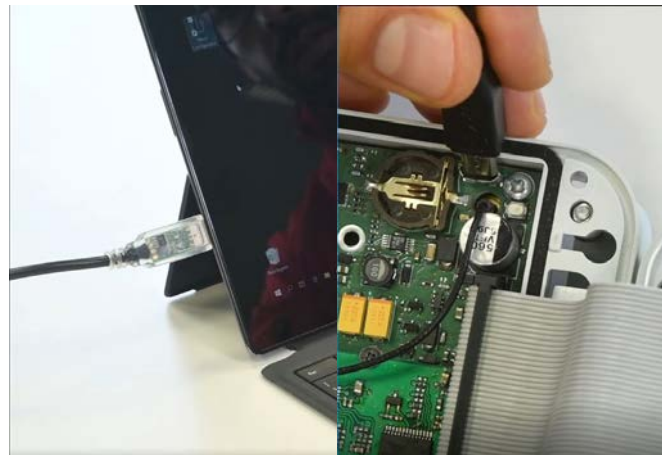


03 Open the WRP001 PLUS Wireless Repeater device page. There are two different ways to get to the device page.

1st option: Click on **“SMART TRANSMITTERS”** in the left menu and then click on the device.


step
08


CONNECT AND CONFIGURE THE PLUS WIRELESS REPEATER

2nd option: Enter the name of the device in the “Search Device” field on the home page and select.

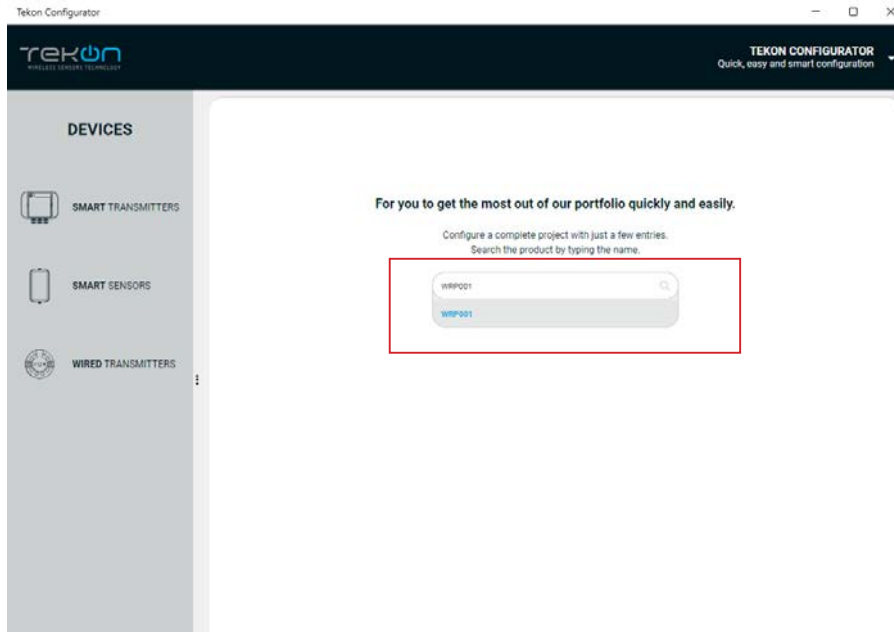


04

Load the “Port COM” corresponding to the WRP001 PLUS Wireless Repeater.
If the USB cable has already been connected before opening the device’s page, the “COM Port” will appear in the list, otherwise click on the button .

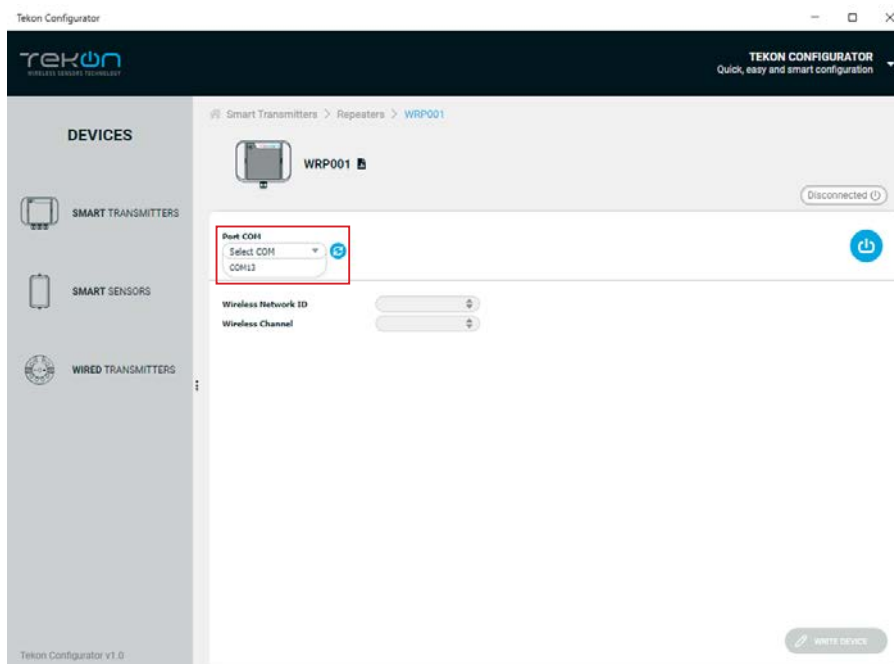


CONNECT AND CONFIGURE THE PLUS WIRELESS REPEATER

05 Select *Port Com*¹.

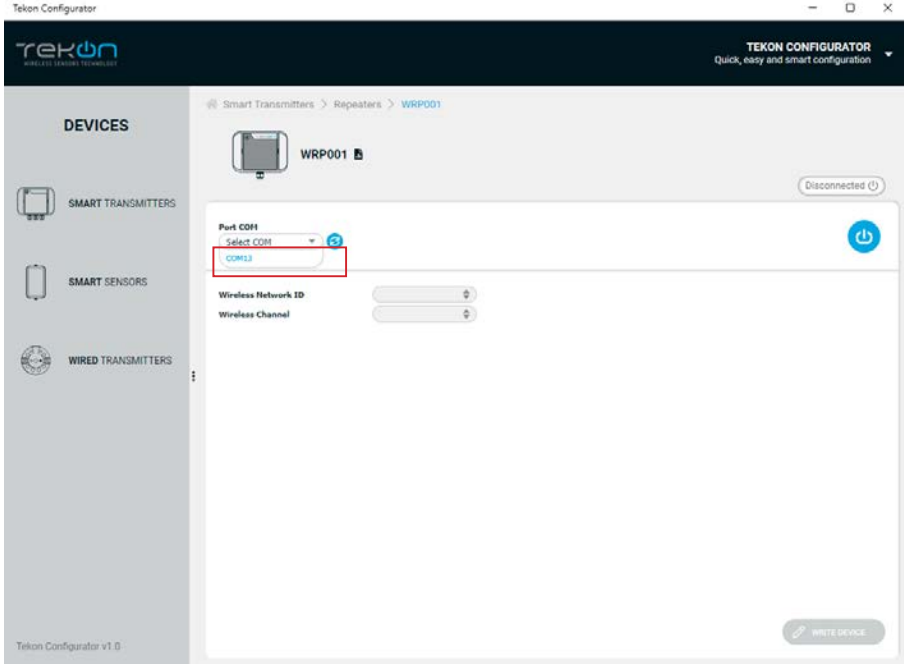

The screenshot shows the Tekon Configurator v1.0 interface. On the left, there is a 'DEVICES' sidebar with categories: SMART TRANSMITTERS, SMART SENSORS, and WIRED TRANSMITTERS. The main area displays the configuration for a device named 'WRP001'. The 'Port COM' dropdown menu is open, and 'COM13' is selected and highlighted with a red box. Below this, there are fields for 'Wireless Network ID' and 'Wireless Channel'. A 'WRITE DEVICE' button is visible at the bottom right.

06 Click on *Configuration Mode* (⏻) button.

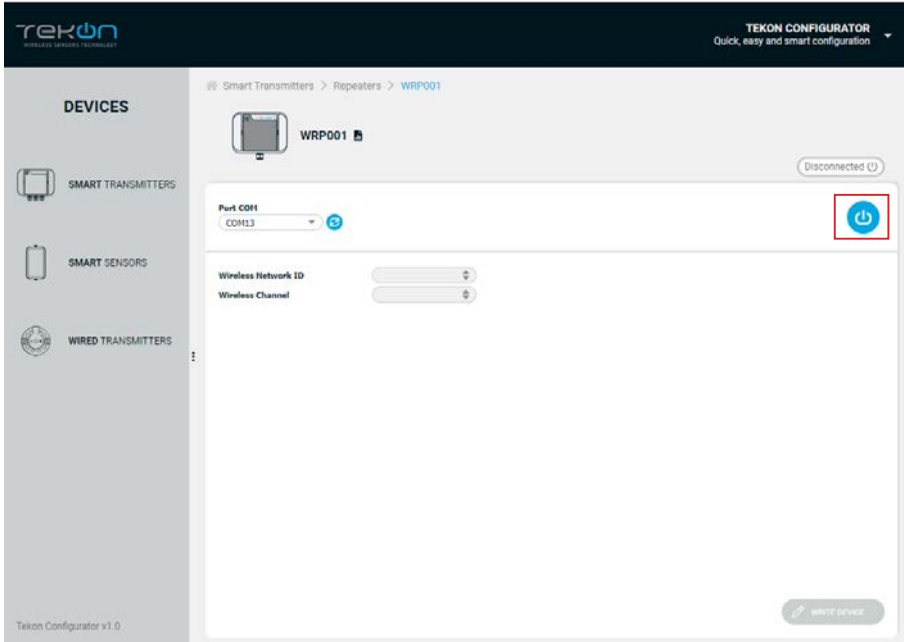


The screenshot shows the same Tekon Configurator v1.0 interface as in step 05. The 'Port COM' dropdown menu is now closed, and 'COM13' is displayed. The 'Configuration Mode' button, which is a power icon, is highlighted with a red box. The 'WRITE DEVICE' button remains at the bottom right.

¹ You can check device's serial port name in "Device Manager" on Microsoft® Windows® operating system.


step
08

CONNECT AND CONFIGURE THE PLUS WIRELESS REPEATER

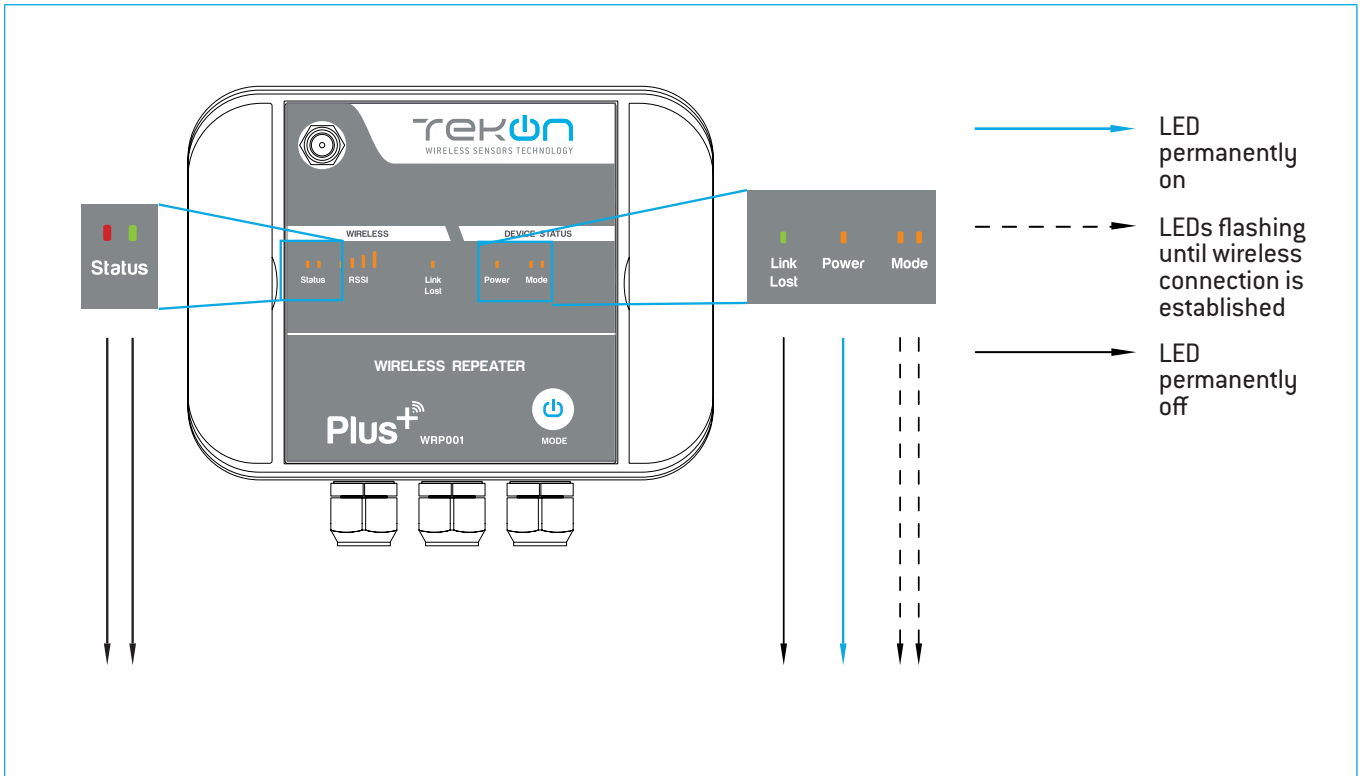


07

The software will connect to the device.

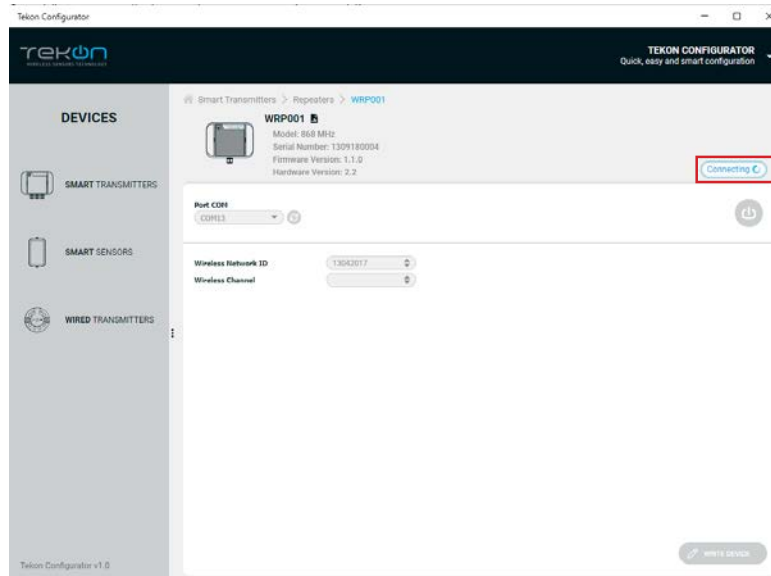

NOTE:


If the software is unable to connect to the device, the connected, go back to the previous steps and check the port COM.



status is displayed. If it hasn't


CONNECT AND CONFIGURE THE PLUS WIRELESS REPEATER

08 When the software connects to the device, the *“Connected”* message will be displayed.

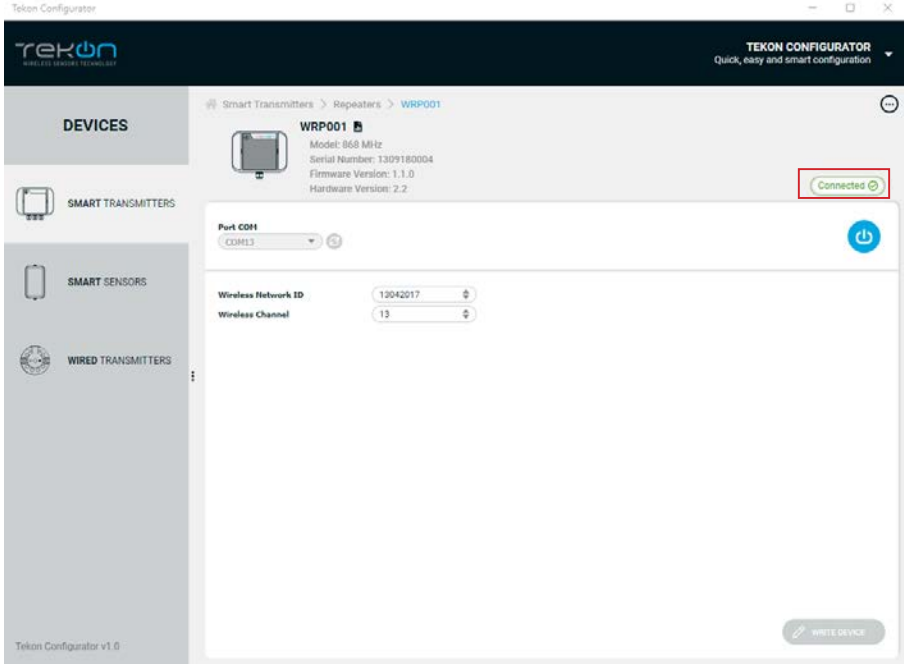

The screenshot shows the Tekon Configurator interface. On the left, there is a sidebar with 'DEVICES' and categories: SMART TRANSMITTERS, SMART SENSORS, and WIRED TRANSMITTERS. The main area displays the configuration for device 'WRP001'. The status is 'Connected', indicated by a green circle with a checkmark. Below the status, there are fields for 'Port COM1' (set to COM13), 'Wireless Network ID' (set to 13042017), and 'Wireless Channel' (set to 13). A 'WRITE DEVICE' button is visible at the bottom right.

09 Configure the *“Wireless Network ID”* and *“Wireless Channel”* previously obtained from the Gateway. Click on the *“WRITE DEVICE”* button to update the transmitter settings.

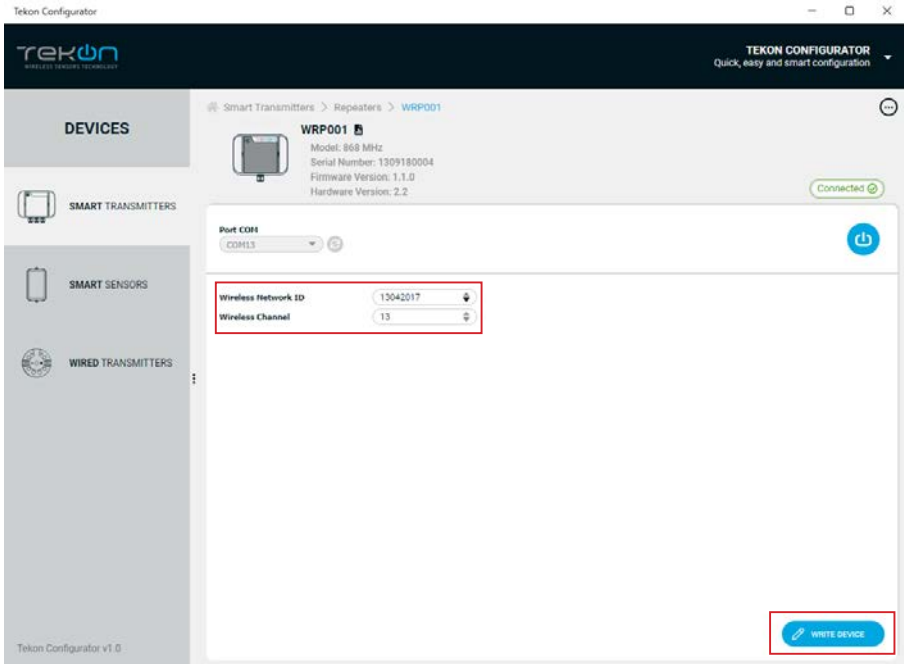




This screenshot is similar to the previous one, but with a red box highlighting the 'Wireless Network ID' and 'Wireless Channel' dropdown menus, and another red box highlighting the 'WRITE DEVICE' button at the bottom right. The 'Connected' status remains visible.


step
08

CONNECT AND CONFIGURE THE PLUS WIRELESS REPEATER


10


Wait for the software to write the new setting to the device. Wait for the status  to change to .

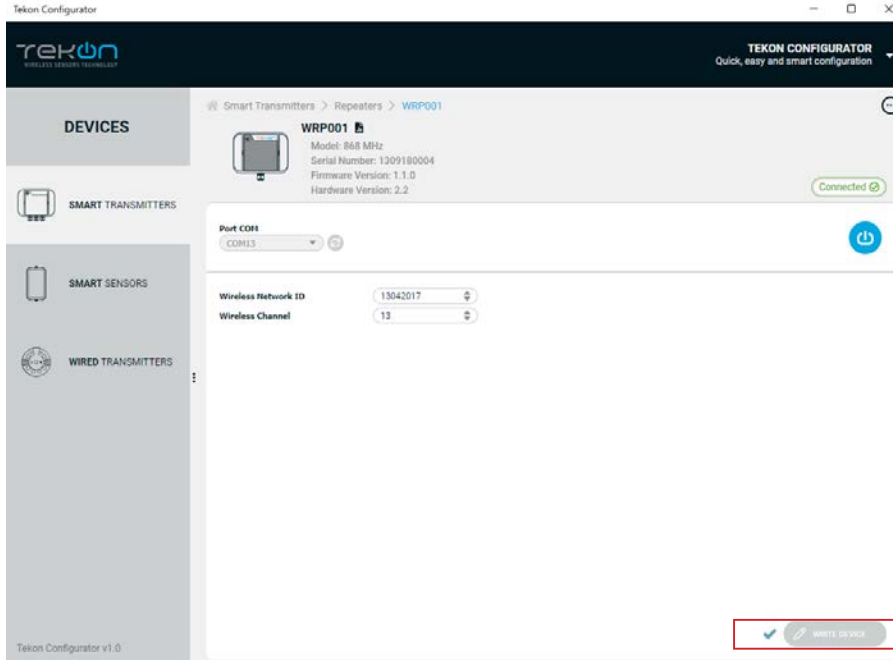


If the writing of the device is not completed, you will see . Make sure that all the steps have been carried out correctly.

11

Click  to exit the configuration and return to normal operating mode.

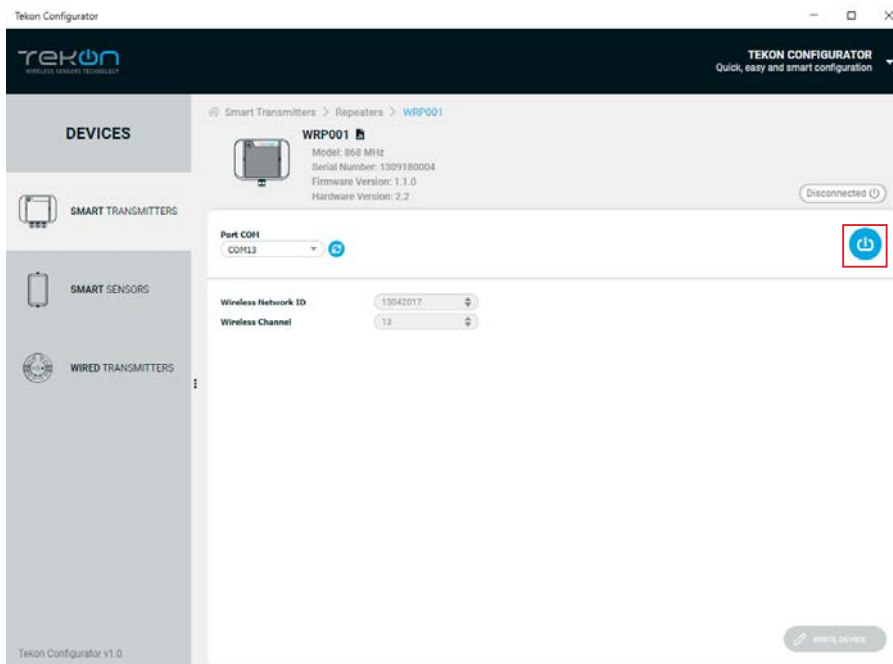

CONNECT AND CONFIGURE THE PLUS WIRELESS REPEATER

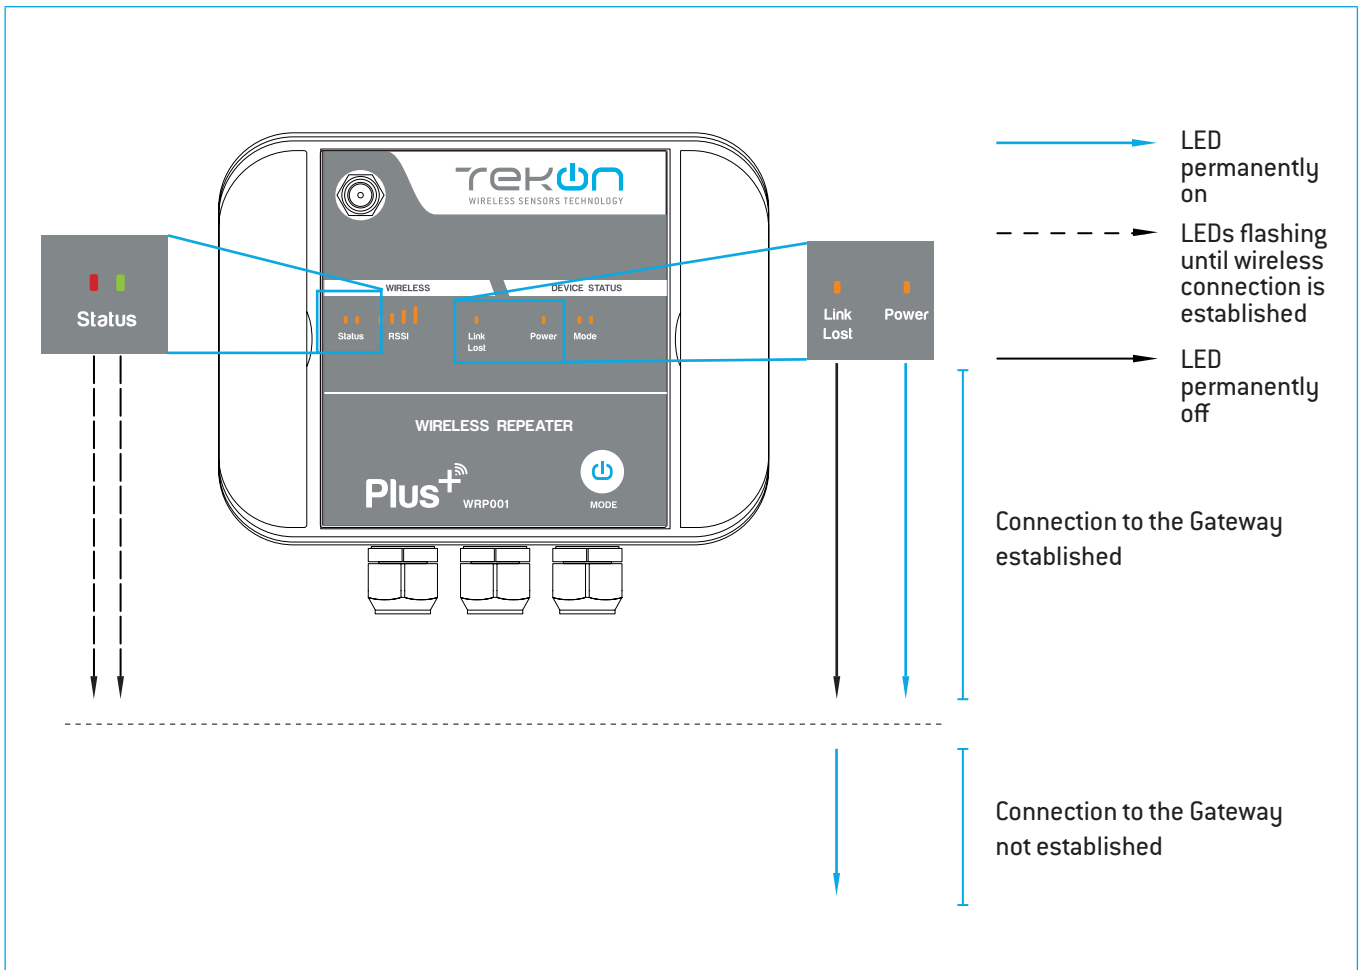

step
09
SITE SURVEY MODE


Refers to following devices: *TWP4AI Transmitter*, *TWP-4AI4DI1UT Transmitter*, *WRP001 Repeater* and *TWPH-1UT Transmitter*.

Site survey mode is a tool that allows a quick wireless signal strength evaluation at the site of installation. It doesn't require additional equipment or software.

01

Press and hold Mode (⏻) button until Status LEDs are permanently on and Mode LEDs flash.

RSSI LEDs indicate the signal strength.

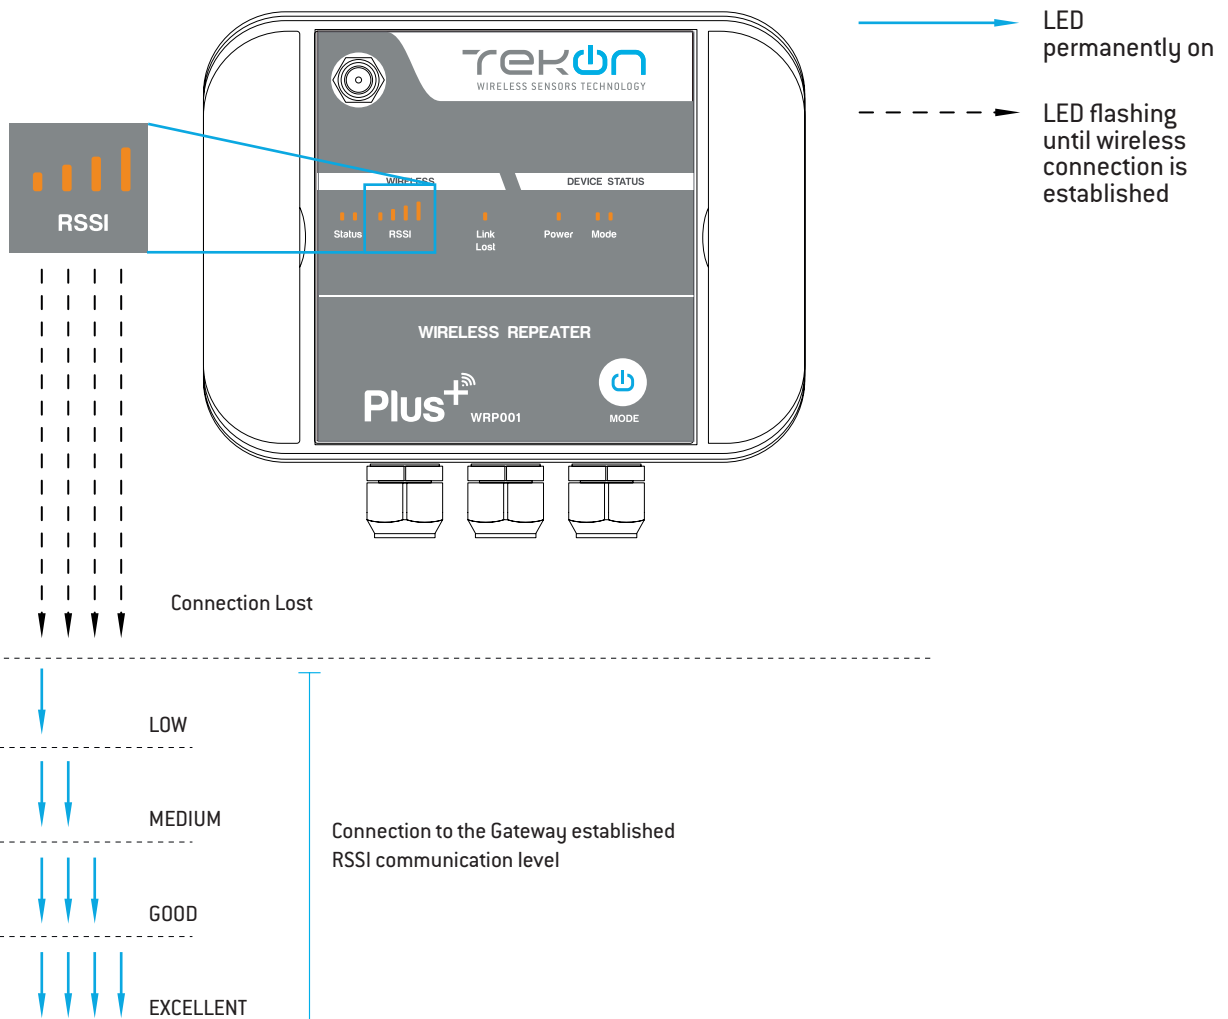

02

Press and hold Mode (⏻) button until RSSI LEDs switch off and device resumes normal operation mode.

TEKON ELECTRONICS

a brand of Bresimar Automação S.A.

Avenida Europa, 460
Quinta do Simão
3800-230 Aveiro
PORTUGAL

Sales

P.: +351 234 303 320
M.: +351 933 033 250
E.: sales@tekonelectronics.com

Technical Support

E.: support@tekonelectronics.com

