



PLUS TWP-4AI4DI1UT INSTALLATION GUIDE

IG_PLUS_TWP-4AI4DI1UT_E01A

PLUS TWP-4AI4DI1UT INSTALLATION GUIDE

Table of contents

step
01 **TWP-4AI4DI1UT PLUS WIRELESS GATEWAY CONFIGURATION**
Pages 4 to 12

step
02 **TWP-4AI4DI1UT PLUS WIRELESS TRANSMITTER CONFIGURATION**
Pages 13 to 19

step
03 **TWP-4AI4DI1UT TRANSMITTER ANALOG INPUTS CONFIGURATION**
Pages 20 to 23

step
04 **TWP-4AI4DI1UT TRANSMITTER DIGITAL INPUTS CONFIGURATION**
Pages 24 to 29

step
05 **TWP-4AI4DI1UT TRANSMITTER UNIV. TEMPERATURE INPUT CONFIGURATION**
Pages 30 to 32

PLUS TWP-4AI4DI1UT INSTALLATION GUIDE

Table of contents

step **06**

TWP-4AI4DI1UT TRANSMITTER DIGITAL OUTPUTS CONFIGURATION

Pages 33 to 38

5.1 LINK LOST OUTPUT

Page 34

5.2 REMOTE CONTROL OUTPUT

Page 36

5.3 EXTERNAL POWER CONTROL OUTPUT

Page 37

step **07**

WG420 GATEWAY ANALOG OUTPUTS CONFIGURATION

Pages 39 to 41

step **08**

WRP001 PLUS WIRELESS REPEATER CONFIGURATION

Pages 42 to 47

step **09**

SITE SURVEY

Pages 48 and 50

step
01

WGW420 PLUS WIRELESS GATEWAY CONFIGURATION

WG420 PLUS WIRELESS GATEWAY CONFIGURATION | step **01**

TEKON CONFIGURATOR SOFTWARE is only compatible with the Microsoft® Windows® Operating System.

01 Connect the antenna to the Gateway.



02 **Wiring**
Connect the power supply and then the RS485-USB cable to the Gateway.



Wire Indication:
Blue - GND; Brown - +24 VDC; Orange - Data+ (A); Black - GND; Yellow - Data - (B)

03 Power ON the device.




step

01

WG420 PLUS WIRELESS GATEWAY CONFIGURATION


04

Check device connection state by LED indication.

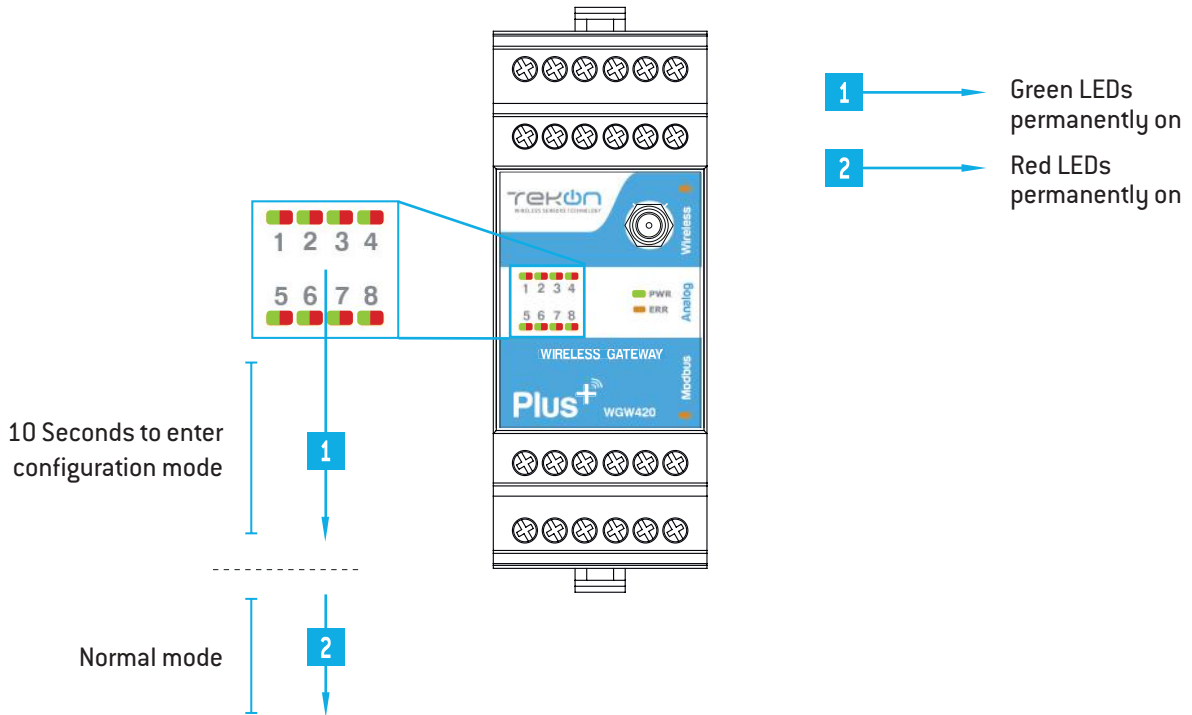

05


Open *Tekon Configurator Software*¹ and select *PLUS* >> *Gateway* >> *Configuration*

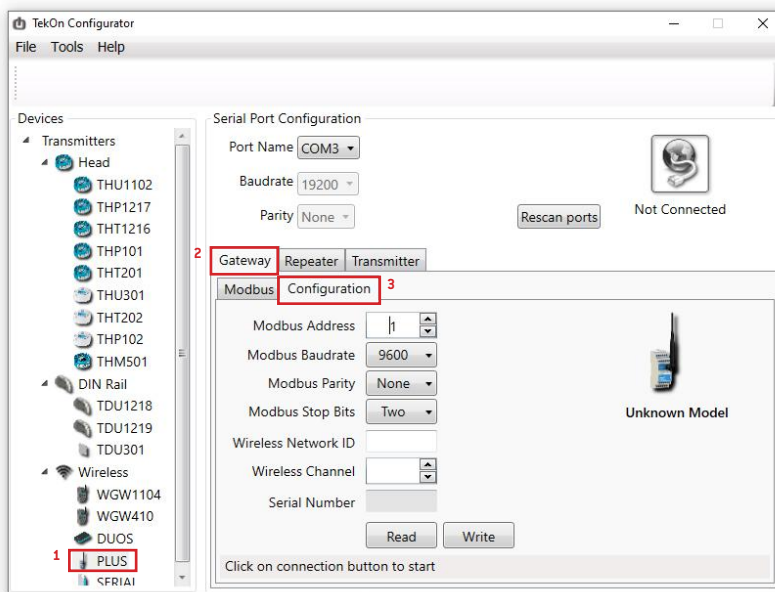

¹ Tekon Configurator software is free of charge and available at www.tekonelectronics.com


06

Select serial port corresponding to WG420 PLUS Wireless Gateway
Click on the *Rescan Ports* button.

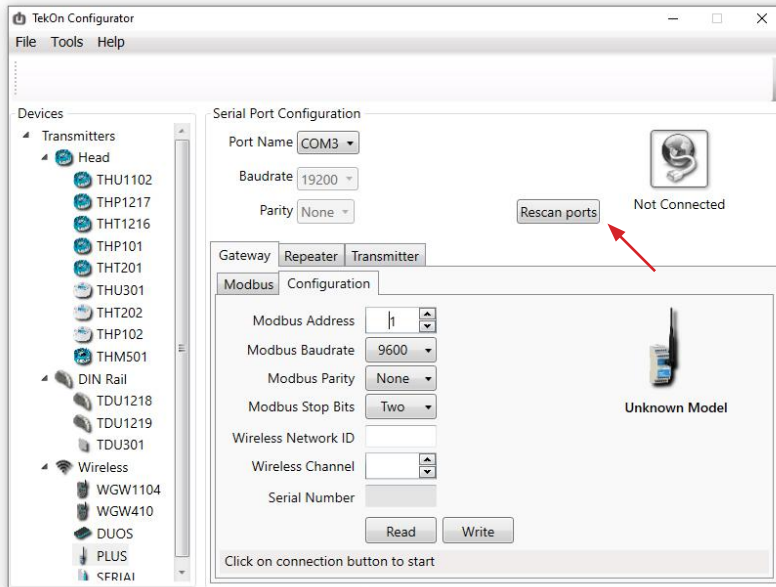

07

Select corresponding *Port name*².

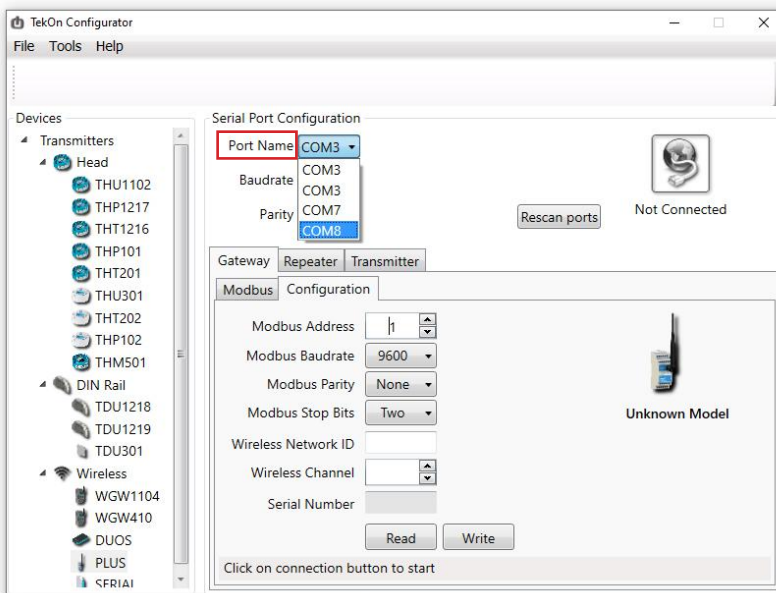

² You can check device's serial port name in "Device Manager" on Microsoft® Windows® operating system.

step

01

WGW420 PLUS WIRELESS GATEWAY CONFIGURATION

08

Perform a power cycle on the *Gateway*.




NOTE:




After power up, you have 10 seconds to enter configuration mode by clicking on Connect button () (while green LEDs are permanently on).

In this mode, you can manage device parameters: *Modbus Address*, *Modbus Baudrate*, *Modbus Parity*, *Wireless Network ID* and *Wireless Channel*.

09


Click on *Connect* () button to enter configuration mode.

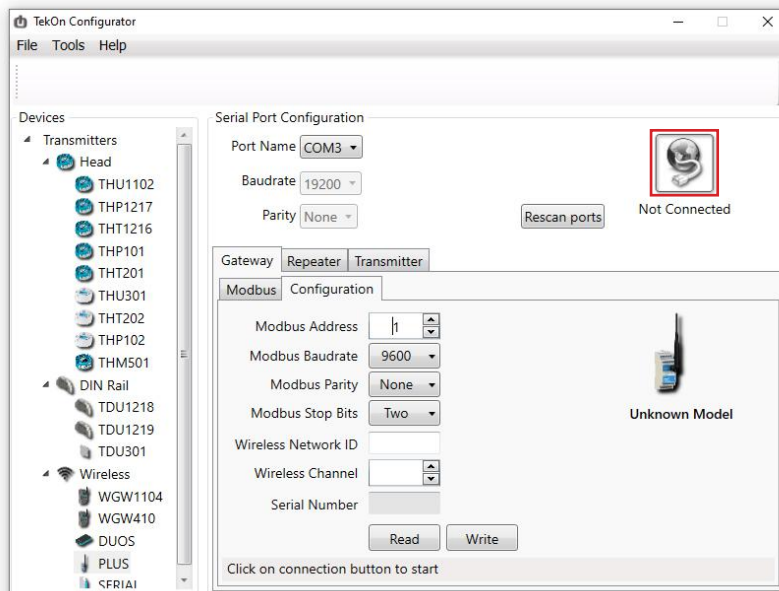


WG420 PLUS WIRELESS GATEWAY CONFIGURATION

10

The status string at the bottom of the software window provides feedback on ongoing operations.

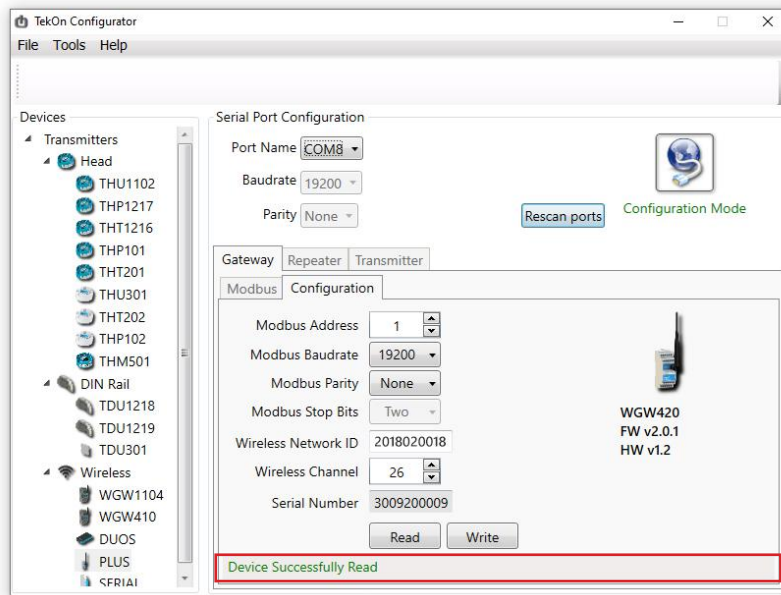

You can also verify configuration mode activation by checking LEDs on the gateway.

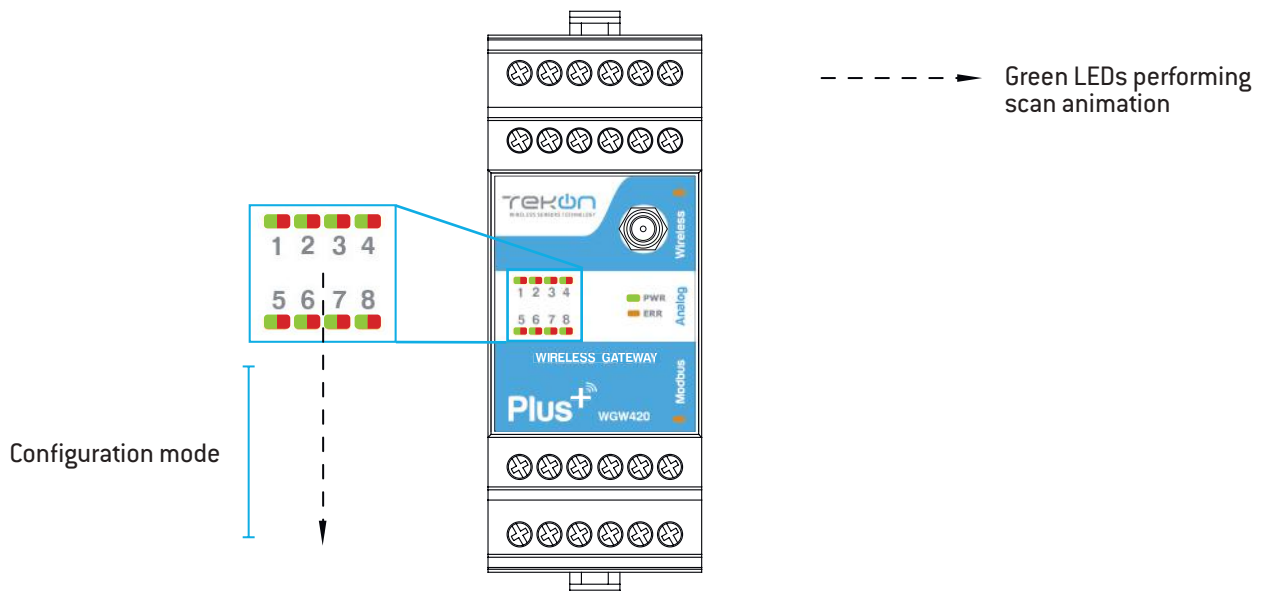

NOTE:

When the 10-second time frame to enter configuration mode is exceeded, the LEDs will turn permanently red and the gateway will enter normal operation mode.


To get back in configuration mode, you need to perform a power cycle - step 8.

step
01

WGW420 PLUS WIRELESS GATEWAY CONFIGURATION

11

Take note of device configuration data available, namely: *Modbus Address*, *Modbus Baudrate*, *Modbus Parity*, *Wireless Network ID* and *Wireless Channel*.

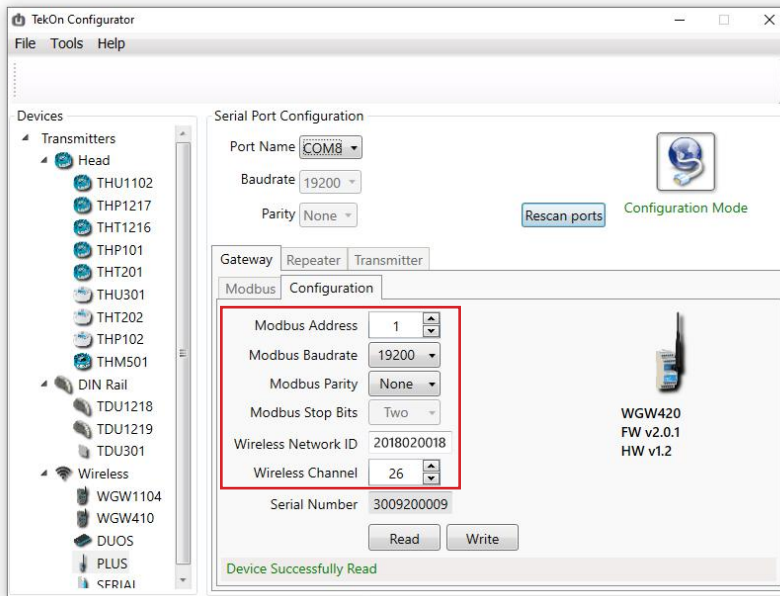


NOTE:

The wireless network connection between devices is ensured by setting the same *Wireless Network ID* and *Wireless Channel* parameters.

12


Click on *Disconnect* (🌐) button.

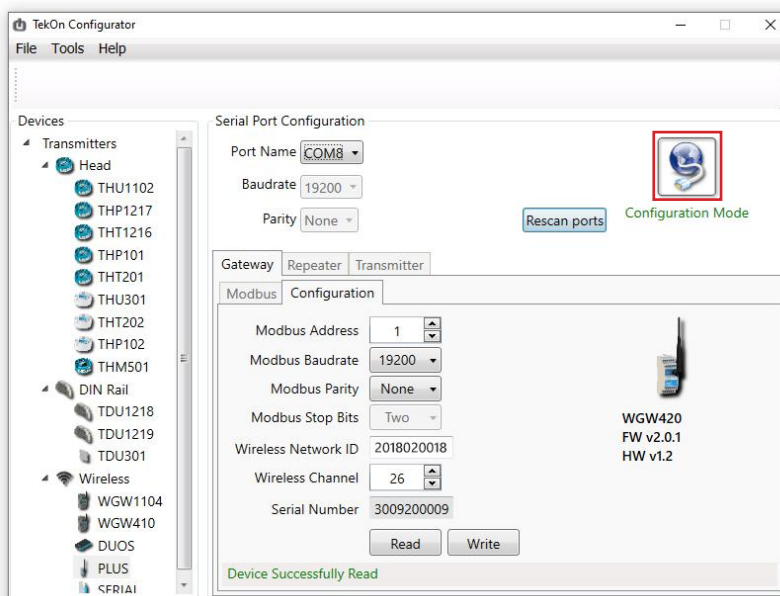

13

Modbus Communication


Select *Modbus* tab of the *Gateway* and set the previously saved configurations.

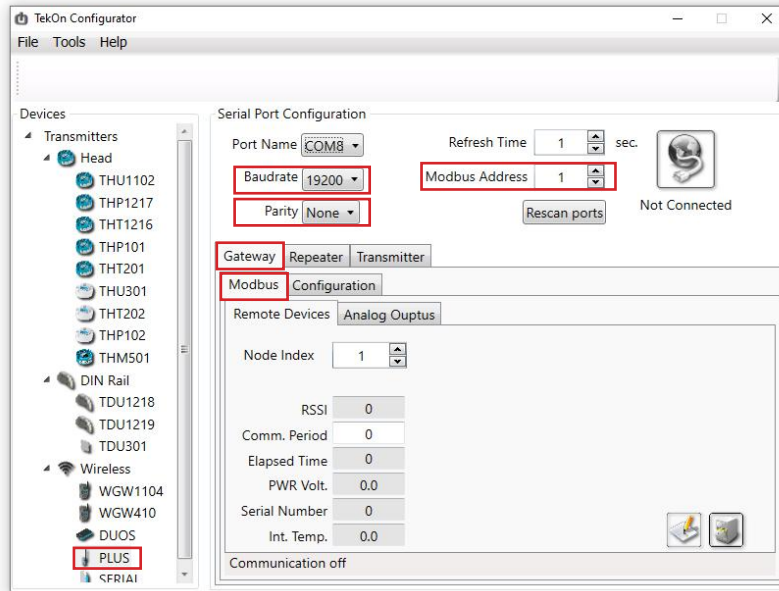

Ensure that *Port name*, *Baudrate*, *Parity* and *Modbus Address* fields are the same as those obtained in configuration mode.

14

Click on *Connect* (🌐) button and check operation status at the bottom of the window.

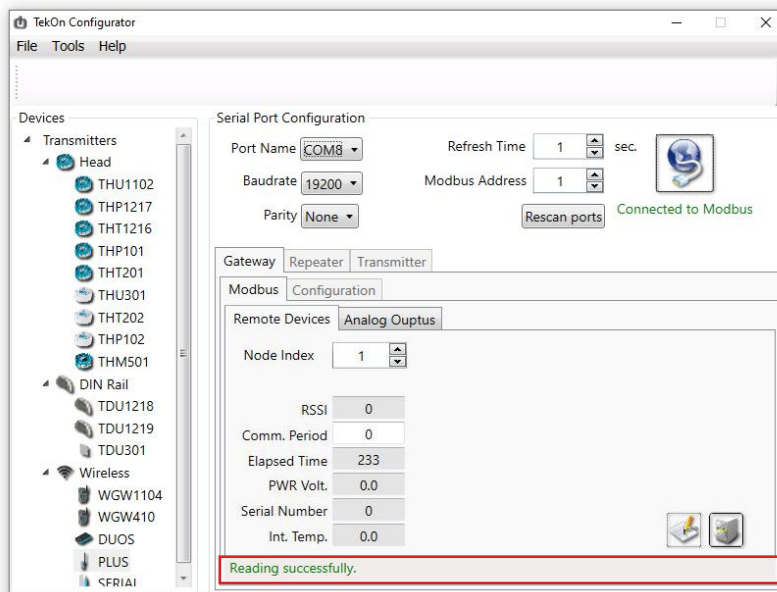

The messages *Connected to Modbus* and *Reading successfully* will appear if *Serial Port* configuration parameters are correct and the Modbus connection is established.

step


01

WGW420 PLUS WIRELESS GATEWAY CONFIGURATION



NOTE:

See WGW420 Datasheet to access LED indication information - page 4.

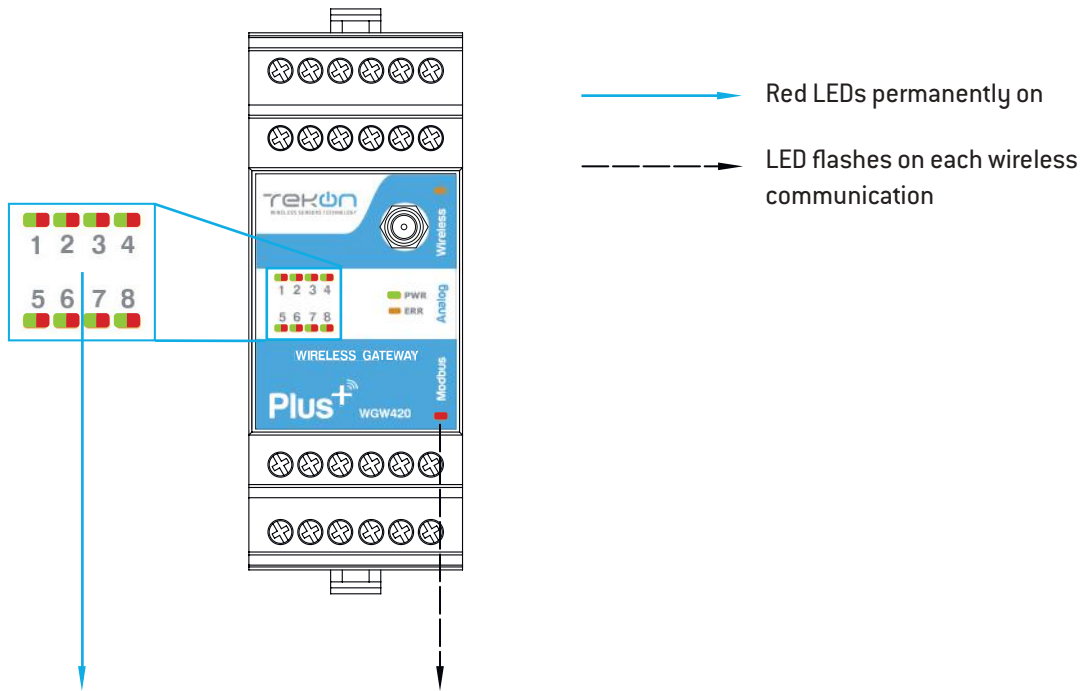

step
02

TWP-4AI4DI1UT PLUS WIRELESS TRANSMITTER CONFIGURATION

step

02

TWP-4AI4DI1UT PLUS WIRELESS TRANSMITTER CONFIGURATION

01

Loosen the 4 screws of the case and open it.


[Example image]



02


Connect a micro USB cable to the computer and then to *TWP-4AI4DI1UT PLUS Wireless Transmitter*.

[Example image]

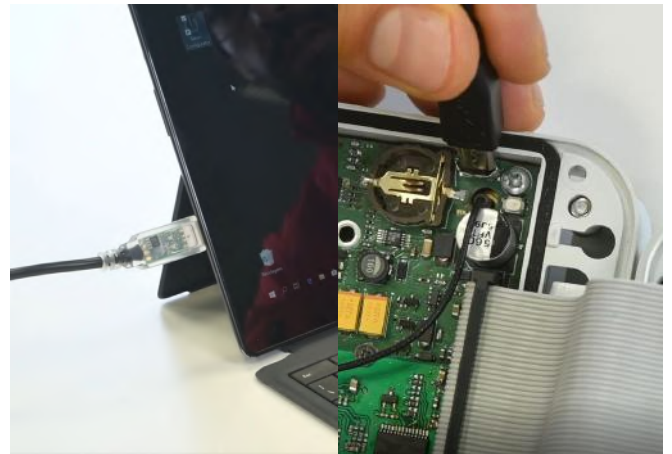

03

Open a new window of *Tekon Configurator Software* and select *PLUS >> Transmitter* menu.

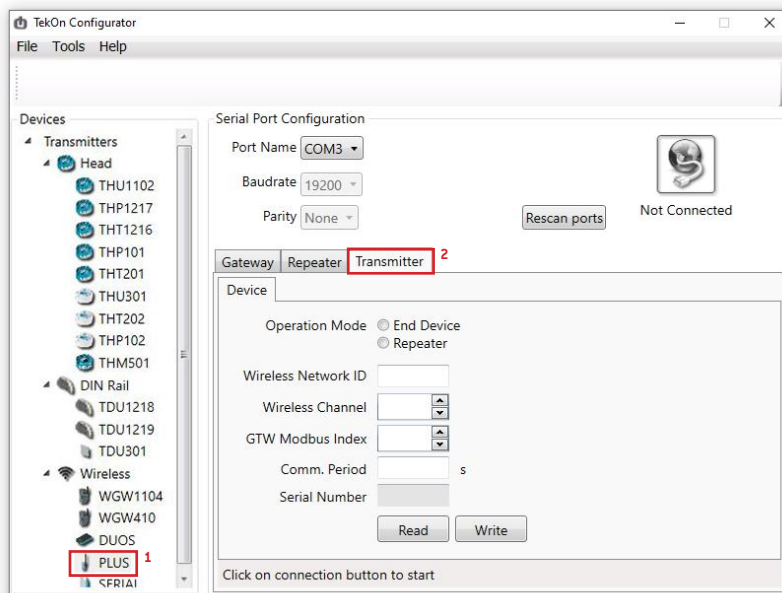

TWP-4AI4DI1UT PLUS WIRELESS TRANSMITTER CONFIGURATION

04 Click on *Rescan Ports* button.

The screenshot shows the TekOn Configurator interface. On the left, a tree view lists various devices under 'Transmitters', 'DIN Rail', and 'Wireless'. The main window is titled 'Serial Port Configuration' and contains several settings: 'Port Name' set to 'COM3', 'Baudrate' set to '19200', and 'Parity' set to 'None'. A 'Rescan ports' button is located to the right of these settings, with a red arrow pointing to it. Below the configuration fields are tabs for 'Gateway', 'Repeater', and 'Transmitter'. The 'Device' section shows 'Operation Mode' with 'End Device' selected, and fields for 'Wireless Network ID', 'Wireless Channel', 'GTW Modbus Index', 'Comm. Period', and 'Serial Number'. 'Read' and 'Write' buttons are at the bottom of this section. A status indicator shows a globe icon and the text 'Not Connected'. At the very bottom, it says 'Click on connection button to start'.

05 Select corresponding *Port name*¹.

This screenshot shows the same TekOn Configurator interface as in step 04. The 'Port Name' dropdown menu is now open, showing a list of available ports: 'COM3', 'COM1', and 'COM4'. The 'COM3' option is highlighted with a blue selection bar. A red box is drawn around the 'Port Name' dropdown label. The 'Rescan ports' button is still visible. The 'Device' configuration section below is now populated with values: 'Wireless Network ID' is '2018020018', 'Wireless Channel' is '26', 'GTW Modbus Index' is '1', 'Comm. Period' is '10 s', and 'Serial Number' is '204200001'. The 'Read' and 'Write' buttons are still present. The status indicator remains 'Not Connected'.

¹ You can check device's serial port name in "Device Manager" on Microsoft® Windows® operating system.



step

02

TWP-4AI4DI1UT PLUS WIRELESS TRANSMITTER CONFIGURATION

06

Click on *Configuration Mode* () button.

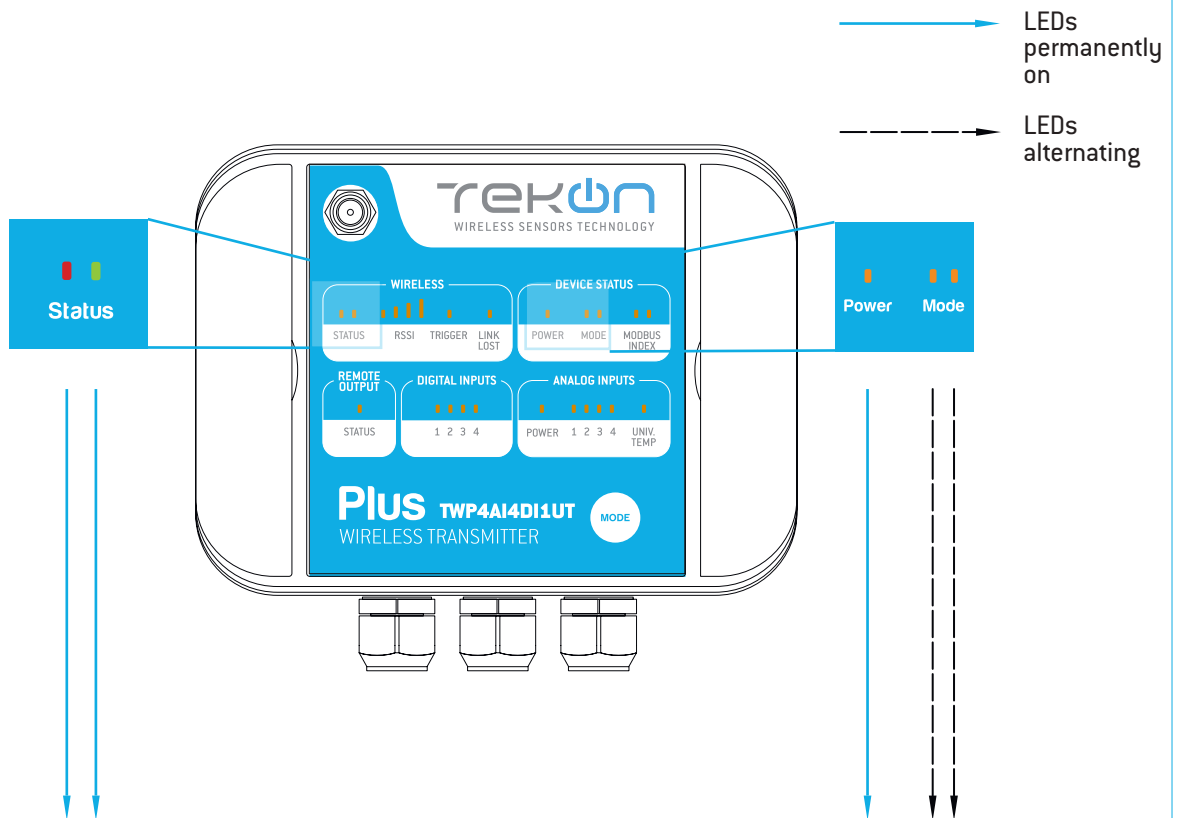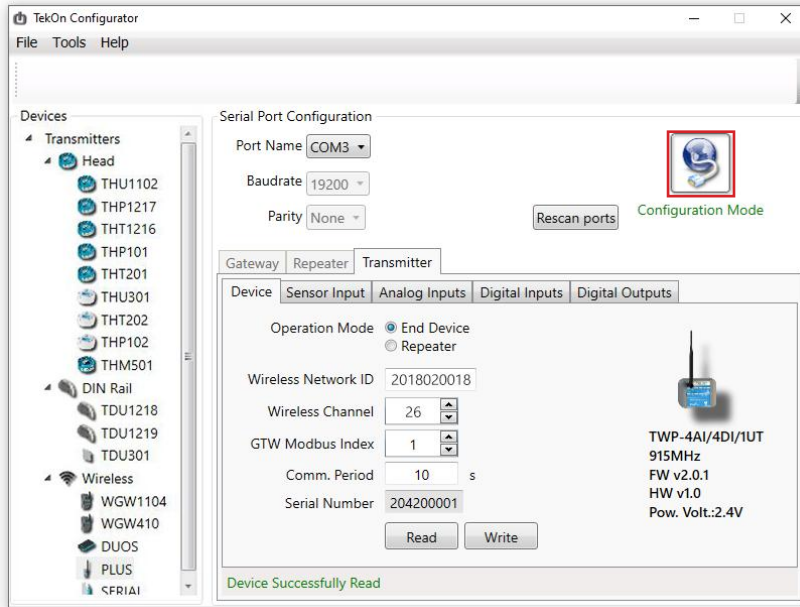

TWP-4AI4DI1UT PLUS WIRELESS TRANSMITTER CONFIGURATION

07


Configure *Wireless Network ID* and *Wireless Channel* previously obtained from *Gateway*.

The wireless connection between both devices is ensured by setting the same *Wireless Network ID* and *Wireless Channel* parameters.

Gateway Modbus Index will define the modbus registers window used to store information sent by the transmitter.

Each transmitter should have a different *Gateway Modbus Index* in order to avoid information override.

Click on *Write* button to update *Transmitter* settings.

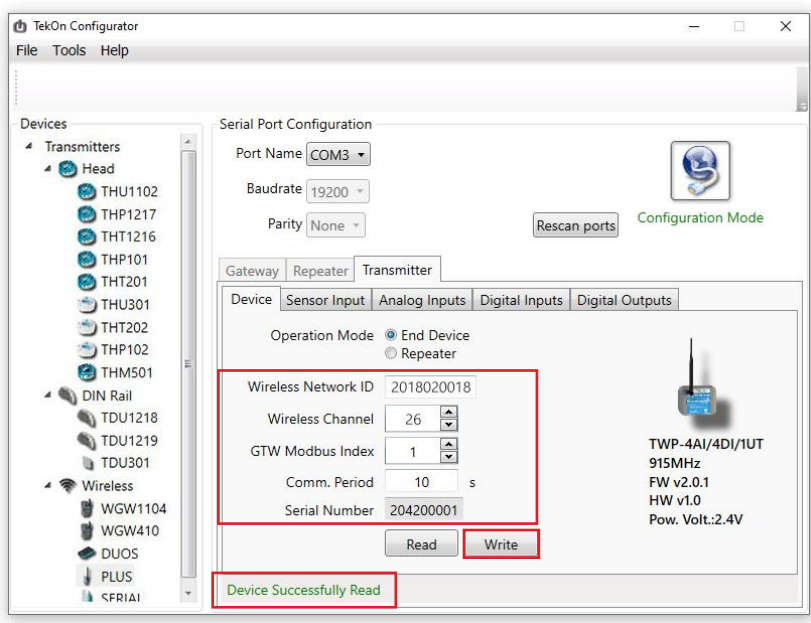



step

02

TWP-4AI4DI1UT PLUS WIRELESS TRANSMITTER CONFIGURATION

08

Click on *Configuration Mode* (🔗) button to exit setup and resume normal operating mode.

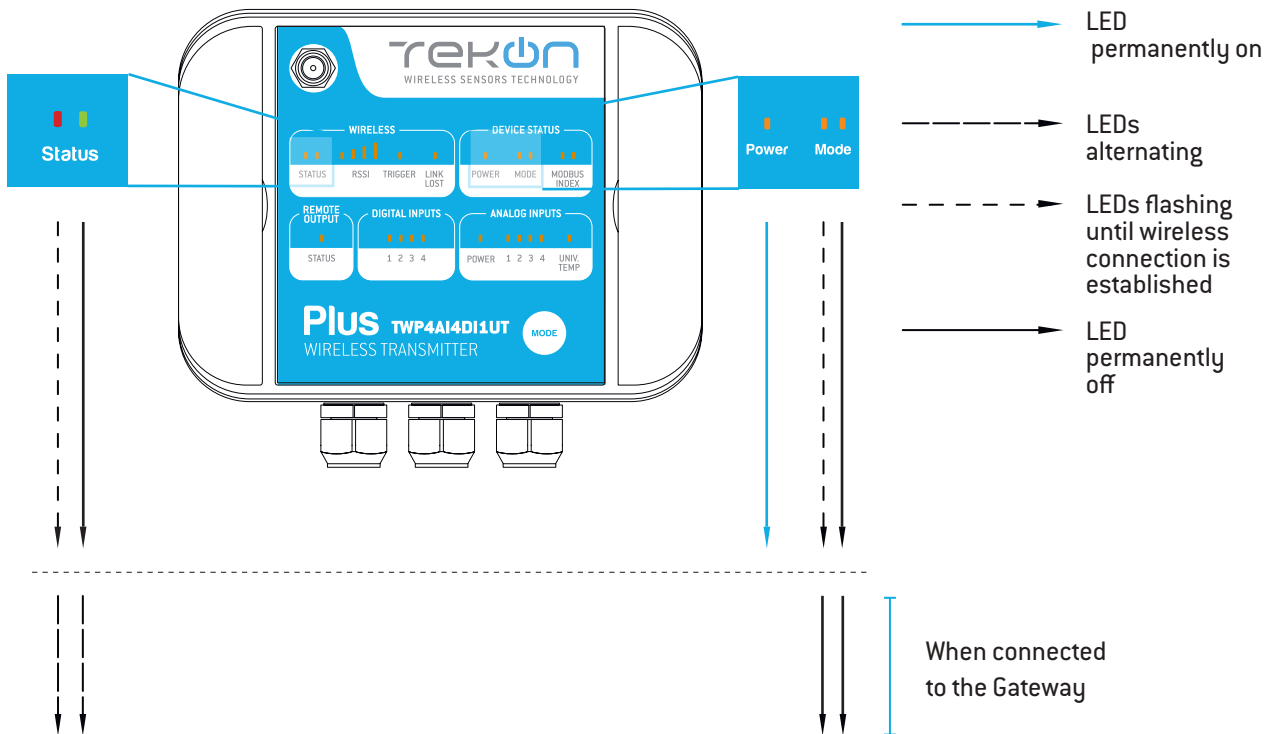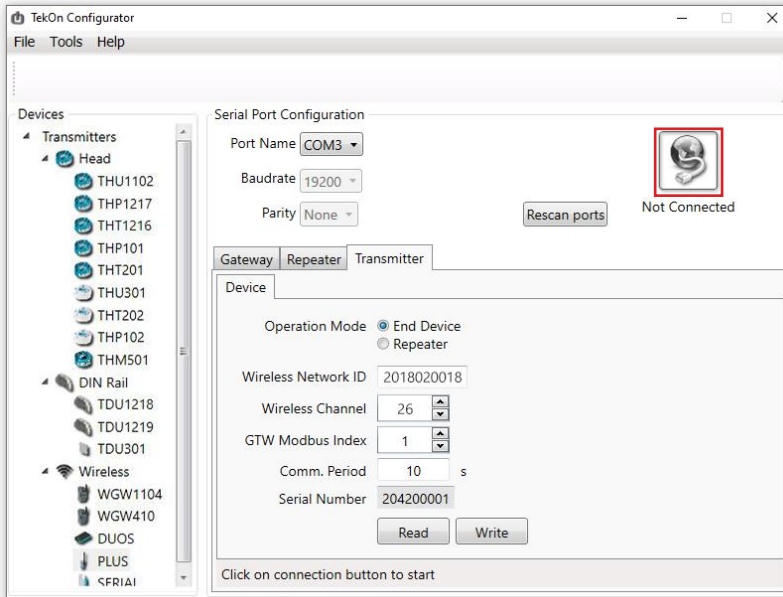

TWP-4AI4DI1UT PLUS WIRELESS TRANSMITTER CONFIGURATION

step
02

After clicking on *Disconnect* button, the device will permanently attempt to connect to a wireless network. If there is no communication, the Status LED flashes slowly and the Mode LED flashes quickly. When there's a successful connection directly to a wireless network, both status LEDs alternate quickly - during 1 minute if the transmitter is operating as end device or permanently if operating as repeater.

**NOTE:**

Make sure that the devices are at a distance of at least 3 meters or remove the antenna from the gateway (in case both devices are near each other).

step
03

TWP-4AI4DI1UT TRANSMITTER ANALOG INPUT CONFIGURATION

TWP-4AI4DI1UT TRANSMITTER ANALOG INPUTS CONFIGURATION



NOTE:


By default, analog inputs are switched OFF for power optimization. Each analog input can be configured independently, as current input [0..20mA] or voltage input [0..10V]

01

To enter in *Configuration Mode* follow steps 01 to 06 of TWP-4AI4DI1UT PLUS Wireless *Transmitter* Configuration.


02

In *TekOn Configurator Software* select *PLUS* >> *Transmitter* >> *Analog Inputs* menu

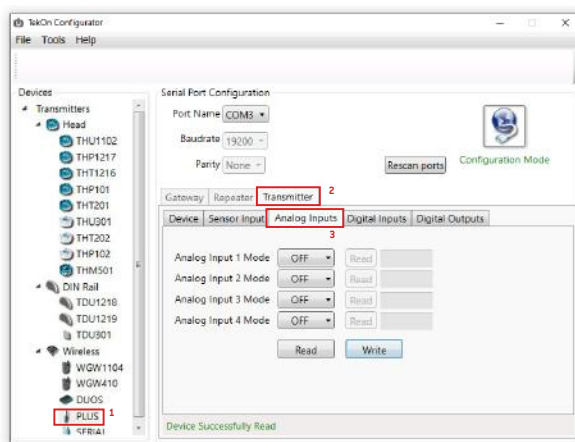

03

Select *Current* option on Analog Input 1 and *Voltage* option on Analog Input 3 operation mode and click *Write*.

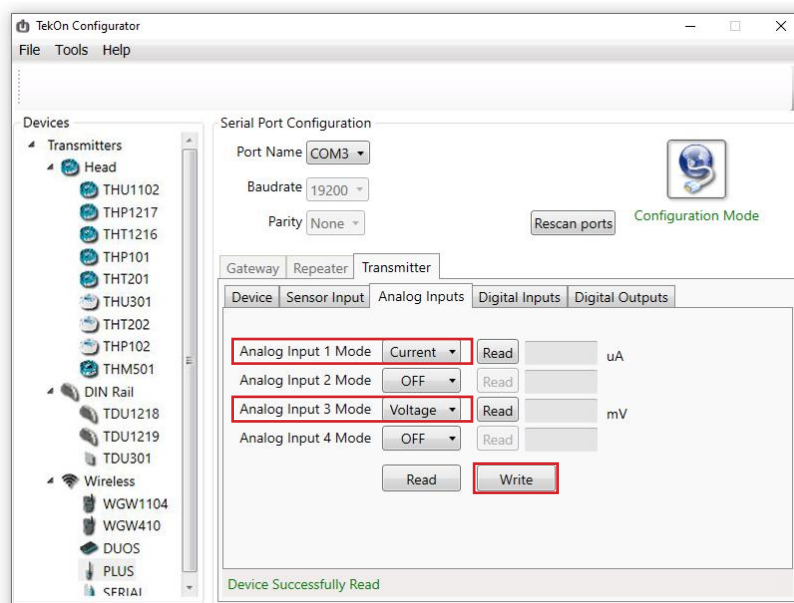


step

03

TWP-4AI4DI1UT TRANSMITTER ANALOG INPUTS CONFIGURATION

04


The status string at the bottom of the software window provides feedback on ongoing operations.

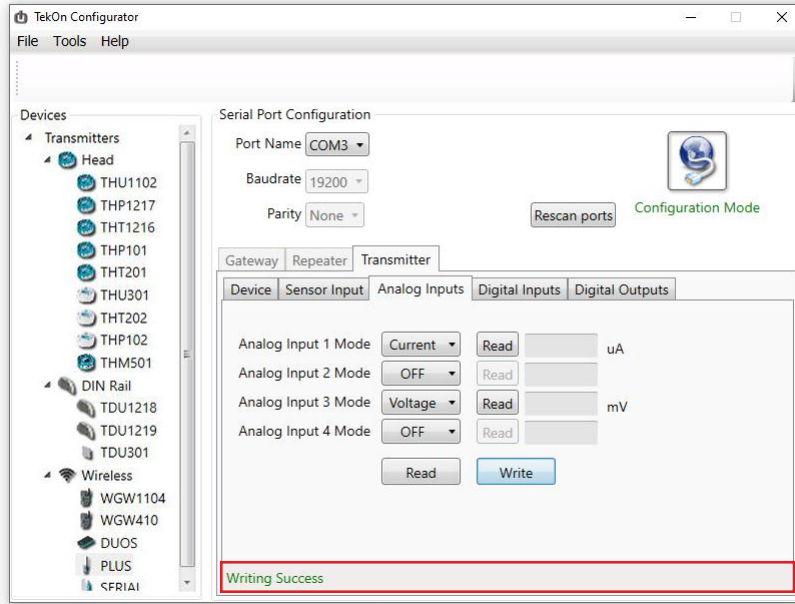

05

Wiring


Wire the device according to the diagram below.

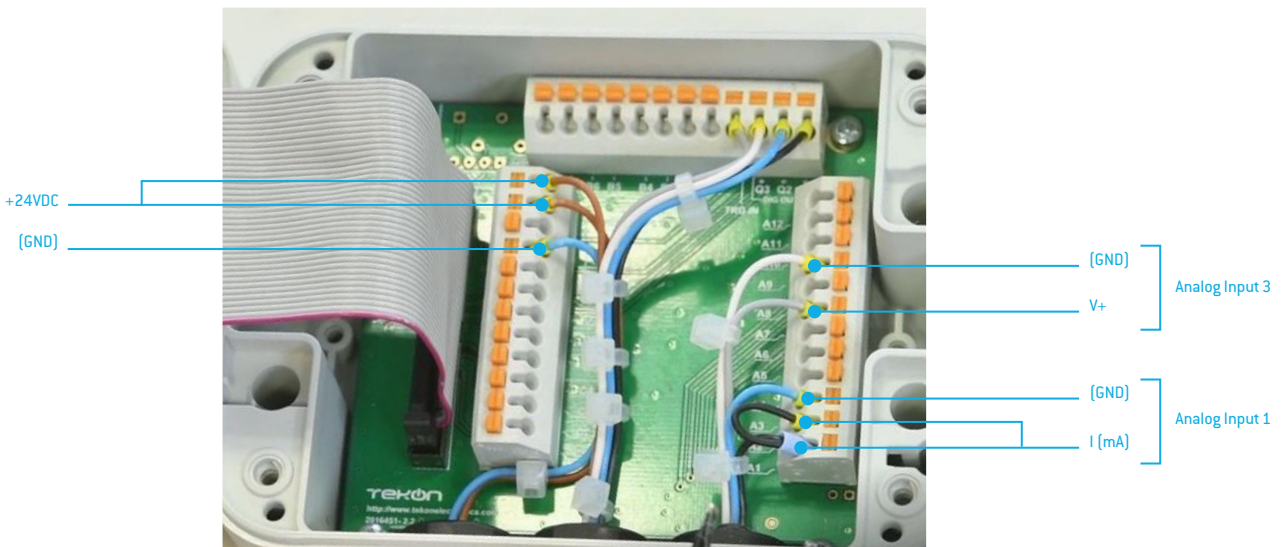

TWP-4AI4DI1UT TRANSMITTER ANALOG INPUTS CONFIGURATION **step 03**

06


Validate configuration by clicking on *Read* button.

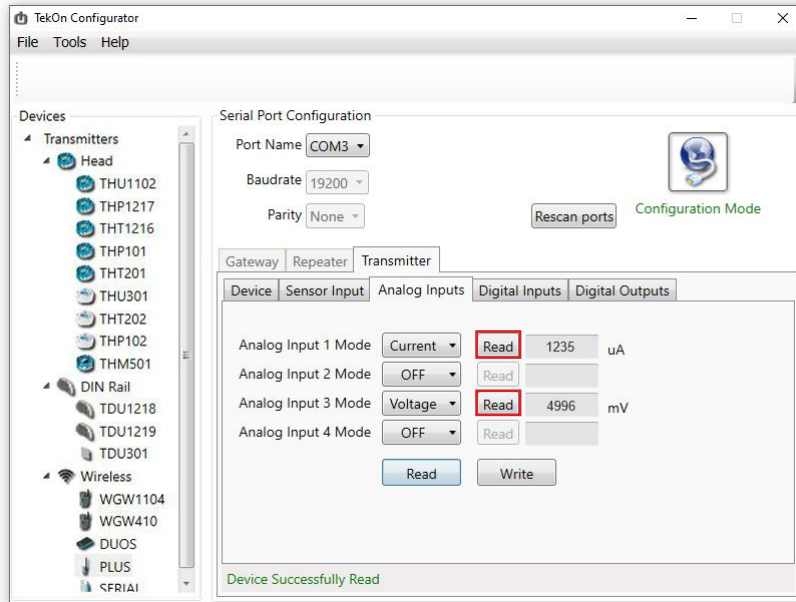

NOTE: Configuration and Operation validated. Measured value of current and voltage depend on the setup. In this example 12mA (12000uA) and 5V (5000 mV) are being injected.

07

Exit configuration mode and compare data sent by wireless communication.

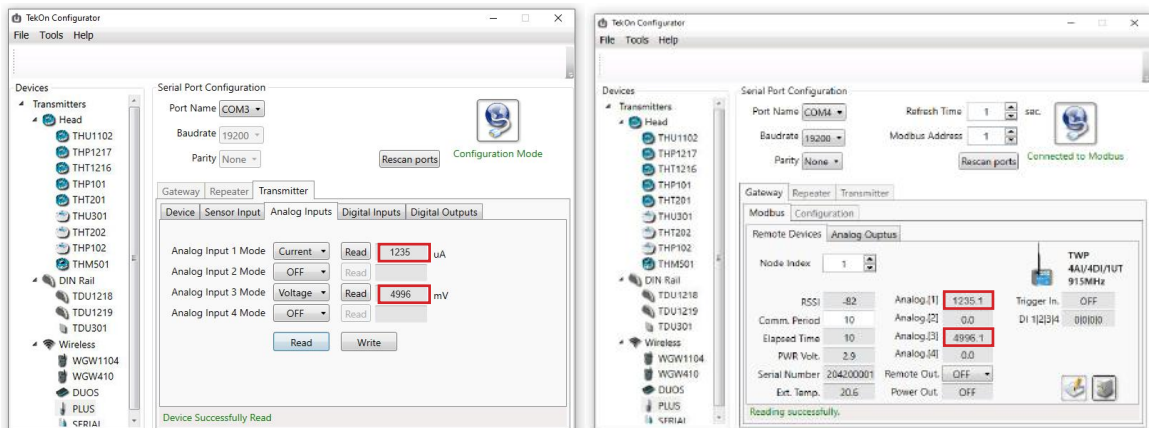

step
04

TWP-4AI4DI1UT TRANSMITTER DIGITAL INPUTS CONFIGURATION

TWP-4AI4DI1UT TRANSMITTER DIGITAL INPUTS CONFIGURATION **step 04**



NOTE:


Sink type Digital Input.
Configuration of Digital Input Trigger.

01

To enter in *Configuration Mode* follow steps 01 to 06 of TWP-4AI4DI1UT PLUS Wireless *Transmitter* Configuration

02

In *Tekon Configurator Software* select *PLUS* >> *Transmitter* >> *Digital Inputs* menu.

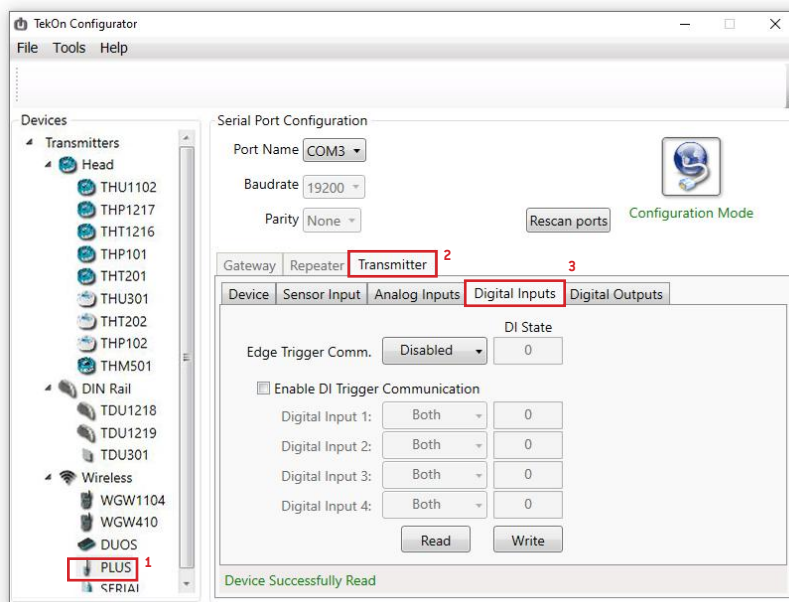


step

04

TWP-4AI4DI1UT TRANSMITTER DIGITAL INPUTS CONFIGURATION

03


Select Operation Mode *Raising Edge* and click on *Write* button.

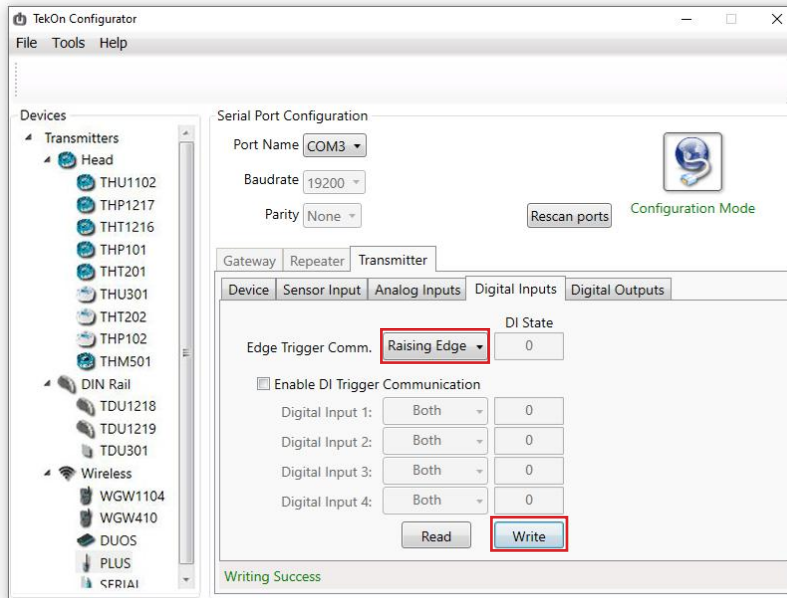

04

Validate functionality and click on *Disconnect* button.

Wait for the device to connect to the Gateway and observe data in Tekon Configurator window.

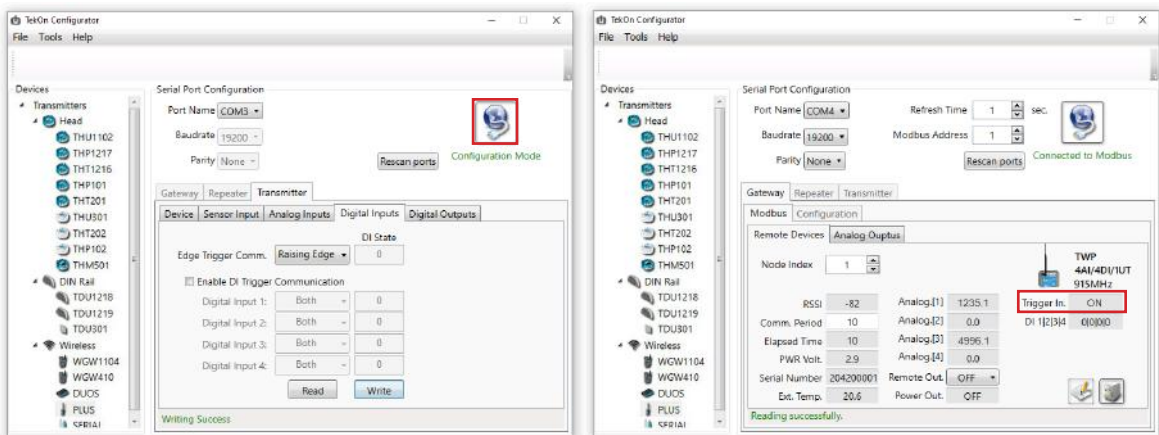




NOTE:
Digital Inputs configuration


05

In *TekOn Configurator Software* select *PLUS >> Transmitter >> Digital Inputs* menu.

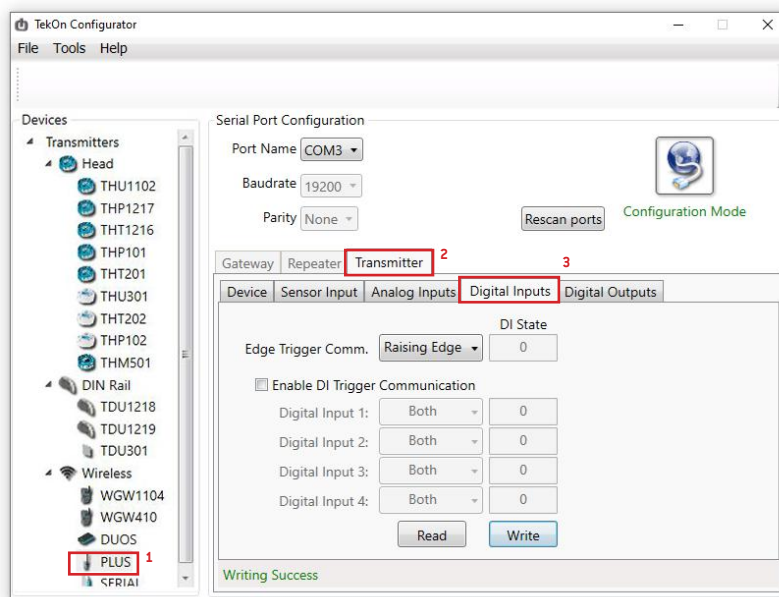

06

Click on the checkbox *Enable DI Trigger Communication* to enable the digital inputs configuration.

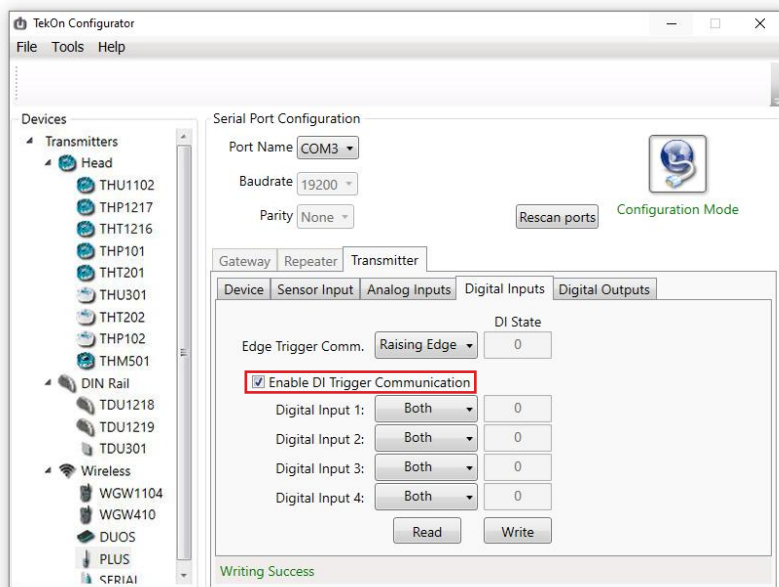


step

04

TWP-4AI4DI1UT TRANSMITTER DIGITAL INPUTS CONFIGURATION


07

Select the *Event Trigger* for each connected digital input and click on *Write* button

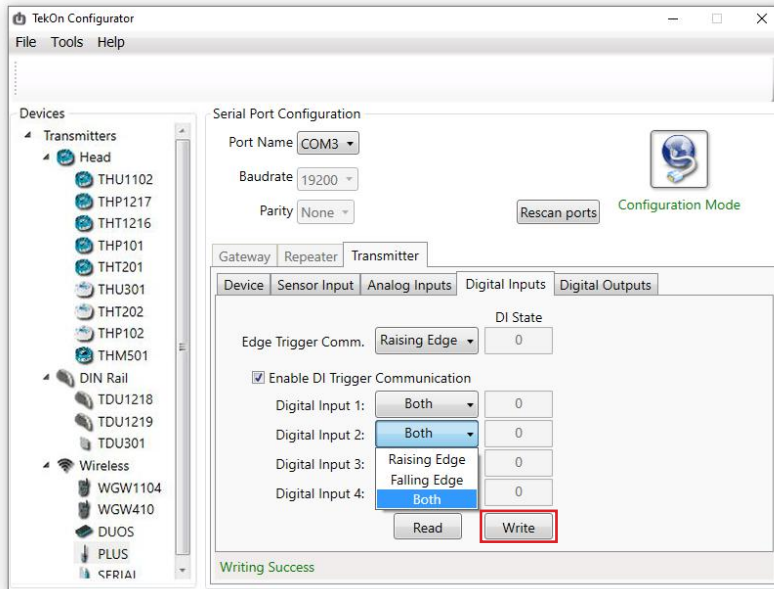

08


Change the digital input state and click on *Read* to check the state of the digital inputs.

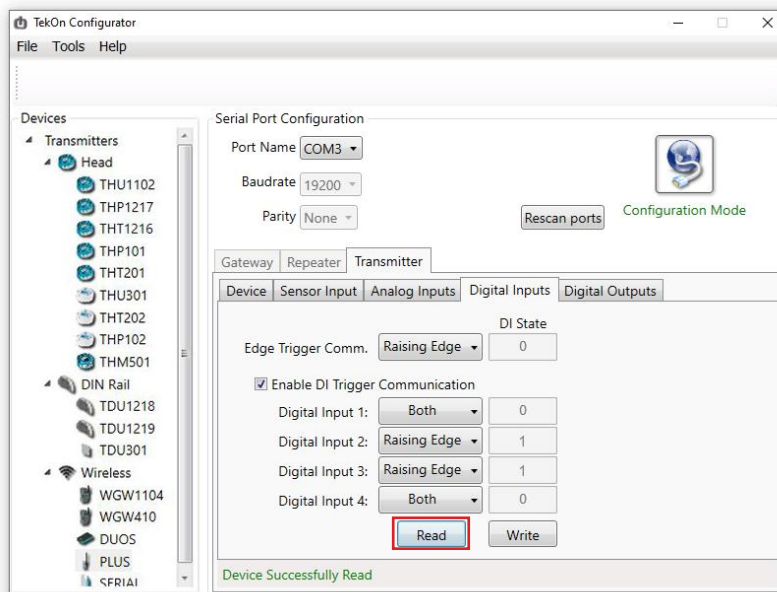

TWP-4A14DI1UT TRANSMITTER DIGITAL INPUTS CONFIGURATION **step 04**

09

Validate functionality and click on *Disconnect* button.
 Wait for the device to connect to the Gateway and observe data in Tekon Configurator window.
 Trigger an event on your digital inputs and observe an earlier communication and the state of each Digital Input.

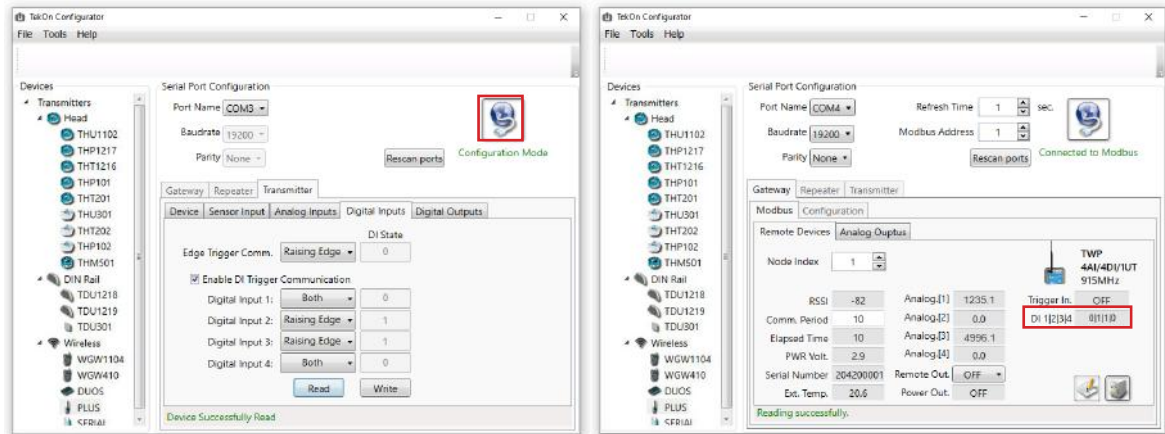


step
05

TWP-4AI4DI1UT TRANSM. UNIV. TEMPERATURE INPUT CONFIGURATION


TWP-4AI4DI1UT TRANSMITTER UNIVERSAL TEMPERATURE INPUT CONFIGURATION

01 To enter in *Configuration Mode* follow steps 01 to 06 of TWP-4AI4DI1UT PLUS Wireless *Transmitter* Configuration

02 In *TekOn Configurator Software* select *PLUS >> Transmitter >> Sensor Input* menu.

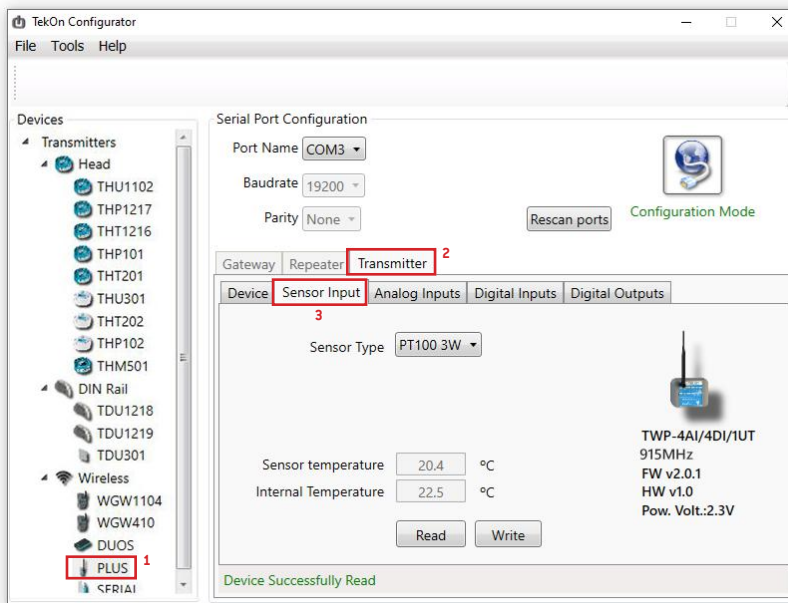

03 Select the *Sensor Type* connected to the transmitter universal temperature input and click on *Write* button.

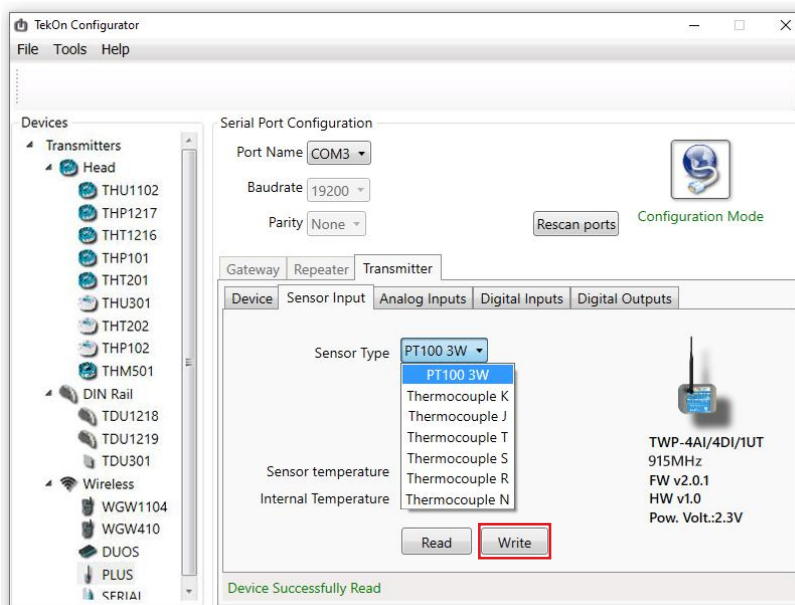


step

05

TWP-4AI4DI1UT TRANSMITTER UNIVERSAL TEMPERATURE INPUT CONFIGURATION


04

You can check the *Sensor Temperature* and *Internal Temperature* from the transmitter.

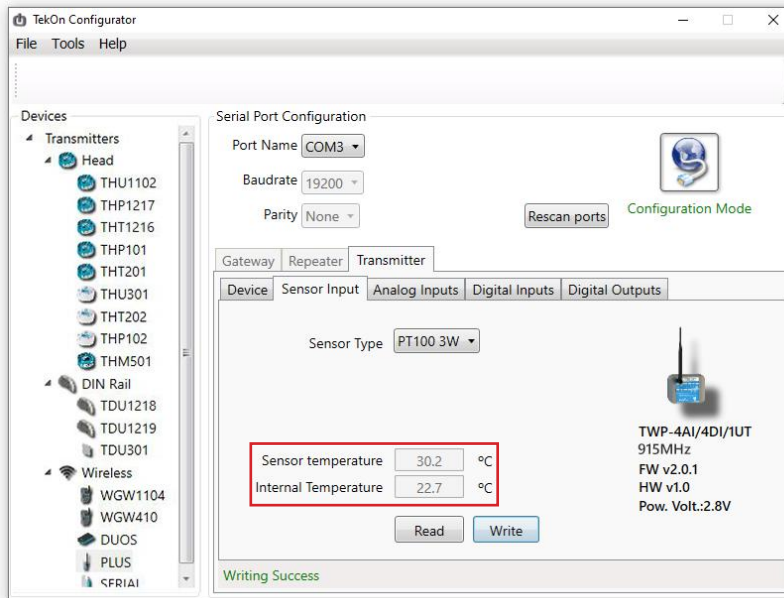

05

Click on *Read* button to update the temperature readings and wait for the read success message.

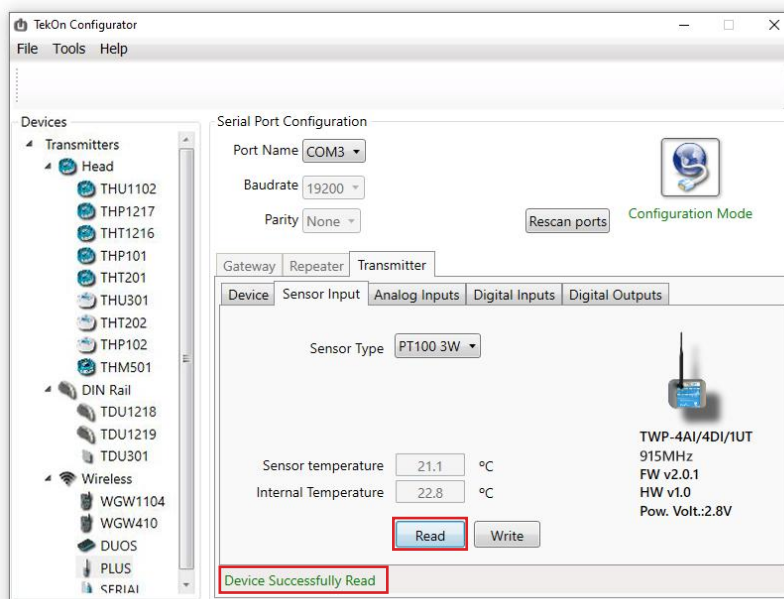

NOTE:

If the readed value is "65535", please check the presence of temperature probe and its connection.

step
06

TWP-4AI4DI1UT TRANSMITTER DIGITAL OUTPUTS CONFIGURATION

step
06


TWP-4AI4DI1UT TRANSMITTER DIGITAL OUTPUTS CONFIGURATION

01

To enter in *Configuration Mode* follow steps 01 to 06 of TWP-4AI4DI1UT PLUS Wireless *Transmitter* Configuration

02


In *TekOn Configurator Software* select *PLUS >> Transmitter >> Digital Outputs* menu

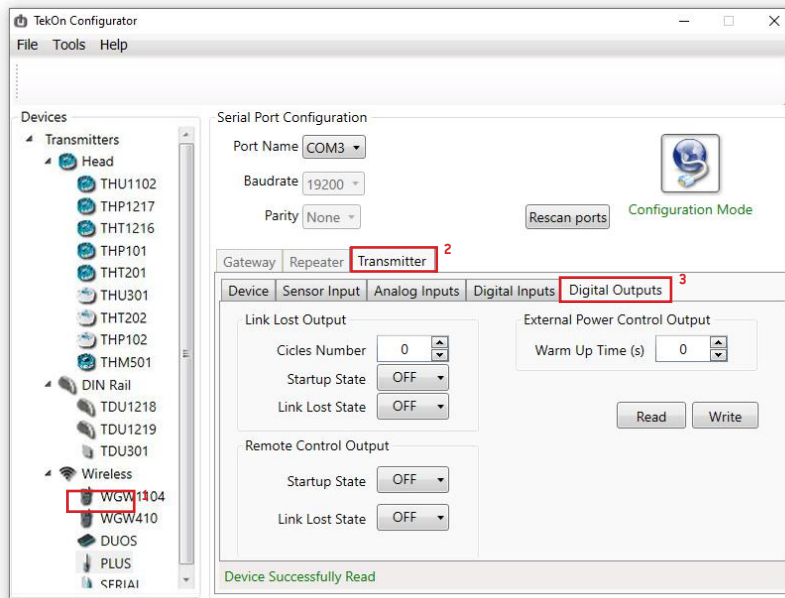

03

Link Lost Output


Output that outputs wireless connection state of the device.

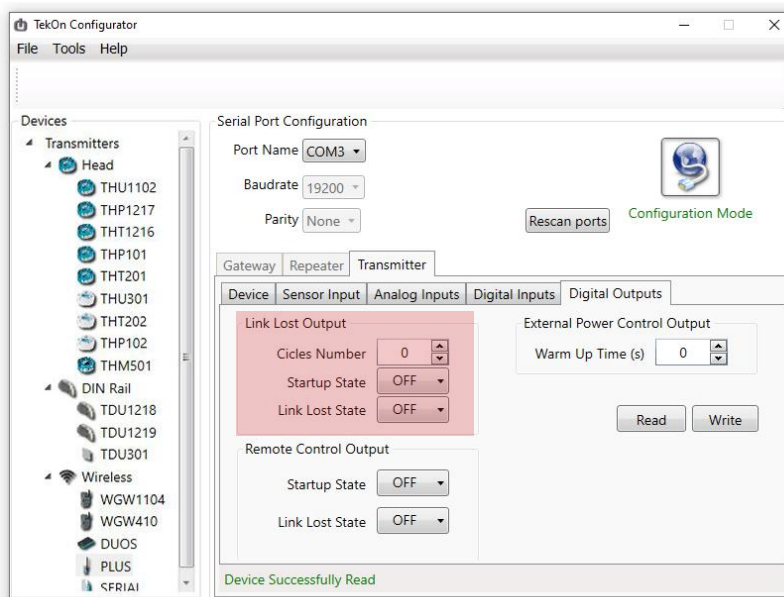

TWP-4AI4DI1UT TRANSMITTER DIGITAL OUTPUTS CONFIGURATION


03.1

Select *cycle number*, *start-up state* and *link lost state* and click on *Write* button.

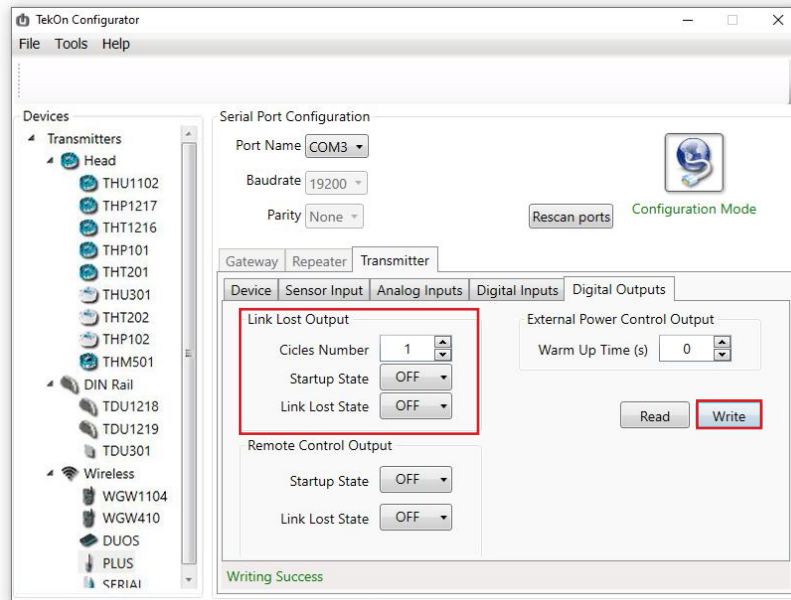

03.2

Exit configuration mode and verify setup by checking LEDs indicators..

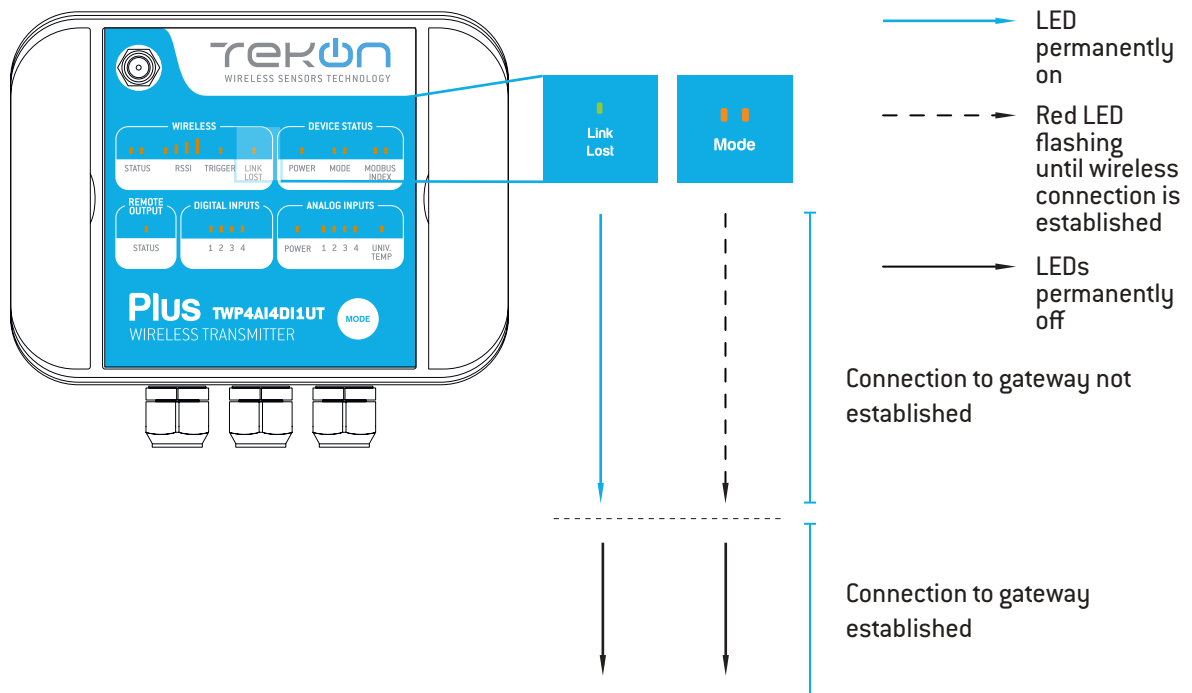

step
06

TWP-4AI4DI1UT TRANSMITTER DIGITAL OUTPUTS CONFIGURATION


04

Remote Control Output

Digital output remotely controlled by Gateway modbus protocol.


04.1

Define *Start-up state* and *Link lost state*. Click on *Write* button.

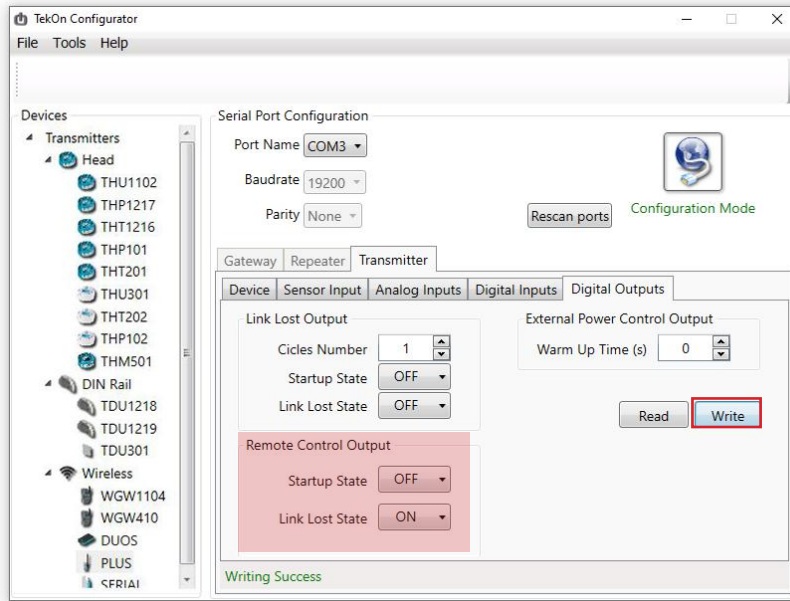

04.2



Exit configuration mode and verify setup by checking LEDs indicators.

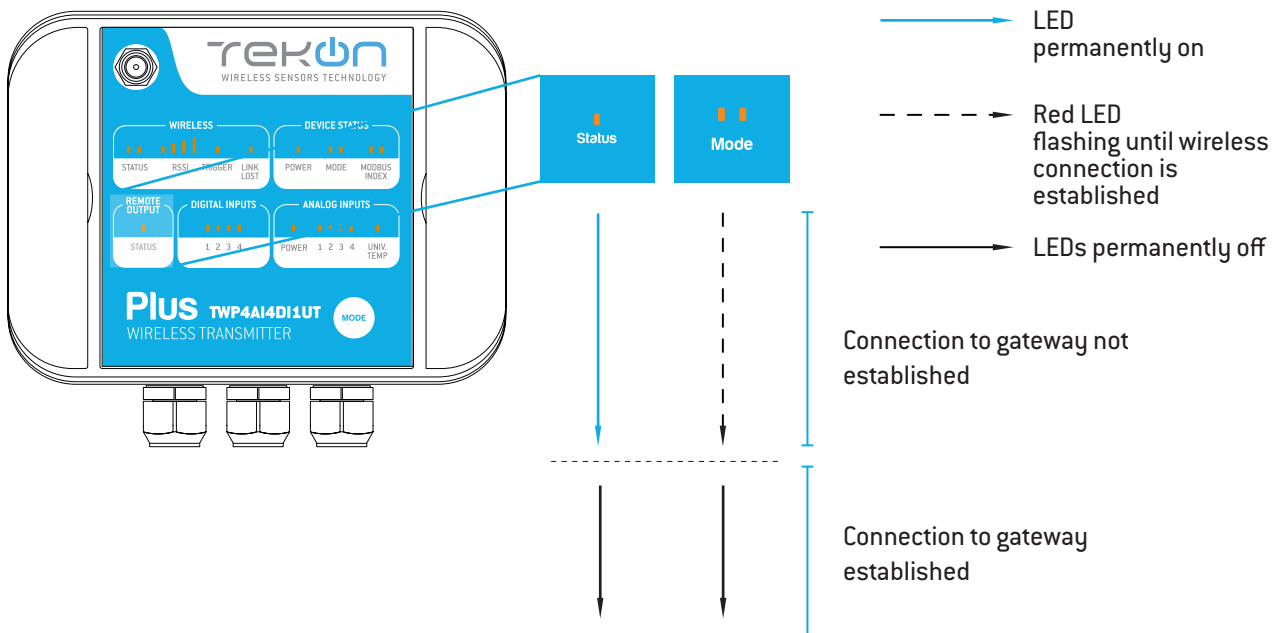

TWP-4AI4DI1UT TRANSMITTER DIGITAL OUTPUTS CONFIGURATION

04.3

Using the Tekon Configurator you can change the State of Remote Output by setting the modbus register on the gateway. The Gateway will send the information in the next time the transmitter performs a communication.

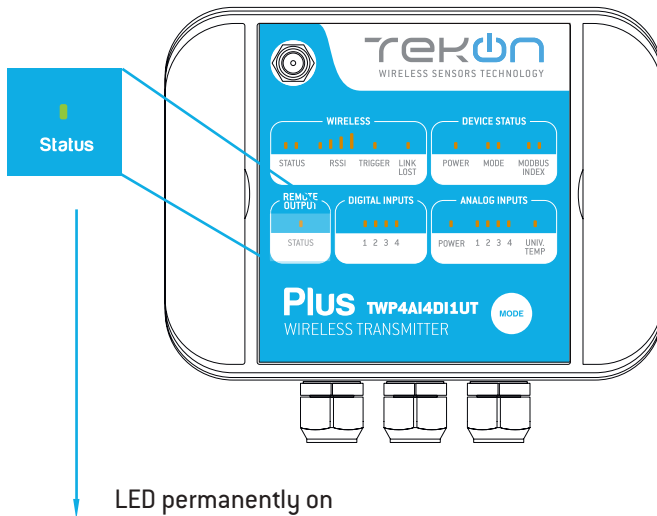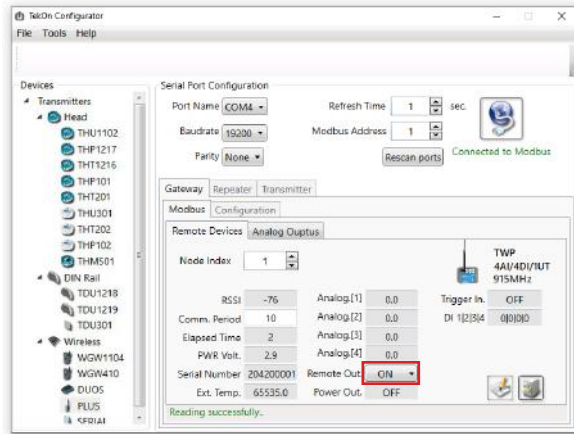

05

External Power Control Output


Time configurable output to power on an external device before data acquisition and transmission.

step
06

TWP-4AI4DI1UT TRANSMITTER DIGITAL OUTPUTS CONFIGURATION


05.1

Define *Warm up time* and click on the *Write* button.

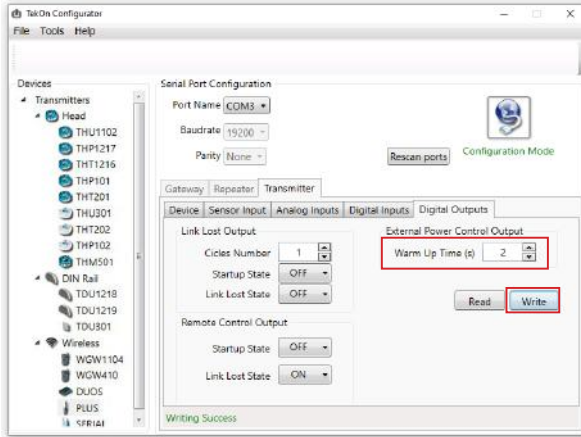

05.2

Exit configuration mode and verify setup by checking LEDs indicators.

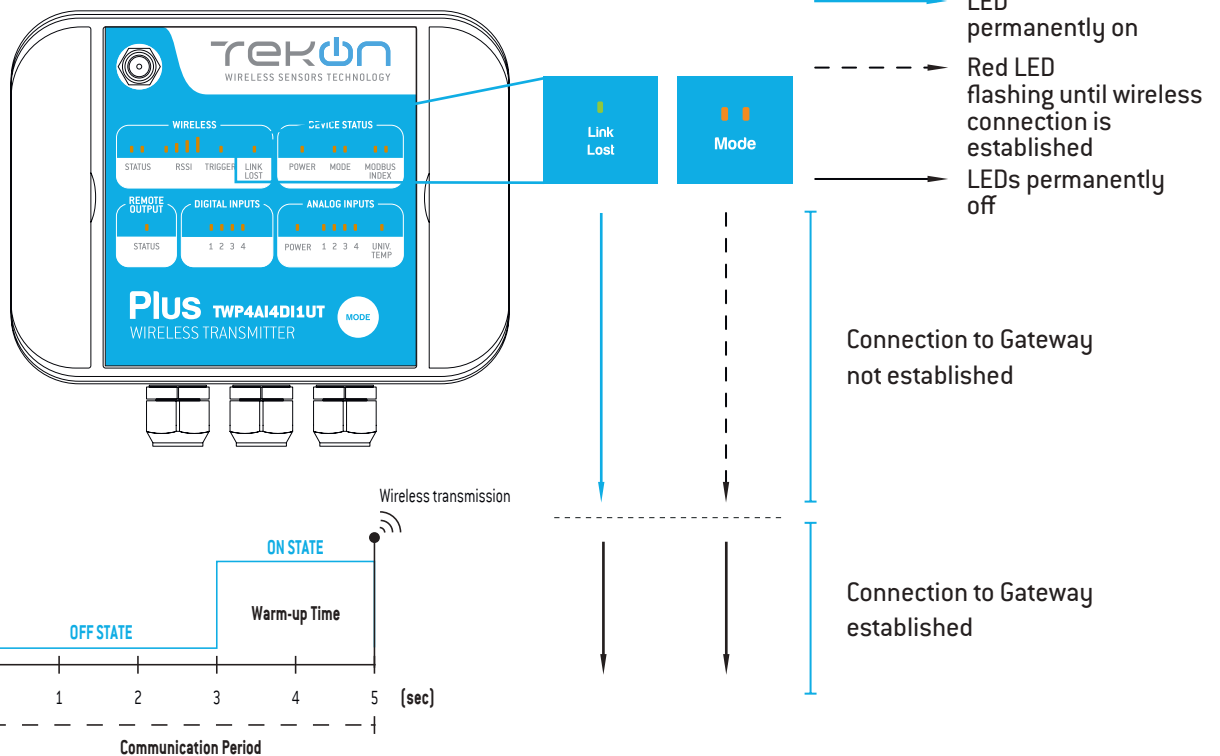

NOTE:

Diagram only applies after the transmitter and gateway are connected.


step
07

WGW420 GATEWAY ANALOG OUTPUTS CONFIGURATION

step
07 | GATEWAY ANALOG OUTPUTS

01 Follow steps 06 and 07 of the PLUS Wireless Gateway Configuration.

02 In *Tekon Configurator Software* select **PLUS** >> **Gateway** >> **Analog Outputs** menu

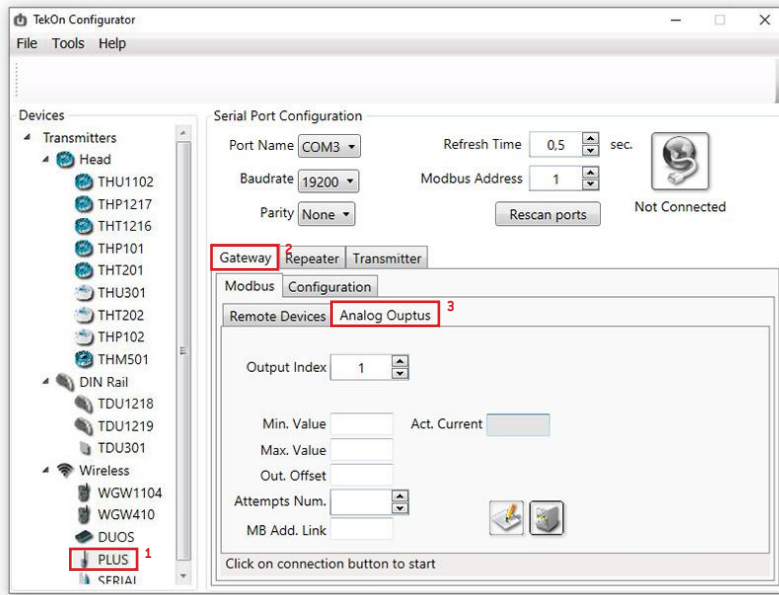


03 Considering the transmitter configuration with GTW Modbus Index=1, there is a Gateway Modbus Address Window corresponding to Modbus address window [0-19].

HOLDING REGISTERS - TRANSMITTERS DATA	
Description	Address
Serial Number	[Transmitter Modbus Index-1]x20+0
Transmitter Model	[Transmitter Modbus Index-1]x20+2
RSSI	[Transmitter Modbus Index-1]x20+3
Communication Period	[Transmitter Modbus Index-1]x20+4
Elapsed Time	[Transmitter Modbus Index-1]x20+5
Power Voltage	[Transmitter Modbus Index-1]x20+6
Data 0	[Transmitter Modbus Index-1]x20+7
Data 1	[Transmitter Modbus Index-1]x20+9
Data 2	[Transmitter Modbus Index-1]x20+11
Data 3	[Transmitter Modbus Index-1]x20+13
Data 4	[Transmitter Modbus Index-1]x20+15
FW Version Major Minor	[Transmitter Modbus Index-1]x20+17
FW Version Revision	[Transmitter Modbus Index-1]x20+18
HW Version Major Minor	[Transmitter Modbus Index-1]x20+19

NOTE: Transmitter analog input 1 data is received and stored at the Gateway Modbus address [9].

04


Link *Analog Output Index 1* (Gateway) to *Analog Input 1* (Transmitter) and configure MB Add Link according to the previous step. Set minimum and maximum values and click on *Write*

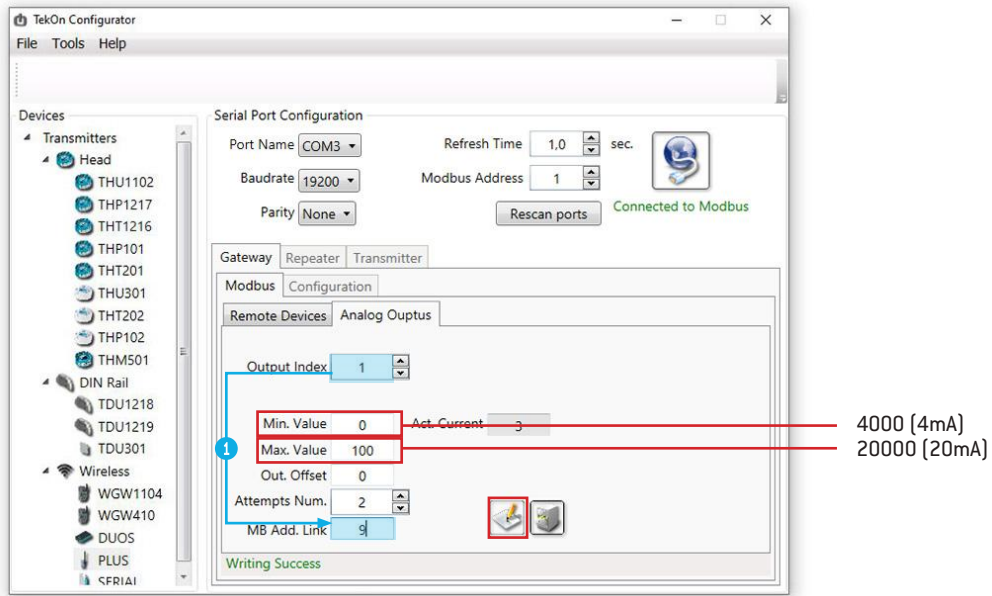

NOTE:

① Output index 1 is linked to modbus address [9], according to mapping table of step 03.

Modbus address double word (float 32) value is converted into 4..20 mA scale according to minimum and maximum defined values.

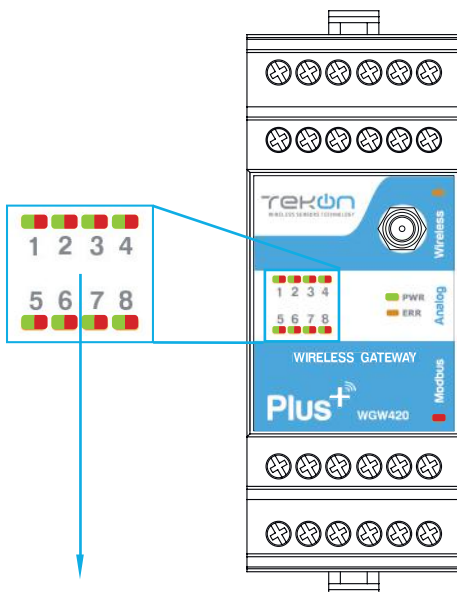

- 1** → Green led permanently on during a closed current loop
- 2** → Red led permanently on during an open current loop

step
08


WRP001 PLUS WIRELESS REPEATER CONFIGURATION

CONNECT AND CONFIGURE THE PLUS WIRELESS REPEATER

01 Loosen the 4 screws of the case and open it.



02 Connect a micro USB cable to the computer and then to *WRP001 PLUS Wireless Repeater*.

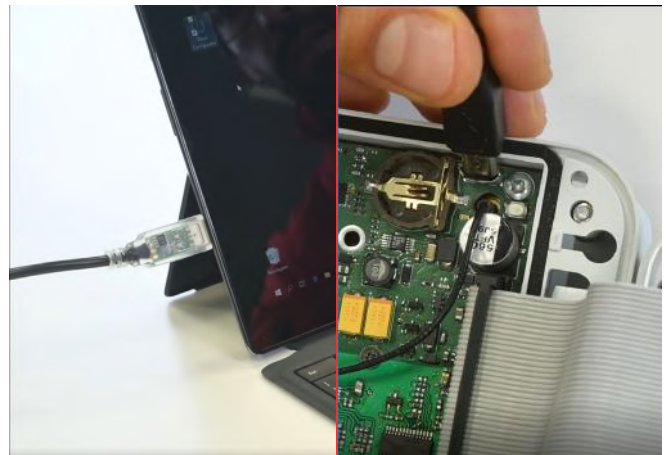


03 Open a new window of *TekOn Configurator Software* and select *PLUS >> Repeater* menu.

step
08

CONNECT AND CONFIGURE THE PLUS WIRELESS REPEATER


04

Click on *Rescan Ports* button.

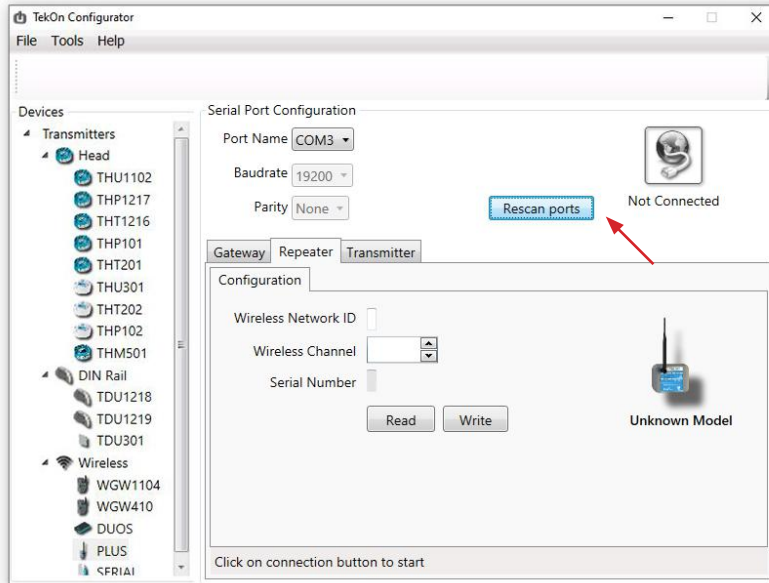

05

Select corresponding *Port name*¹.


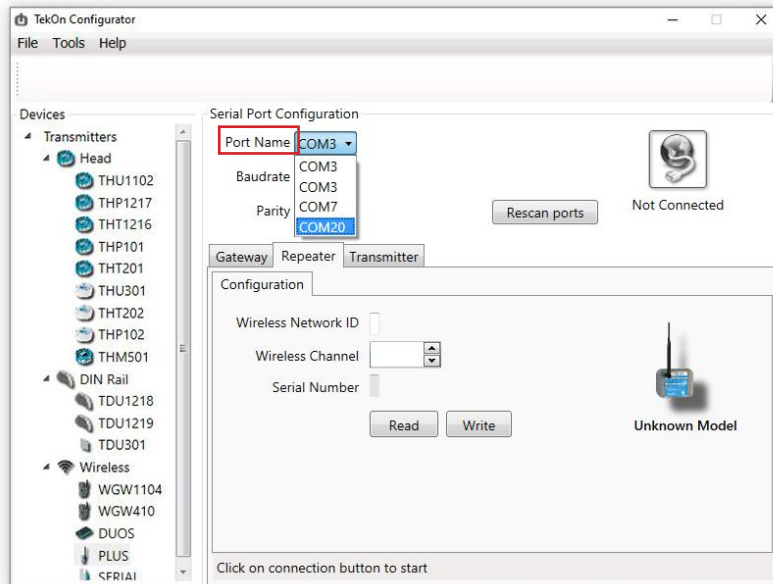


¹ You can check device's serial port name in "Device Manager" on Microsoft® Windows® operating system.

CONNECT AND CONFIGURE THE PLUS WIRELESS REPEATER

06

Click on *Configuration Mode* [🌐] button.

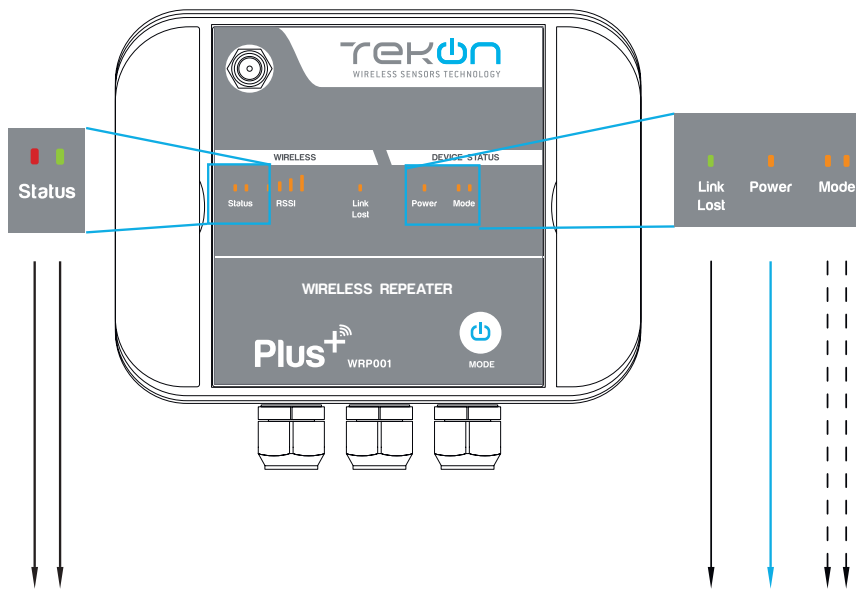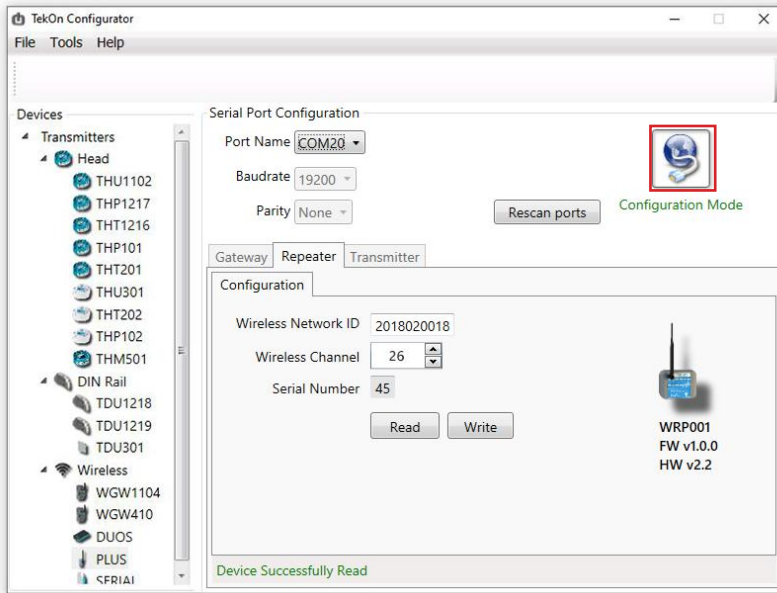

- LED permanently on
- LEDs flashing until wireless connection is established
- LED permanently off


step
08

CONNECT AND CONFIGURE THE PLUS WIRELESS REPEATER

07


Configure *Wireless Network ID* and *Wireless Channel* previously obtained from *Gateway*.

Click on *Write* button to update *Transmitter* settings.

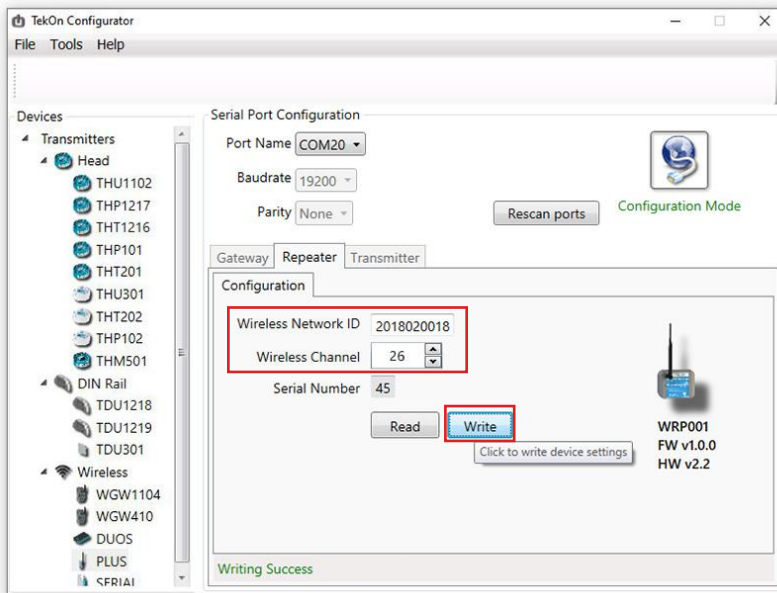


08

Click on *Configuration Mode* (🌐) button to exit setup and resume normal operating mode.

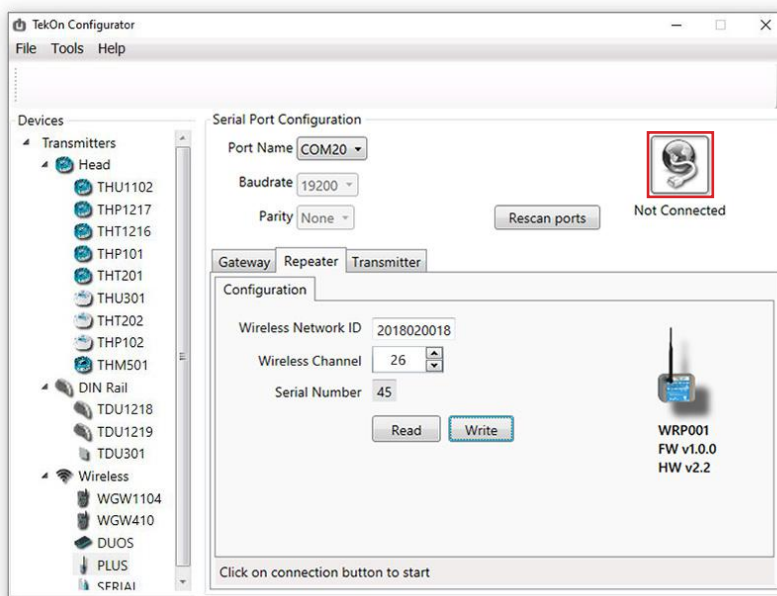

CONNECT AND CONFIGURE THE PLUS WIRELESS REPEATER

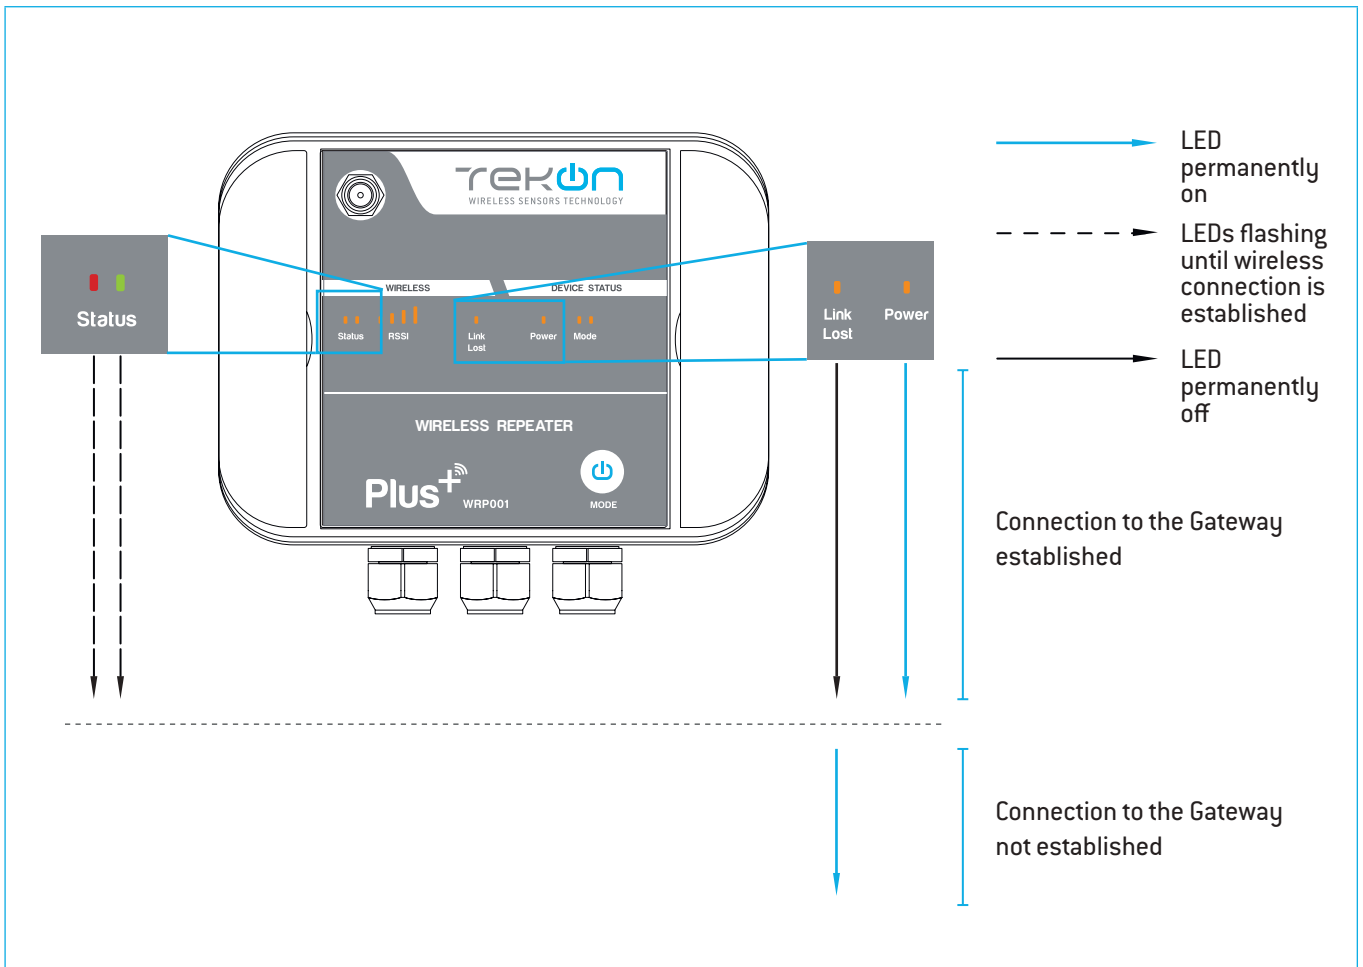

step
09
SITE SURVEY MODE


Refers to following devices: *TWP4AI Transmitter*, *TWP-4AI4DI1UT Transmitter*, *WRP001 Repeater* and *TWPH-1UT Transmitter*.

Site survey mode is a tool that allows a quick wireless signal strength evaluation at the site of installation. It doesn't require additional equipment or software.

01

Press and hold Mode (⏻) button until Status LEDs are permanently on and Mode LEDs flash.

RSSI LEDs indicate the signal strength.

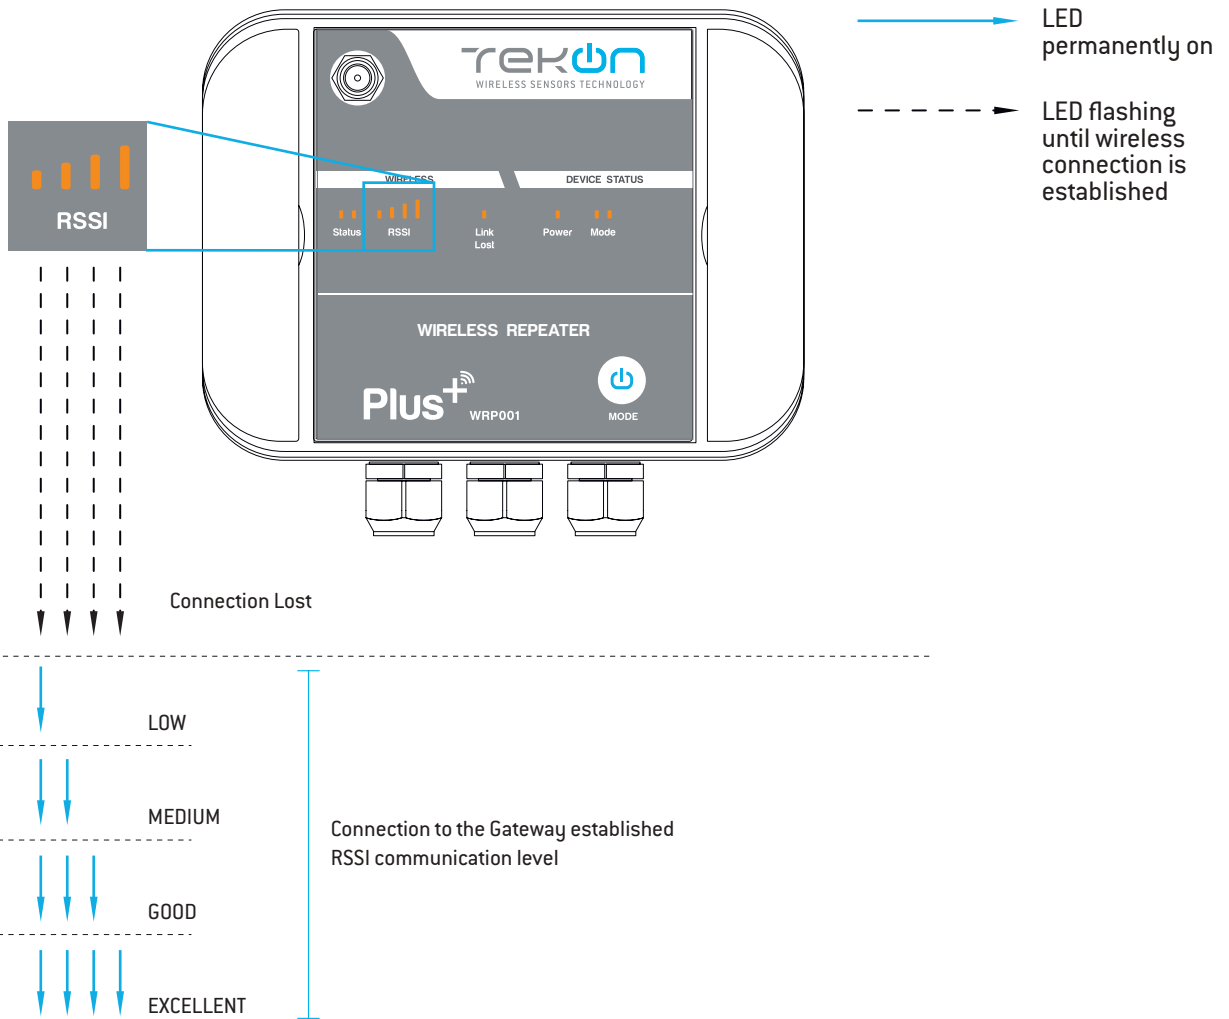

02

Press and hold Mode (⏻) button until RSSI LEDs switch off and device resumes normal operation mode.

TEKON ELECTRONICS

a brand of Bresimar Automação S.A.

Avenida Europa, 460
Quinta do Simão
3800-230 Aveiro
PORTUGAL

Sales

P.: +351 234 303 320
M.: +351 933 033 250
E.: sales@tekonelectronics.com

Technical Support

E.: support@tekonelectronics.com

